


Pairing your CRUSH Pro

- 1) Download the CRUSH app and sign up for your CRUSH account.
- 2) Open your CRUSH app, and navigate to "Account" on the bottom navigation bar.
- 3) Navigate to "My CRUSH Devices" and "Add new device."
- 4) On your CRUSH Pro, slide up the lock button on the side to turn it on.
- 5) Select "CRUSH_Pro" from the window labeled "Please select CRUSH device:."
- 6) Once paired you will be presented with the details of your CRUSH Pro.
- 7) Enter a name for your CRUSH Pro to distinguish it from others. Example, "Penny's CRUSH_Pro."
- 8) Enter your WiFi credentials.
- 9) Save.

Once you have saved the information for your CRUSH Pro you will find it in the list of "My CRUSH Devices."

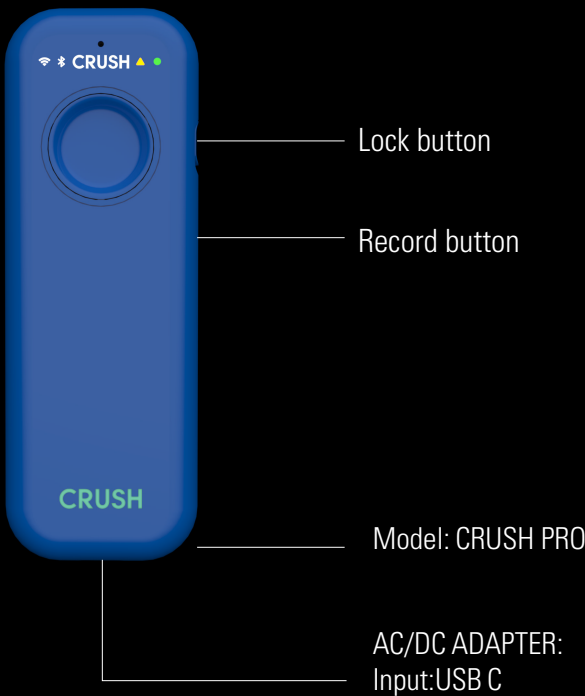

FCC CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure and SAR Statements:
The CRUSH PRO has been tested for body-worn Specific Absorption Rate (SAR) compliance. The FCC has established detailed SAR requirements and has established that these requirements. RF Exposure Information The radio module has been evaluated under FCC Bulletin C95.1 and IEEE 1528 and found to be compliant to RF Exposure from radio frequency devices. This model meets the applicable government requirements for exposure to radio frequency waves. The highest reported SAR level for usage near the body (0mm) is 1.108 W/kg.

Removing a CRUSH Pro

- 1) Open your CRUSH app, and navigate to the "Account" on the bottom of the navigation bar.
- 2) Navigate to "My CRUSH Devices" and find the device you would like to remove by choosing it.
- 3) While you are in the screen for your device, hold down the record button on your CRUSH Pro for five seconds to place the device into pairing mode.
- 4) While in pairing mode, choose the "Connect" button on the top right of the device screen.
- 5) When connected, choose "Delete" on the bottom of the screen.
- 6) Your device is now available to be used on another account.

Updating your CRUSH Pro

- 1) Open your CRUSH app, and navigate to the "Account" on the bottom of the navigation bar.
- 2) Navigate to "My CRUSH Devices" and find the device you would like to remove by choosing it.
- 3) While you are in the screen for your device, hold down the record button on your CRUSH Pro for five seconds to place the device into pairing mode.
- 4) While in pairing mode, choose the "Connect" button on the top right of the device screen.
- 5) When connected you can update the name of your device along with any WiFi settings.