


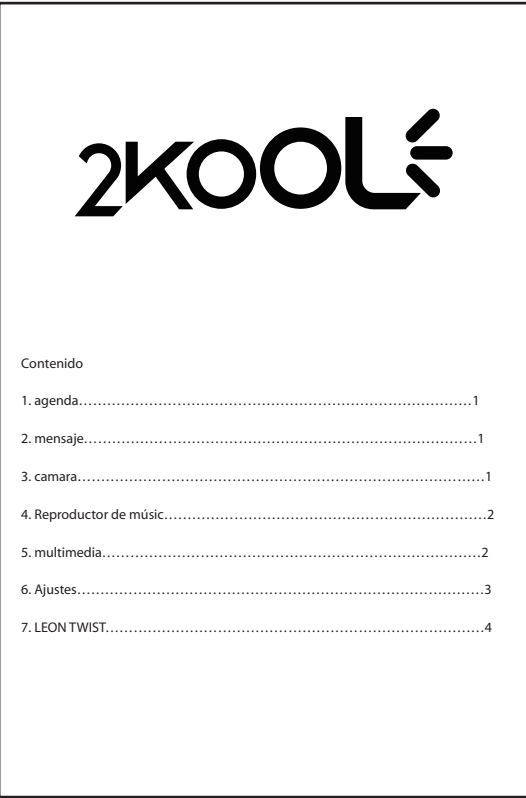

Contents

1. Phonebook.....

2. Messages.....

3. Camera.....

4. Audio player.....

5. Multimedia.....

6. Settings.....

7. LEMON TWIST.....

1. Phonebook

In the phonebook, you can quick search, search contact, add number, copy all mark delete, caller groups, extra numbers, settings, backup contact, speed dial.

2. Messages

2.1 Write message

You can write Text message.

2.2 Inbox

There are SIM1 and SIM2 inbox. Include in Text message inbox. If the inbox has no message, there will be a prompt "No message".

2.3 Outbox

You can check the messages which one is unsent.

2.4 Drafts

There are SIM1 and SIM2 drafts.

2.5 Templates

When edit message, you can add this clauses Please call me! Where are you now? Thank you! Wait a minute! I am busy today! and so on.

2.6 Voice mail server

Voice mail service, you can set the language box number.

2.7 Security inbox

Safety box, confidential information can exist here.

2.8 Message settings

You can set profile setting, common settings, memory status, preferred storage.

Note: the functions of info service and voice mail are both supplied by the operator. please contact with your operator.

3. Camera

In camera, Press OK key to take picture. Press the left function key to go to the options interface as the followings: Photos: view the pictures Camera settings Image settings White balance : There are 6 options. Scene mode : Auto mode or night mode. Effect settings : At previewing status, press 3 to switch. There are 6 options. Storage : To phone or memory card.

4. Audio player

In audio player, Press OK key to play music. Press MP3 key to stop music. Press left/right key to change the volume. After choosing music settings, there are the

Following operations: Music playlist can add songs. Repeat: you can repeat playing.

There are 3 options: close, single repeat, all repeat. Shuffle: set the playing order. You can choose to open or close this function. Background play: choose this function; you can play the music when in other operations.(Except camera operation and record operation.) Note: the player only put the music in My Music to the list.

5. Multimedia

5.1 Image viewer

View: view the photos. Image information: you can view the details about photos. Browse style: list style or matrix style. Send: via Bluetooth. Use as: Wallpaper/Screen saver/Power on or off display. Rename: rename the photos. Delete: delete the selected photo. Delete all files: delete all photos. Sort by: you can arrange the photos order according to name, type, time, size or none (the first record). Storage: You can choose phone or Memory card.

5.2 Video player

After entering the film list, you can: Select the file by up/down key, then you press options to go to the interface: play, send, rename, delete, delete all files, sort by or storage. Click the film file to go to the option interface. When it is ready to play, Press OK to play to play or pause it. Press up or down direction key to adjust the volume. Press left or right to control the playing speed. During video playing, you can adjust the speed by left/right key, and to pause/continue by OK key. You can press "1" to switch full screen.

5.3 Camcorder

You can enter the Camcorder through multimedia. After entering Multimedia, at the previe window. Press left/right key to adjust EV parameter. Press up/down key to adjust the enlarging fold. Press ok key to begin recording video. Press to stop recording for a while, then press to continue.

5.4 Recorder

Press left function key, you can make a new record or play recording. Press up/down key to change the volume when play the recording.

5.5 FM radio

Input headset then you can receive the FM radio. Press OK key to play, Press up/down key to change the volume. Press left function key, Channel list: After setting 9 channels, you can switch among them by pressing the numeric key. Manual input:

Input the channel you want Auto search: Auto search the channels and set them as a list. Settings: To set about background, Loud speaker. Auto search: Auto search the channels and set them as a list. You can also put it outside, background playback and recording and so on.

6. Settings

6.1 Phone settings

Time and date Schedule power on/off: you can set 4 different times on or off. Language: to choose a language for your headset. Pref. input method: choose a default input method. Display characteristic on idle interface: Wallpaper: choose the wallpaper for the idle mode Power on display: choose the flash when power on Power off display: choose the flash when power off Shortcuts: Add number, search contact, Caller group, write message, memory s status, preferred storage, greeting text, pref. Input methods, alert type. Dedicated key: up key is camera, down key is calendar, left key is write message, right key is user profiles.

6.2 Dual SIM settings

There are 4 models: dual SIM open, only SIM1 open, only SIM2 open and flight mode.

6.3 Network settings

SIM1 network s settings Network selection Preferential network: save some preferential network SIM2 network settings: The detail is referred to SIM1 network setup.

6.4 Security settings

SIM lock: You can lock the SIM to avoid being illegally used. Fixed dial If the SIM card supports this function, you can set the certain dialing then you can only dial the number on the list. Enter "fixed dial", you can set: Format: open/close this function (PIN2 code is needed). The list: input the numbers. Note: to open/close this function, the PIN2 code is needed. Please contact with your operator to get it. Barred dial: set the numbers you can not dial. Phone lock You can lock the handset to avoid being illegally used. You have to input the handset password each time you power on the handset. Note: The default password is 1234; please change it to your personal password as soon as possible. Auto keypad lock Set the waiting time for locking keypad. After setting, the keypad will be locked automatically. Change the password: Needing PIN, PIN2 code and the password of the handset lock. Note: some functions need the support of the operator.

6.5 Call settings

6.5.1 SIM call settings

Call waiting: open or close this function Call divert Call barring Line switch: line switch form 1 to 2. The default is line 1.

6.5.2 SIM call settings

The detail is referred to SIM1 call settings. Call time reminder: you can choose off, Single, Periodic, when you are calling that can remind you by a voice. Auto redial: when you set this function, each time you fail to get through, it will redial automatically. Black list Mode: on/off Black list numbers: you can edit black numbers. IP dial: enter IP number and press OK to confirm the settings, and then you can cancel or edit it.

6.6 Restore factory settings

Input the password of the handset lock, you can set the parameter to factory default. Note: The default password is 1234;

7.LEMON TWIST

After the card can surf the Internet.

Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

Measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information-

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, tests for each phone are performed in positions and locations as required by the FCC. For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 5mm from the body. Non-compliance with the above restrictions may result in violation of RF exposure guidelines.