


product description

KC-8236 2.4G gamepad is a multifunctional gamepad that supports PC,PS3,Android TV and Android phone tablet (a type-c adapter needed when connect with Android mobile and tablet)

product description

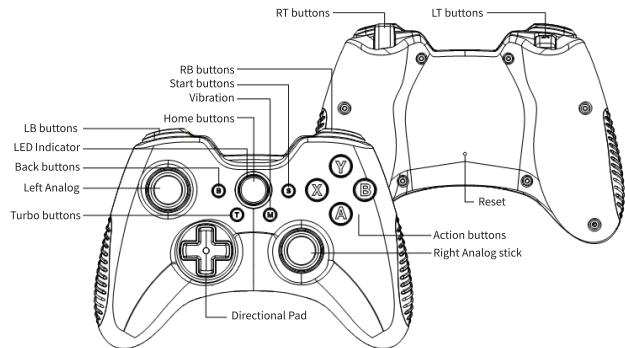

Product parameters

Battery capacity	600MA	Working current	≤20MA
Battery life	≥8 hours	Working voltage	3V

Pair and connect

PC Connect PC

Plug the receiver into the USB port of the computer, click HOME button when the gamepad is off, the 4 LED indicators flash. Pairing successfully when the led indicator stay on and the controller vibrate. The default mode is X-input mode(LED1 LED2 stay on). Press the back+start button for two seconds to switch to Dinput mode(LED1 LED4 stay on), press the back+start button for two seconds again to switch to Android mode (LED3 LED4 stay on)

Connect to PS3 console

Connect the usb receiver with PlayStation3 console, click HOME button when the gamepad is off, the 4 LED indicators flash. Pairing successfully when the led indicator stay on and the controller vibrate.

Connect to Android phones and tablets

Connect the usb receiver with the OTG adapter and then plug the OTG adapter into your mobile/tablet, click HOME button when the gamepad is off, the 4 LED indicators flash. Pairing successfully when the led indicator stay on and the controller vibrate.

Trubo and Auto Turbo Function Setting

- 1.Click(first time) any button that you want to set with turbo function and Turbo button at the same time, TURBO set successfully when the LED indicator flash 1 time and controller vibrate 1 time.
- 2.Click again that button which you want to set with turbo and Turbo button at the same time, AUTO TURBO set successfully when the LED indicator flash 1 time and controller vibrate 1 time.
- 3.The 3rd time click that button which was set with Turbo function and Turbo button at the same time, to clear the Turbo function for single button, clear successfully when the LED indicator flash twice and controller vibrate twice.
- 4.Clear Turbo function for all buttons: Click and hold Turbo button and Back button for above 2 seconds at the same time, clear successfully when the LED indicator flash twice and controller vibrate twice.

Trubo speed setting

Click and hold turbo button , right joystick up and down to adjust turbo level, 3 Levels available, 20 times/second/12 times/second/5 times/second. The default setting is 12 times/second

FCC Caution.

(1)§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.