SAFETY PRECAUTIONS AND WARNINGS

Warning



- When using, please ensure that each light strip connector is equipped with an O-ring. And the connectors of the headlights and light strips are fastened in place. Do not forcefully pull on the headlight wire and light strip wire.
- The waterproof level of Nose Searchlight and LED Strip Lights is IPX7, and they cannot be immersed in water for a long time. The immersion depth is ≤ 1m, and the immersion time is ≤ 0.5 h.
- Before each use of the Nose Searchlight, check and confirm that the USB plug must be tightly covered to prevent water from entering the USB port and damaging the device.
- Check if the battery is sufficient before each use.
- The wire of Nose Searchlight should not be used to connect other products to avoid damage or danger.
- In emergency situations, the LED of Nose Searchlight can be switched to an SOS flashing light for help.
- To ensure safety, wear a safety vest or life saving equipment on site.
- When carrying this device during transportation or on an aircraft, please carry it in accordance with relevant regulations and keep it properly.
- ♦ Keep equipment away from gas, oil, rubber solutions, or other volatile or acidic substances.
- The charging power supply should use 5V 3A or 9V 1.8A. Charging with a current higher than the recommended value may cause issues with the charging and discharging performance, mechanical performance, and safety performance of the battery, and may lead to heating or leakage.
- Users should always charge the Nose Searchlight in an open area away from flammable materials, liquids, and surfaces.
- Do not throw the Nose Searchlight into the fire.
- ◆ Do not put the Nose Searchlight in a microwave, high-pressure container, or induction cooker.
- Unauthorized repair of this equipment is not allowed to avoid leakage, damage, fire or electric

shock accidents. If there are any abnormalities, please stop using and contact after-sales service.

FCC ID: 2AVFRRC-24GL

FCC statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with radio frequency exposure limits set forth by the FCC for an uncontrolled environment.

FCC Caution:

Changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.


1. TECHNICAL SPECIFICATIONS

	Item	Parameter
GLOW	Model	ALS-24GL
Ambient	Waterproof	IPX7 (short-term immersion depth < 1m/30
Light	grade	minutes)
System		2.0 H (Headlamp white strong
	Endurance	light+light strip white light 100%
		continuous on)
		4.5 H (Headlamp white strong
		light+light bar white light breathing
		mode)
		5.0 H (Headlamp white strong
		light+light bar color changing breathing
		mode)
		6.0 H (Headlamp white highlight+light
		bar party mode)
	Model	NS-24GL
	Weight	496 g
	Size	115 x 78 x 118 mm
	Charging	
	voltage	DC 5V 3A or 9V 1.8A
	Charging	
	current (type-	
	C)	
GLOW	Charging	
Nose	voltage	DC 5V 2.4A
Searchlight	,current	


	(USB)	
	Charging	about 5.0 H (5V 3.0A)
	duration	
	(type-C)	
	Discharge	
	duration	About 3.5H(5V 2.4V)
	(USB)	
	lithium	4500mAh 11.1V
	battery	
	Rated	
	capacity	
	Power	Max 2.9W
	Illumination	2m
	distance	
GLOW	Model	LSL-24GL
LED Strip	Weight	170 g X2
Lights	Length	2.8m LED light strip section+0.3m extension line X2
	Power	Max 13.8W 12V X2
GLOW	Model	RC-24GL
Remote	Weight	15 g(Without battery)
Control	Size	85 x 35 x 7 mm
	Battery	1 X CR2032 3V (Not included in the packaging, must be
	specifications	purchased by oneself)
	Handling	Distance from Nose Searchlight ≤ 8m
	distance	

2. Nose Searchlight installation


Step 1. Tighten the (b) nuts at both ends of the (a) fixing studs.

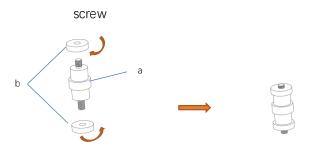


Step 2. Screw the (a) fixing stud short screw end into the (c) headlight handle screw hole, and tighten the tightly fitting (b) nut short screw end.

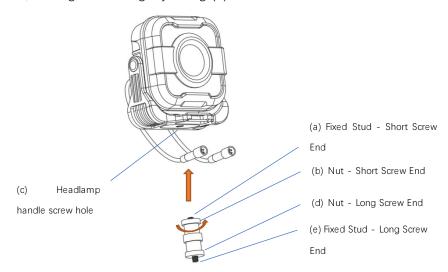


Step 3. Screw the (b) fixing stud long screw end into the (c) base screw hole on the slurry board, adjust the headlight angle, and then tighten the bottom (a) nut long screw end to secure the headlight.

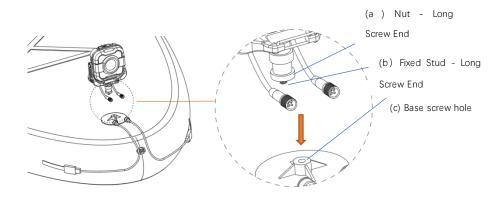


Step 4: Check that there should be one (b) O-ring seal installed on each of the two light strip connectors. Align the arrow symbol " on the (c) light strip connector with the (a) headlight strip connector and insert it to the end. Then manually tighten the (d) connecting nut to the end until it cannot be tightened.

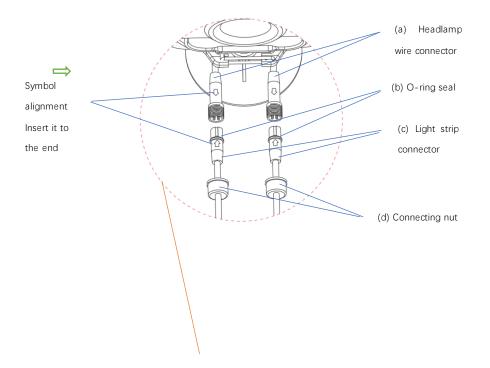

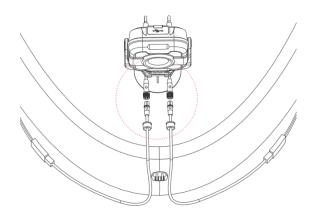


Headlamp wire connectorX2



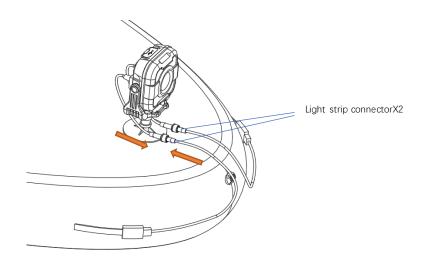

1. The connector of the light strip must ensure an O-ring seal, and the connecting nut of the light strip must be tightened to the end to ensure reliable waterproof sealing.


Step 5. Clip the light strip wire into the (a) wire holder.

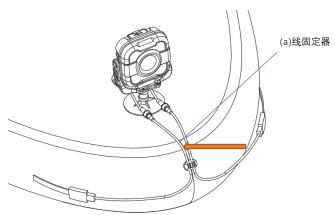

3. Remote control installation

Step 1. Please prepare 1 CR2032 3V battery (remote control battery not included in the packaging).

Step 2. Remove the remote control battery holder, insert the CR2032 battery, and then reinstall the remote control.

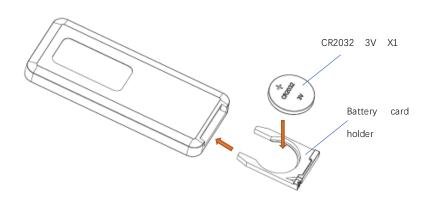

4. Matching headlights and remote control


In the case of multiple BT-24GL near the pairing of headlights and remote controls, to avoid mutual interference, one-on-one control can be achieved through pairing operations:

Step 1. Press and hold the button on the headlight for 3 seconds at the same time, and the headlight power light will turn on a red light, entering pairing mode.


Step 2. Press any button on the remote control to pair, and after successful pairing, the battery red light will turn off. If pairing is not successful within 10 seconds and the battery red light goes out, please start pairing again from step 1.

5. Nose Searchlight Introduction

LED light

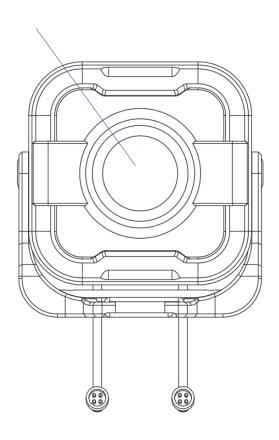


Electricity level

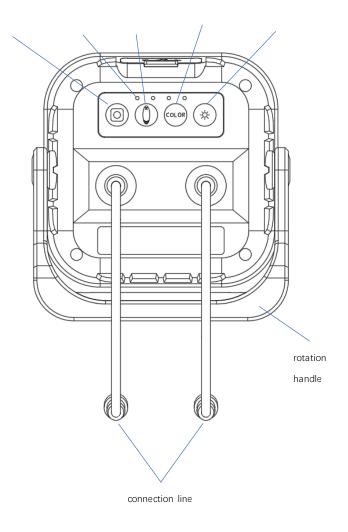

USB output port

Type-C charging port

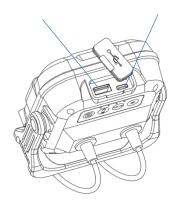

5.1

On/Color Switch Button:

- Press and hold for 1.5 seconds to turn on/off the headlight LED. When the headlight LED is turned on, it defaults to white highlight.
- 2) Click on the cycle to switch between white highlight → white dim light → warm highlight → warm dim light → warm white highlight → warm white dim light → red highlight → red SOS → white highlight →.
- 5.2 switch/mode switch button:
- 1) Press and hold for 1.5 seconds to turn on/off the LED light strip. When the LED light of the light strip is turned on, it defaults to a continuous white light.
- 2) Click to cycle through the light bar mode, which consists of 4 modes. The cycle sequence is: long light mode → monochrome breathing mode → color changing breathing mode → party mode → long light mode →.
- 5.3 light color switch button:


When passing through the light strip channel:

- 1) When the light bar is in the long light mode:
- a) Click to cycle through the LED color of the light bar, with a total of six colors.
- b) The order of clicking on the light color cycle is: white \rightarrow red \rightarrow blue \rightarrow orange \rightarrow purple \rightarrow yellow \rightarrow white \rightarrow .
 - 2) When the light bar is in monochromatic breathing mode:
- a) When the light bar is in monochromatic breathing mode, click to cycle and switch the LED light color of the light bar, with a total of six colors.
- b) The order of clicking on the light color cycle is: white \rightarrow red \rightarrow blue \rightarrow orange \rightarrow purple \rightarrow yellow \rightarrow white \rightarrow .
- brightness adjustment button:

When the light bar is in the long light mode:

- a) When turning on the LED light strip, it defaults to 100% brightness. Click on the cycle to switch brightness $100\% \rightarrow 20\% \rightarrow 40\% \rightarrow 60\% \rightarrow 80\% \rightarrow 100\%$ \rightarrow .
- battery indicator: 5.5

Second Fourth light light

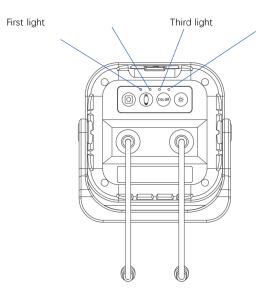

1) Charging state battery indicator

When the charging power is connected to the headlight type-c charging port, the built-in lithium battery of the headlight will be charged, and the battery indicator light will flash to display the current battery level. After the battery level is fully charged, it will automatically stop charging

	The first blue light flashes	Battery level less than 25%
Nose Searchligh	The first blue light flashes, the first blue light is constantly on, and the second blue light flashes	Battery level 25%~50%
t charging	The first and second blue lights remain on, while the third blue light flashes	
	The first, second, and third blue lights remain on, while the fourth blue	Battery level 75%~99%

	light flashes	
头灯充满电	Four blue lights stay on for a long	Battery level
	time	equal to 100%


2) Usage status battery indicator

Note:

- 1. When in sleep mode, all four battery indicator lights do not light up. Click
 - the button, and the battery indicator lights up. When not working, the battery indicator light will turn off for about 10 seconds and enter sleep mode.
- 2. When the LED light of the headlight or the LED light of the light bar is turned on, the headlight power indicator light will remain on, displaying the remaining power.
- 3. When the external device is plugged into the headlight USB output port through a USB cable, the battery indicator light will light up and the product will start power transmission.

Working	The first blue light flashes	Battery level less than 5%	
	The first blue light remains on	Battery level 5-25%	
	The first and second blue lights	Battery level 25-50%	
	are constantly on		
	The first, second, and third blue	Battery level 50-75%	
	lights are always on	pattery level 30 75%	
	The first, second, and third blue	Battery level 75-100%	
	lights are always on	Jactery level 10 100%	

6. Introduction to Remote Control

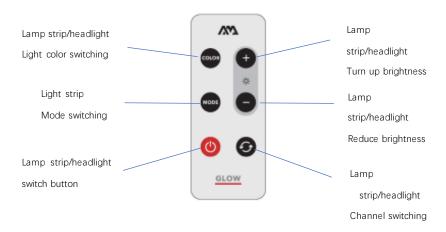

Note:

When the product light strip and headlight are working simultaneously, the remote control prioritizes the control of the light strip.

6.1 witch button:

Click to control the light on/off of the current channel (light

bar or headlight).

Note:

- 1. 1. When both the headlights and light strips are not on, use the remote control to turn on the lights. To do so, press and hold the remote control
- for 1.5 seconds. At this time, the default light strip LED will be turned on and the white light will remain on .
- 2. When the light bar and headlights are on simultaneously, click to close the current channel and then automatically switch to another lit channel.
- 6.2 Dight bar/headlight channel switch button:

Click to cycle between the light bar channel and the headlight channel.

- 1) When the light strip is on separately :
 - a) Click on the headlight to quickly flash two white lights, indicating that you have switched to the headlight channel.
 - b) Press the buttor. to turn on the white highlight of the headlights within
 - 10 seconds, and if the button is not pressed within 10 seconds, the channel will automatically switch back to the light bar channel.
- 2) When the headlights are on separately:
- a) Click on the light bar to quickly flash two white lights, indicating that you have switched to the light bar channel.
 - b) Press the buttor. to turn on the light bar within 10 seconds, and the white light will stay on for a long time. If the buttor is not pressed within 10 seconds, the channel will automatically switch back to the light channel.

- 3) When the light strip and headlights are on simultaneously:
- a) Click to switch channels between light bars and headlights 。
- b) When switching, the LED light of the corresponding channel will quickly flash twice, indicating that it has been switched to the corresponding channel. After switching, the channel will be controlled.
- 6.3 Light bar mode switch button:
 - 1) Click to cycle through the mode of the light bar.
- 2) The cycle sequence is long light mode \rightarrow breathing mode \rightarrow color changing mode \rightarrow party mode \rightarrow long light mode \rightarrow .
- 6.4 Light bar/headlight color switch button:
 - 1. When passing through the light strip channel:
 - 1) When the light bar is in the long light mode:
- a) Click to cycle and switch the LED color of the light bar, with a total of six colors;
- b) The order of clicking on the light color cycle is: white \rightarrow red \rightarrow blue \rightarrow orange \rightarrow purple \rightarrow yellow \rightarrow white \rightarrow .
 - 2) When the light bar is in monochromatic breathing mode:
- a) Click to cycle through the LED color of the light bar, with a total of six colors;
- b) When clicking on the headlight channel, the order of the light color cycle is: white \rightarrow red \rightarrow blue \rightarrow orange \rightarrow purple \rightarrow yellow \rightarrow white \rightarrow .

2. When in the headlight channel:

Click on the cycle to switch between white highlight \rightarrow white dim light \rightarrow warm highlight \rightarrow warm dim light \rightarrow warm white highlight \rightarrow warm white dim light \rightarrow red highlight \rightarrow red SOS \rightarrow white highlight \rightarrow .

6.5 壁 Light Bar/Headlamp - Turn Up Button:

1) Light bar channel - in long light mode:

Click to increase brightness and switch between 20% \rightarrow 40% \rightarrow 60% \rightarrow 80%

 \rightarrow 100% brightness. The function does not cycle.

2) When in the headlight channel:

Click to adjust the brightness of three levels (low medium high) without cycling the function.

6.6 Light bar/headlight - decrease brightness button:

1) Light bar channel - in long light mode:

Click to decrease brightness and switch between 100% \rightarrow 80% \rightarrow 60% \rightarrow 40%

ightarrow 20% brightness in sequence. The function does not cycle.

2) When in the headlight channel:

Click to adjust the brightness of the three levels (high medium low) without cycling the function.

7. Headlamp charging and discharging

7.1 Headlamp charging

Using a DC5V 3A (max 4A) power supply to connect to the headlight type_C charging port, for charging the built-in lithium battery, the battery indicator light flashes to display the current battery level. After the battery is fully charged, it automatically stops charging.

7.2 Headlamp output power supply

When the external device is plugged into the headlight USB output port through a

USB cable, the battery indicator light is on, and the product starts to power up and output DC5V 2.4A.

8. Trouble Shooting

PROBLEM	CAUSE	SOLUTION
The remote control is	1. The remote	1. Replace with a new battery;
not working properly	control battery is dead;	2. Remote control operation with a
	2. The control distance is	distance of ≤ 8m from the headlight
	too far;	
The LED light of the	1. The light strip	1. Reconnect the light strip connector
light strip does not	connector is not installed	in place;
light up	in place;	2. Charge the headlights and use them;
	2. The headlights are	3. Replace with a new light strip;
	dead;	
	3. The light strip is	
	damaged;	
The battery indicator Before disassembling the		Turn off the light bar channel
light remains on	headlight, the light strip	
after the headlight is	channel was not closed	
removed		

9. Storage

- Do not store the product in environments such as high temperature, excessive dryness and humidity, direct sunlight, and flying dust. Adverse environments can cause damage to electronic equipment, and the storage temperature should not exceed 45 °C (113 °C °F).
- Do not over-discharge.

- a. Charge the battery after each use.
- b. Recharge the battery every four months even if it hasn't been used.
- c. Over-discharge during storage may damage the battary and reduce its lifetime.
- After each use, please dry the nose searchlight and the LED strip lights to avoid damage to the electronic components.
- When not in use for a long time, please remove the battery from the remote control.
- The original packaging is recommended for storage.

10. Disposal And Environmental Protection



The battery must be disposed properly according to local regulations. This mark indicates that the product should not be disposed with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. Information on disposal can be obtained from your local authorities. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased for environmentally safe recycling.