

3+

RC TRACTOR TOY

Instruction Manual

CAUTION:
ADULT ASSEMBLY REQUIRED.

WARNING:
CONTAINS SMALL PARTS
Not for children under 3 years.

CONTENTS

Installing component for trailer

Trailer X1

Remote X1 Cow X1 Sheep X1

Cylindrical Haystack X2 Rectangular Haystack X2 USB cable x2 Battery x2

HOW TO USE

IMPORTANT! Please following strict accordance with this instruction manual while operation the product.

NOTE: Due to potential power loss during transportation and prolonged storage, the lithium-ion battery requires a full charge before initial use.

INSTALLING THE TRACTOR'S BATTERIES

- Locate the battery compartment located on the bottom of the tractor.
- Using a screwdriver, remove the screw from battery compartment.
- Open the battery compartment door and insert 1 "Lithium-ion battery" (Pic. 1).
- Using a screwdriver, attach the battery compartment door back onto the bottom of the tractor.

BATTERY CONNECTION WITH TRACTOR CAR PUT THE BATTERY INTO BATTERY COMPARTMENT AND SCREWED COVERS TIGHTLY

INSTALLING THE REMOTE'S BATTERIES

- Using a screwdriver, Remove the screw from the battery compartment.
- Open the battery compartment door and insert 2 "AAA" batteries (Pic. 2).
- Using a screwdriver, attach the battery compartment door back onto the remote.

REMOTE OPERATION INSTRUCTIONS

- First Step need to turn on the power for tractor, see Pic.4.
- Press down power button on the remote to turn on the device. Automatic frequency matching with tractor truck and emit a startup sound, see Pic.3.
- Tip : If the remote switch is turned off after frequency matching completed and then reopened within 5 seconds, the tractor will not receive a startup sound alert.
- Long press the power button to turn off the power of the remote.
- Before frequency matching, the lights of the tractor & remote flickered slowly. After successful frequency matching, the lights of the tractor & remote remained on continuously.

Pic 3 Pic 4

HOW TO CHARGING

IMPORTANT! Please following strict accordance with this instruction manual while charging the battery.

Take out of battery from battery compartment

Use a screwdriver to open the battery compartment and disconnect the battery and RC tractor (See Pic.5) then take out of the battery.

Connect USB charger with battery

Connect the supply terminal of rechargeable battery with the USB charger (See Pic.6)

Start Charging

Two ways for charging

Connect USB port of USB charger into the power source adapter Connect USB port of USB charger into the computer

NOTE:

1. While charging, the red LED light on USB charger will on.
2. When charging is completed, the red LED light will off.
3. Empty battery charging fully will take about 60 minutes.
4. Disconnect battery and charger when charging completed.
5. The battery can last for approximately 60 minutes of use.
6. When the battery level is low, there will be a "Battery Low" prompt message.

CAUTIONS

Care and Maintenance:

- Always remove battery from the toy/charger when it is not being used for a long period of time.
- Place the any parts of toy away from direct heat.

Special Note to Adults:

- Parental guidance is recommended when installing on replacing batteries.
- Regularly examine for damage to the USB charger enclosure and other parts in the event of any damage the toy must not be used with charger until the damage has been repaired.
- This toy must only be used with the recommended battery/charger.
- Do not try to charge other batteries with charger.

Safety Precautions:

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- Remove battery from toy/charger when not in use.
- Parental guidance is recommended for the toy's using.
- Users should save and retain this information for future reference.
- Users should maintain strict accordance with the instruction manual while operation the product.
- USB charger is tailor-made for the Lithium rechargeable battery used in this toy.
- Do not use it to charge any battery other than that in this toy.

Should not be intended for children under 3

CAUTION: Product with a Lithium rechargeable battery please also pay attention to the follow cautions for safety use:

- Do not dispose the battery in fire or heat.
- Do not use or leave the battery near a heat source such as fire or heater.
- Do not strike or throw the battery against hard surface.
- Do not immerse the battery in water, store it in a cool.
- When recharging, only use the battery charger specifically for that purpose.
- Do not over-discharge the battery.
- Do not connect the battery to an electrical outlet, dry.
- Do not directly solder the battery and pierce the battery with a nail or other sharp object.
- Do not transport or store the battery together with metal objects such as necklaces, hairpins etc.
- Do not disassemble or alter the battery.
- The battery will need to be recharged if the product is not in use for at least 6 months.
- Take out of battery after use.
- As for a used battery, please recycle after covering the battery terminals with insulation tape or inserting it to an individual poly-bag.

SUPPORTS

CONTACT US

Thank you so much for choosing FUNWEE

If you have any difficulties or problems with using the product, please don't hesitate to get in touch with us.

Our customer service will try our best to help you!

supports@funwee-creative.com

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.