

INSTRUCTION MANUAL

使用說明 / 使用说明



MOMAX

AIRBOX



TRUE WIRELESS POWER 10000mAh
多功能無線流動電源 / 多功能无线流动电源



  MA01

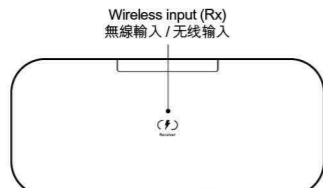
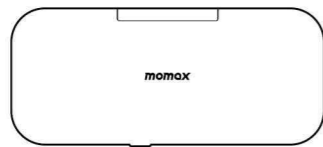


  Power button 電源鍵 / 电源键
D USB-C PD input / output port 輸入及輸出插口

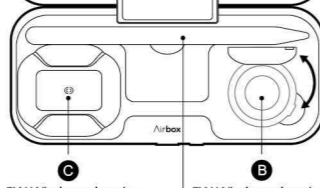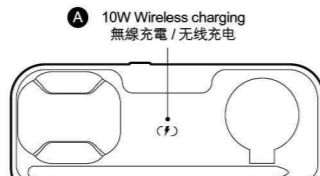

5W Wireless charging 無線充電 / 无线充电
Pencil slot / 筆槽 / 笔槽 (Only for storage/僅適用於存放/僅适用于存放)

  Qualcomm Quick Charge is a product of Qualcomm Technologies, Inc. Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries. Quick Charge is a trademark of Qualcomm Incorporated. All Qualcomm Incorporated trademarks are used with permission.

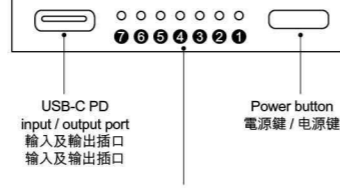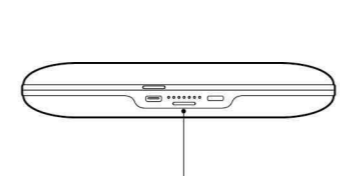

7 LED Indicator lights 7 LED 顯示燈 / 显示灯
USB-C PD input / output port 輸入及輸出插口
Power button 電源鍵 / 电源键

INSTRUCTION FOR USE

操作 / 操作

1. There are 4 ways to charge your device(s), connect Airbox to your device through:

Table with 2 columns: Charging Method and applicable device. Includes Wireless charging 10W, 5W, and USB-C PD port.

2. Press the Power button to Power ON. Press & hold (2 secs) the Power button to Power OFF.

Airbox will automatically OFF if idle for 60 secs. However, Airbox will enter 'low current mode' when charging AirPods / Pro or Apple Watch which will delay the power off to 2 hours.

3. There are 2 ways to recharge Airbox. A. Connect the USB-C port to a power adapter. B. Place Airbox on top of a 15W wireless charger.

\* To maximize recharging efficiency, please align the "Rx" of the Airbox to the charging coil of a wireless charger. The green indicator light will be ON when entering fast charging mode, indicating contacts are aligned.

\* Cannot support dual recharging through A and B at the same time, Airbox will take USB-C as the power input.

\* When B is in progress, the 10W wireless charging will be disabled.

Note: If LED flickers in orange repeatedly, indicating foreign object is detected (e.g. metallic or magnetic parts). Please remove the foreign object(s). This product should be fixed in a plane for use.

Only when the product box is opened can it be used. If the box is closed, it cannot be used.

1. 有4種方式為您的設備充電，將 Airbox 通過以下方式連接您的設備：

Table with 2 columns: Charging Method and applicable device. Includes Wireless charging 10W, 5W, and USB-C PD port.

2. 按一下電源鍵啟動Airbox。長按（2秒）電源鍵關閉Airbox。

Airbox 沒有使用狀態下，閒置60秒會自動關機。但如果 Airbox 為 AirPods / Pro 或 Apple Watch 充電，「小電流模式」會開啟，Airbox會延遲2小時才自動關機。

\* 要提升充電效率，請將Airbox的“Rx”對準無線充電器的充電線圈。綠色指示燈亮時，代表快速充電模式進行中，亦表示接觸點已對準。

\* 無法同時 A和B 進行雙路充電，Airbox將以USB-C作為電源輸入。

\* 當 B 進行中，10W 無線充電功能會停止。

注意：如果無線充電指示燈閃爍，即表示偵測到異物（例如金屬或磁性零件）。請移除異物。

1. 有4種方式為您的設備充電，將 Airbox 通過以下方式連接您的設備：

Table with 2 columns: Charging Method and applicable device. Includes Wireless charging 10W, 5W, and USB-C PD port.

Table with 2 columns: Indicator and Status. Includes Wireless charging 5W and USB-C PD port.

2. 按一下電源鍵啟動Airbox。長按（2秒）電源鍵關閉Airbox。Airbox 沒有使用狀態下，閒置60秒會自動關機。但如果 Airbox 為 AirPods / Pro 或 Apple Watch 充電，「小電流模式」會開啟，Airbox會延遲2小時才自動關機。

3. 有兩個方式為Airbox 充電。A. 將移動電源USB-C 插口，連接電源。B. 將 Airbox 放在15W的無線充電器上。

\* 要提升充電效率，請將Airbox的“Rx”對準無線充電器的充電線圈。綠色指示燈亮時，代表快速充電模式進行中，亦表示接觸點已對準。

\* 無法同時 A和B 進行雙路充電，Airbox將以USB-C作為電源輸入。

Table with 2 columns: Indicator and Status. Includes White LED flash, Battery Level, and various LED ON indicators.

Table with 2 columns: Indicator and Status. Includes 5W, 10W, and Fast Charging modes.

SPECIFICATION

產品規格 / 产品规格

Table with 2 columns: MODEL: MA01 and Capacity. Includes Input 1 (USB-C), Output 1 (Wireless), Output 2 (Wireless), Output 3 (Wireless), Output 4 (USB-C), Total Output, Size, and Weight.

Table with 2 columns: 型號: MA01 and Capacity. Includes Input 1 (USB-C), Output 1 (無線), Output 2 (無線), Output 3 (無線), Output 4 (USB-C), 總輸出, 尺寸, and 重量.

Table with 2 columns: 型號: MA01 and Capacity. Includes Input 1 (USB-C), Output 1 (無線), Output 2 (無線), Output 3 (無線), Output 4 (USB-C), 總輸出, 尺寸, and 重量.

CONTAINS: 1. AirBox True Wireless Power 10000mAh 2. USB to USB-C cable (1m) 3. Carrying pouch 4. Instruction manual and warranty card

包裝內容: 1. AirBox 多功能無線流動電源 10000mAh 2. USB 至 USB-C 連接線 (1米) 3. 便攜袋 4. 使用說明及保用證

包裝內容: 1. AirBox 多功能無線流動電源 10000mAh 2. USB 至 USB-C 連接線 (1米) 3. 便攜袋 4. 使用說明及保用證

WARNING

- 1. Do not dismantle or modify the product; 2. Do not store the product in wet conditions; 3. Do not keep or use the product near heat sources; 4. Do not let water or any other liquid flows into the inside part of the product's interface. This would cause damages to the product. 5. Make sure to remove metallic or magnetic protective case of your device when charging; 6. While charging, the AirBox may heat up. This is normal and should not affect AirBox performance. If the battery feels hot to the touch during this charging process, remove the AirBox from the charger and allow it to cool down before restarting the charging process; 7. Avoid using bent or damaged USB cable. 8. Stop charging or using the product in case of battery expansion.

DISPOSAL OF ELECTRONIC PRODUCTS

- 1. Do not place the product as household waste; 2. Please dispose of discarded electronic products properly according to local regulations. 3. MOMAX encourages you to participate in electronics recycling program.

WARRANTY CONDITIONS

- 1. For any defect, in the judgment of our technician, caused under normal use, we are responsible for repairing free of charges 12 months commencing from the date of purchase at the discretion of our company;

- 2. A valid warranty card and original purchase invoice must be presented upon request of warranty service; 3. This warranty card shall not apply to the product if: (a) it has explicitly modified or repaired in any way by persons other than technicians of this company, or; (b) it has been damaged through misuse, malicious acts, negligence, inflow of any liquid, or; (c) losses or damages are caused by force majeure or natural disasters. 4. No alteration to this warranty card will be allowed; 5. The warranty terms and conditions are subject to change without prior notice; 6. Please retain your proof of purchase for warranty service; 7. Please consult the dealer about the product compatibility with your cell phone/ PDA before purchase. Product specifications are subject to change without prior notice; 8. Please visit www.momax.net for latest product information.

警告

- 1. 請勿自行拆開或改裝本產品； 2. 請勿將本產品存放在潮濕環境中； 3. 請勿將產品靠近熱源或於熱源附近充電； 4. 請勿將水或其它液體流入本產品介面內部，導致本產品損壞； 5. 如您有額外使用金屬或包含磁片的保護殼，請確保充電前須移除；

- 6. 充電時，AirBox有可能產生熱力，此乃正常現象，並不會影響產品表現。但如果感到手機電池或AirBox過熱，請斷開AirBox電源供應，待冷卻後，再嘗試充電； 7. 避免使用屈曲或損壞的USB線材。 8. 如果本產品電池膨脹，請停止充電或使用。

如何處理廢棄電子產品

- 1. 請勿將電子產品當成家庭廢棄物丟棄； 2. 請依當地的法規規定處理廢棄的電子產品； 3. MOMAX鼓勵您積極參與電子產品回收計劃。

保養條款

- 1. 由購買日期起12個月內，如產品有損壞或故障，經本公司技術人員證實為在正常使用之情況下發生，本公司將提供免費維修服務； 2. 維修時必須出示本保用證及購買商號之發票正本，如果用戶不能提供，本公司有權不提供維修服務。用戶可能需要支付相關維修費用； 3. 保用期內，出現以下條款產品保用證自動失效： (a) 非本公司人員蓄意拆解或維修產品之任何部分； (b) 錯誤的操作如：非法接取電源，以及水、污穢物滲入產品內導致產品損壞； (c) 不可抗拒意外事件或天然災害導致產品損壞； 4. 此保用證如塗改，保用證自動失效； 5. 本公司有權增刪任何維修及保用條款而不作通知； 6. 如因錯誤使用本公司產品而導致手提電話或其他電子產品有任何損壞，本公司不會承擔任何責任； 7. 有關 MOMAX 原裝產品和您的手機或電子產品的相容性，請在購買時向經銷商確認。此產品規格隨

時可能變更，恕不另行通知； 8. 請瀏覽 www.momax.net 瞭解最新產品資訊。

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

The equipment complies with IC Radiation exposure limit set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: This device must accept any interference, including interference that may cause undesired operation of the device.

Table with 2 columns: 有毒物質或元素 and 有毒物質或元素. Includes components like 主機, 配件, 電池, 充電器, 充電線, 充電頭, 充電線, 充電頭, 充電線, 充電頭.



MOMAX WARRANTY/保用證/保用證. Includes Model/型號/型号, Date of Purchase/購買日期, Remarks/備註, and Customer Service/客戶服務中心 information.