



8. Power Management Settings

Check the remaining capacity of the battery and power source.
Setting the threshold of the low battery alarm.

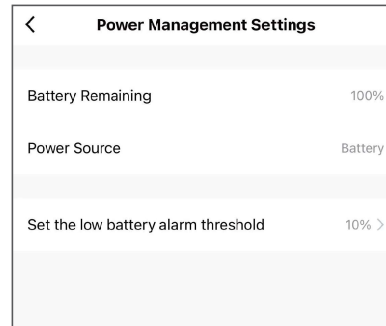

9. Storage Setting


You can check the storage capacity of the Macro SD card and format the SD card

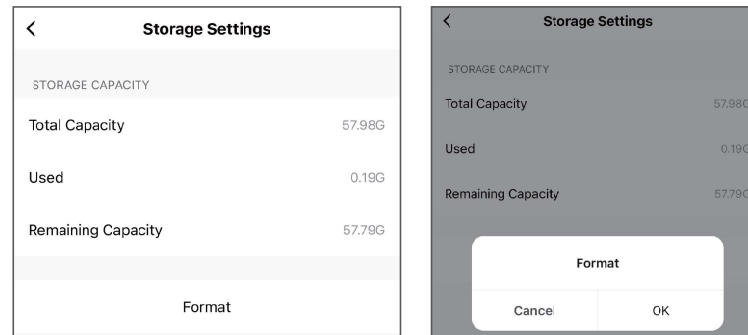

-  **Note:**1. New SD card need to be formatted for the first time.
2. Formatting the SD card will erase all the contents of the card.



10. Others

FAQ&Feedback

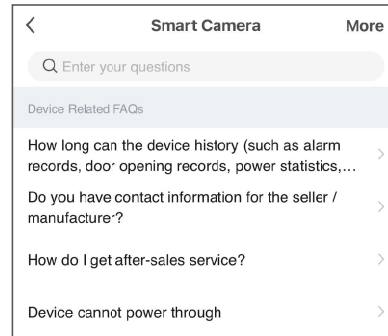


11. Share Devices

Follow the description below to share the device to a friend or your family member.

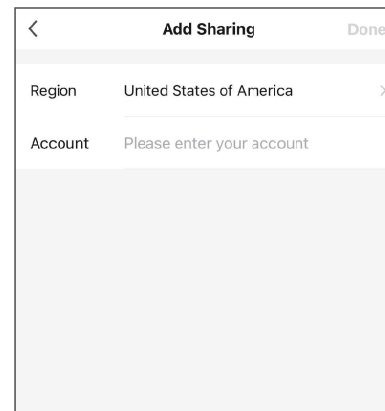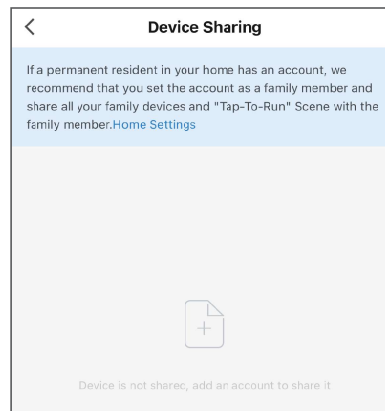


12. Add to home screen

Please follow the description to add the device to home screen as a shortcut menu.

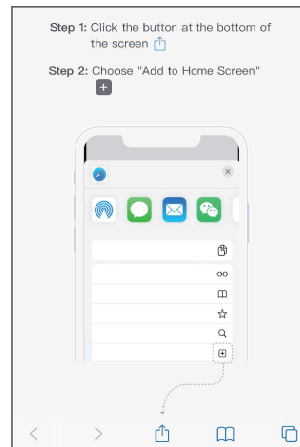

13. Device Update


If there is a new firmware release, the app will push a prompt message to you for the device firmware upgrade.

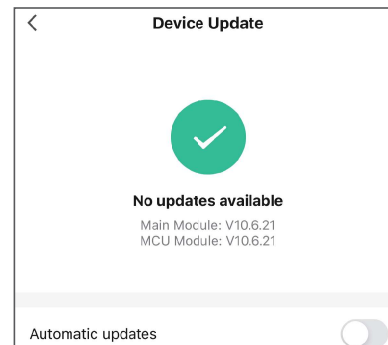

14. Remove Devices


You need to manually remove devices from the device list in the My Homeyo App if you don't wish to use them anymore.

 **Note:** The camera must be removed from the device list from an account before it can be connected to other accounts.

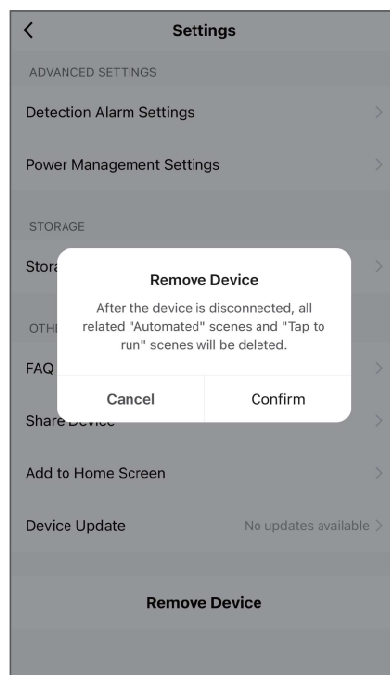

App Operating Instructions

Press the ≡ button to open the operate menu.

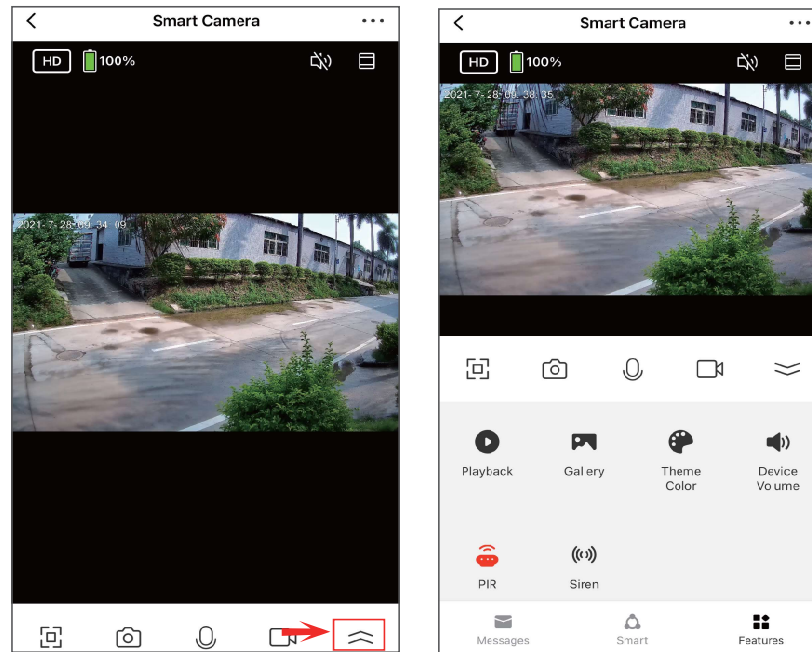

1. Playback


Playback the record video of the motion detection.

2. Gallery

You can enter the Gallery to view the photo and recording video.


3. Theme Color

Set the color of theme.

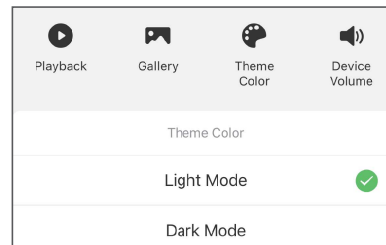


4. Device Volume

Setting the volume level of the device.

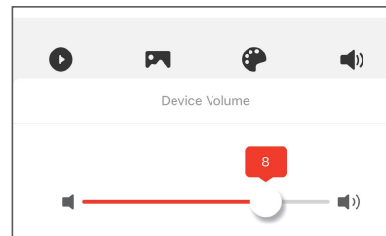

5. PIR setting

You can turn on/off the PIR Sensor and Setting the PIR sensitivity (Detection distance)

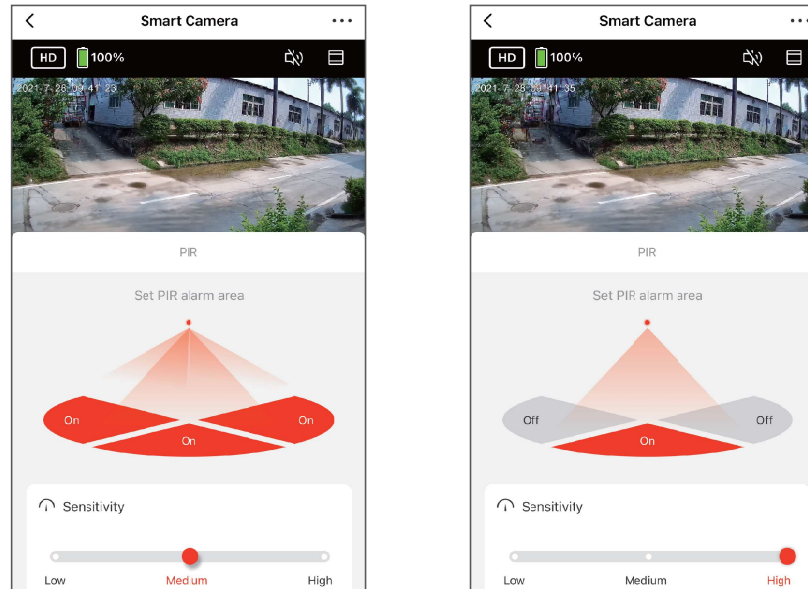

PIR Sensor Setting Suggest Solution that according to the installation enviroment:

1. Left/Middle/Right sensor on at the same time for driveway alarm.
2. Turn off the Left and Right sensor and only keep the middle sensor on for garage door alarm.

⚠ Note: 1. Don't turn off the middle PIR sensor that will caused the motion detection to not work.

2. Sensitivity setting: High=26FT/Medium=18FT/Low=10FT


6. Siren

When you see an intruder, you can use the Siren function to drive away the bad guys.


7. Change the definition of video

SD: Standard Definition

HD: High Definition

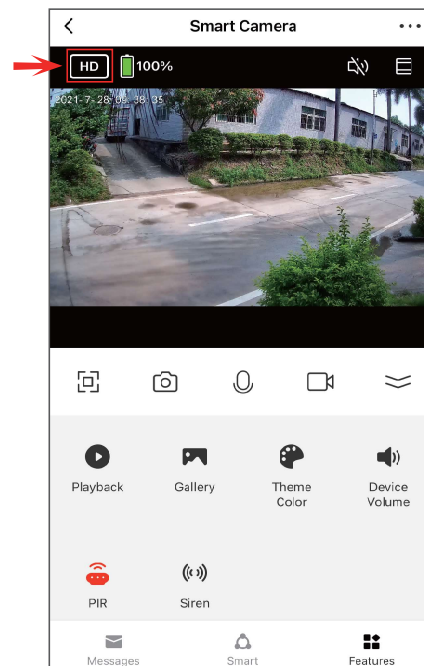

8. Check the battery level

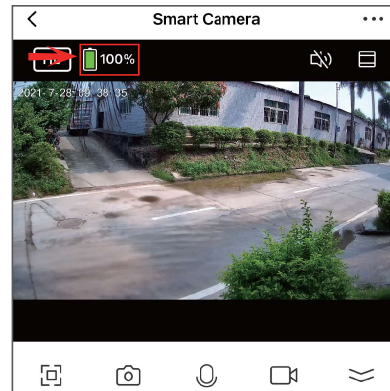

9. Sound Mute/Un-mute

