

中文

英语

向创新致敬

关于设备

在使用前，请先熟悉该设备的界面和按钮。

- Oculink接口 (不支持热插拔)
- f 3.5mm 耳机接口
- 电源开关
- USB4.0
- USB3.2 (Gen2)*2
- DPI接口
- USB4.0
- 通信器接口 19V 6.32A
- 安全锁
- HDMI接口
- 以太网接口 (2.5G*2)

G极致 | K时尚 | K创新

GMKtec NucBOX M7迷你电脑用户使用说明书

友情提示

感谢您选择极摩客产品。请仔细阅读本用户手册并保存以备将来参考。

本文中包含的信息如有变更，恕不另行通知；除本文中有明确陈述之外，本手册任何内容不应解释为极摩客对个人损失、财产损失或身体伤害等提出的任何担保或保证。极摩客不对本文件中可能出现的错误或遗漏负责。

如果在使用过程中出现任何问题或疑虑，欢迎通过本说明书中的电子邮箱地址联系我们，我们一直在这里提供协助！

安全警告和预防措施

在使用和操作本设备之前，请仔细阅读并注意以下预防措施，避免受伤或非法律行为。

使用环境

请勿在尘土飞扬和潮湿的地方使用该设备，以避免造成内部电路故障；不要将此设备放置在加热器等加热物附近，本设备的工作温度为0~40度，正常工作湿度为10~90% RH。

电源

请使用标准配备的电源供电；

防水

本产品不防水，请保持干燥；

维修

对于所有的维修服务，请与经授权的售后服务人员联系，请勿将任何关键部件拆解入到设备中；不要取消或篡改设置，以免造成损坏到设备。

连接步骤

1. 请使用本产品附带的电源适配器将电源连接到产品；
2. 将显示器与HDMI电缆连接起来，请确保HDMI电缆完全合紧；
3. 连接键盘和鼠标；
4. 在新设备的第一次系统启动时，请按提示Windows自动指南进行操作。在此过程中，请注意不要断开电源的连接。第一次启动进入桌面大约需要10分钟，请耐心等待；
5. 在系统启动过程中，如果您无法登录到您的个人账户，请点击WiFi和网络图标，选择“跳过选项”，然后登录到您在系统中的个人账户；

图片仅供参考

基本设置

1. 如何进入BIOS设置页面？
按下开机键后连续按C键可进入BIOS界面。
2. 如何进入Firmware设置页面？
按下开机键后点按F键进入选择并启动项页面。

保修承诺

极摩客严格依据《中华人民共和国消费者权益法》《中华人民共和国产品质量法》实行售后三包服务，详细的售后服务政策，请参阅官方网站。

售后服务

电子邮件: support@gmktect.com
 销售: gmkt@gmktect.com
 电话: 0755-8886806

公司简介

公司名称: 深圳市极摩客科技有限公司
 地址: 广东省深圳龙华区大浪街道新社区麒麟华创新产业园B9号B座


极摩客®

G极致 | K时尚 | K创新

保修卡

保修期限	购买日期	年	月	日	序列号
保修人信息	姓名:				
	电话:				
	地址:				
经销商	邮箱:				
	电话:				
合格证					
日期: _____					

TRIBUTE TO INNOVATION



Geek/Modern/(K)Creativity

GMKtec NUCBOX M7 USER MANUAL

Friendly Reminder

Thank you for choosing GMKtec, please read this user manual carefully and save it for future reference.

The information contained in this document is subject to change without further notice, nothing in this document should be construed as creating any additional warranty. GMKtec shall not be liable for technical or editorial errors or omissions that may appear in this document.

If there are any problems during this use, please contact us via the email address in the user manual, we are always here to support you.

Safety warnings and precautions

Before using and operating this equipment, please read and observe the following precautions carefully to avoid dangerous or illegal operations.

Use environment

Do not use the device in dusty and humid places to avoid causing internal circuit failures.

Do not place this equipment near heating objects such as electric heaters.

The working temperature of this equipment is 15-40 degrees, and the normal working temperature is 10-30°C RH.

Power

Please use the special charger that comes standard with this product.

Waterproof


This device is not waterproof, please keep it dry.

Maintenance

For all maintenance services, please contact the dealer's maintenance personnel. Do not insert any sharp objects into the device; do not drop or bump the device to avoid damage to the device.

About the Device

Please familiarize yourself with the interface and buttons of the device before use.

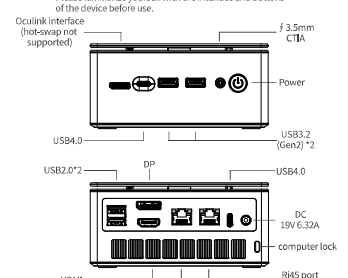

Technical specifications

CPU	AMD Ryzen™ 7 PRO 6000 Series Mobile Processors—6800H, 6 cores and 16 threads, 6nm process, base frequency 3.6GHz, maximum frequency up to 4.6GHz, 16 MB L3 Cache
GPU	AMD Radeon™ 680M, 12 cores, up to 2.20GHz graphics frequency
RAM	DDR5 4800 MT/s, SO-DIMM*, 16G/32G (Product capacity is subject to actual purchase)
Storage	M.2 2280 NVMe (PCIe 3.0) 512GB/1TB/2TB (Product capacity is subject to actual purchase)
Network	Ethernet Giga LAN(RJ45)*2 2500M/1000M/100M/10M
	WiFi6 802.11a/b/g/n/ac/ax
	BT BT5.2
Charger	DC 19V 6.32A
Packing list	1 * Mini PC + 1 * User Manual/Warranty Card + 1 * DC Power Supply + 1 * DC Power Cable + 1 * VESA Bracket + 1 * HDMI Cable

Note: The pictures listed in this manual are for reference only. Product specifications/section definitions and appearance are subject to change without further notice.

Connection Steps

1. Please use the power adapter that comes with this product.
2. Connect the monitor with the HDMI cable, please make sure that the HDMI cable is qualified;
3. Connect the keyboard and mouse;
4. During the first system startup, please follow the Windows startup guide. During this process, remember not to disconnect the power supply. It will take about ten minutes for the first startup to enter the user desktop, please wait patiently.
5. During the system startup process, if you cannot log in to your personal account, please turn off the Wi-Fi and local area network, select "skip option", and then log in to your personal account in the system;

Picture for reference only

Basic Setting

1. How to enter the BIOS setup screen?
Press the power button and click ESC to enter the BIOS interface.
2. How to enter the startup/boot settings screen?
Press the power button and then click F1 to enter the boot selection interface.

Warranty commitment

Entitled 12-month warranty for the product quality problems caused by non-human factors.

Certificate inspected

After Service

Email: support@gmktec.com
Sales: gmk@gmktec.com

Company: Shenzhen GMK Technology Co., Ltd.
Address: 5/F, #9 Bldg, Yifenghua Industrial Park, Huangpu Rd, Longhua Dist, 518109, Shenzhen, China

21487391

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates/uses instructions, may cause harmful interference to radio communications; However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures—Reorient or relocate the receiving antenna—Increase the separation between the equipment and receiver—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected—Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm from your body.

USER MANUAL

GMKtec

Geek/Modern/(K)Creativity

www.gmktec.com