

Byybuo

A70W



User manual

Content

1 Attention	02
2 Main function	03
3 Appearance and button	04
4 First use	05
4.1 Battery management and Charge	05
4.2 Connection with PC	05
5 Equipment operation interface	06
5.1 Main interface describe	06
5.2 Status bar describe	07
5.3 Use touch panel	07
6 Equipment basic set setting	08
6.1 Sound Volume	09
6.2 Application	10
6.3 Reset Option	11
6.4 Storage	12
6.5 Language & Keyboard	13
6.6 Data & time setting	14
6.7 About Tablet	15
7 File Manager	16
8 Problem Solution	17
8.1 Device can't open	17
8.2 Device shut down after start up	17
8.3 Headset can't hear the voice	17
8.4 Can't copy file or play music and so on	17

1. Attention:

- Please don't be in high temperature, moisture or very dust place
- Avoid fall or Violent collision of the device, don't make the display screen were violent tremor, this could cause display screen abnormal or damage.
- please charge in the following condition,
 - A. The battery power icons show have no power
 - B. The system automatically shut off, startup after power off soon
 - C. Operation buttons no response
 - D. The device on the top right corner show red icons When the device in the format or ongoing upload and download file, please don't suddenly disconnect, this could cause application error.
- Don't disassemble the product, don't use alcohol,Thinner or benzene to scrubbing products

2. Main function

- Operation systems: Android™13 (Go edition)
- Processor: Allwinner A133
- CPU processor speed: Quad core, ARM Cortex™-A53
- Memory: 32GB FLASH
- RAM: 2GB DDR3
- WI-FI Function:802.11b/g/n
- Bluetooth: v4.2
- Micro SD card: up to 128GB
- Display screen: 10.1inch Capacitive multi-touch
- Resolution: 1280*800 IPS
- Dual camera: Front: 2.0M Pixels; Rear: 5.0M Pixels
- Battery and capacity: rechargeable Built-in type polymer battery, 3.8V/6000mAh
- USB: Type c
- G-sensor 3D
- Support Speaker
- Record: built-in microphone
- MIC phone : input
- Video: asf, avi, flv, f4v, mkv, mov, mp4/m4v, vob, mpg, pmp, ts/tp, m2ts, mts, wmv, webm, 3GP
- Music:aac, aiff, amr, ape, atrac, caf, dsd, flac, g729, mp3, ogg, wav
- Pictures: JPG, JPEG, BMP, and PNG
- Recording function:Format supported: 3ga Format
- 3G function: Support external 3G USB-DONGLE wireless network
- E-book Function:Format Supported: TXT,EPUB,PDF,WORD,EXCEL,PPT
- Working temperature:-5 ~ 40 °C
- Languages:Chinese , English , Japanese , French , German , Spanish , Russian, etc.
The company reserves the right to improve product, products specification and
- design have any change, and the information is subject to changes without prior notice.

3. Appearance and button:



1 Power Button

2 Type C

3 Volume buttons

4 Micro SD Card

5 Rear Camera

4. First use

4.1 Battery management and charge

Before first use, please charge the device's battery to 100%.

The first two times charging please keep it charging for about 6 hours, after that you just need leave it charging 4 hours or until fully charged.

Attention: This tablet uses Built-in type polymer battery, Charge must be to choose standard adaptor (Adaptor: power supply: DC 5V 2A, adaptor technical data: input AC100-240V,50/60Hz, DC5V 2A)

4.2 Connection with PC

Use USB cable to connect the PC. First turn on the device; next, click USB connection window on the notification bar; lastly, turn on Transfer Files to connect to PC




Into the load mode, you can copy; delete the file on the device and the file on the memory card.

5. Equipment operation interface

5.1 Main interface describe

After startup will enter the main interface, In the main interface, you can Management the main interface software icons by:

- a) long press the icons for 3 seconds; after the icon will get bigger, allowing you to drag it anywhere in the interface.
- b) Delete icons: long press the icon for 3 seconds; after, drag the icons to the Recycle Bin icon. Once it becomes red, Let go of the icon and app will be deleted.
- c) To change wallpaper,Please enter “Settings” >“Wallpapers ”

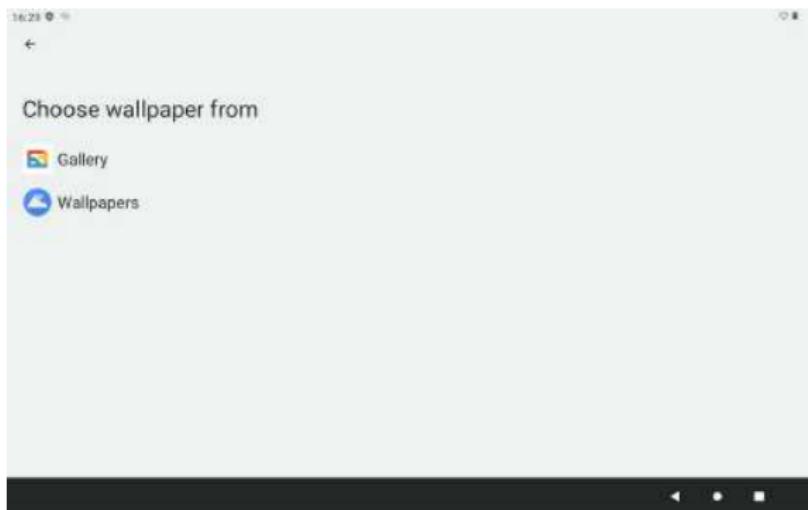

5.2 status bar describe

Top right displays the battery, battery charge icons, current time, Settings Menu

5.3 Use touch panel

No matter which interface you are in, you can go back to main screen by pressing the soft key  on the bottom middle corner of the main screen.


In different applications, by tapping the back soft key  on the bottom middle corner on the touch screen, you can return to its previous interface

6. Equipment Basic Setting:

Click setting icons  to enter the setting Interfaces.




6.1 Sound Volume

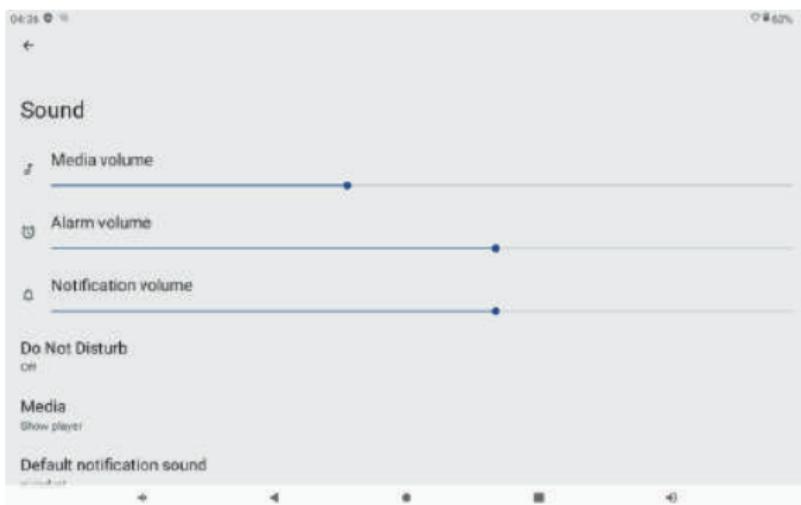

6.2 Application

Manage applications

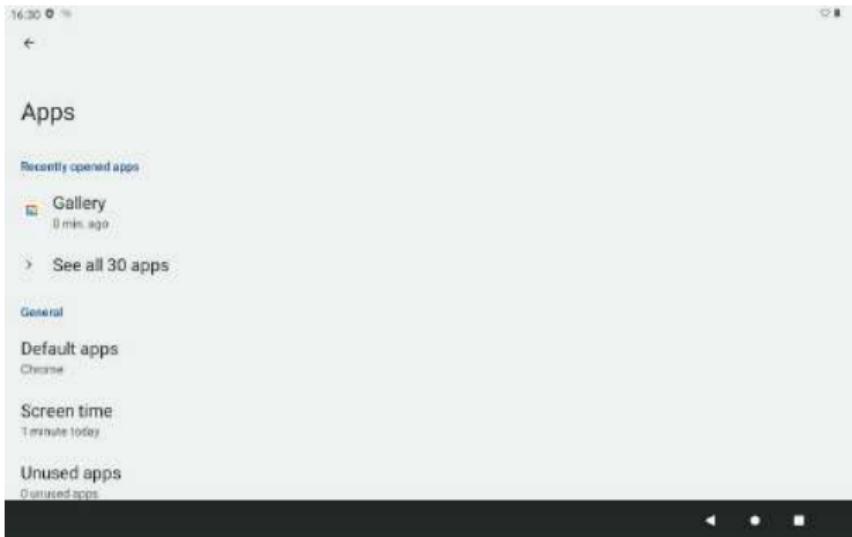

A .Enter “Settings” > ”Apps ” And then there will be App list

B .Select the one you want to uninstall, it will enter the following interface

C .Click Uninstall, then you can delete the application

6.3 Reset Options

Please enter “Settings” > “System” > “Reset Options”> “Erase all data (factory reset)”> “Erase all data”



Erase all data (factory reset)

This will erase all data from your tablet's **internal storage**, including:

- Your Google Account
- System and app data and settings
- Downloaded apps
- Music
- Photos
- Other user data

Erase all data

Erase all data?

All of your personal information and downloaded apps will be deleted. You can't undo this action.

Erase all data

6.4 Storage


Remove SD card , to view of the available storage space



【Remark】 : please touch option " delete SD card", so that can safety to remove SD card

6.5 Language & keyboard

Setting: (Language), text input and automatic error correction options;

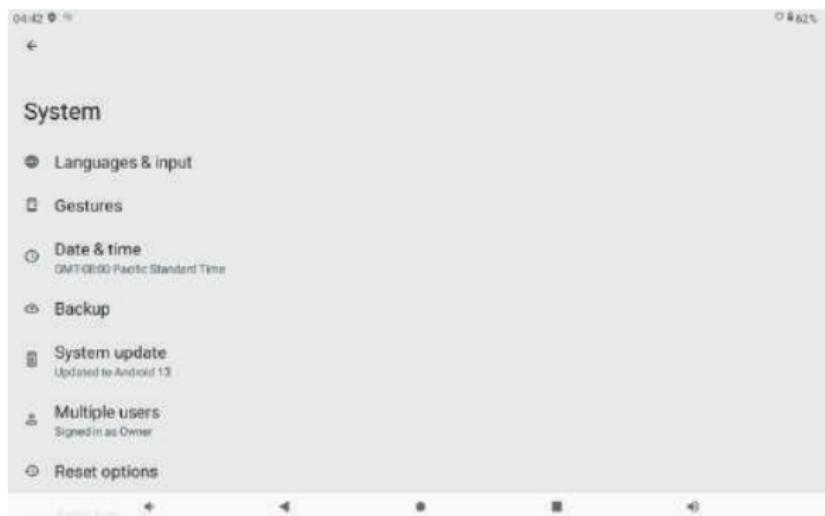

Select Language: 54 kind of national languages are available


6.6 Date & time setting

Set date, set time, select time zone and select date format



6.7 About Tablet


Please enter “Setting” > “System”>“About Tablet”

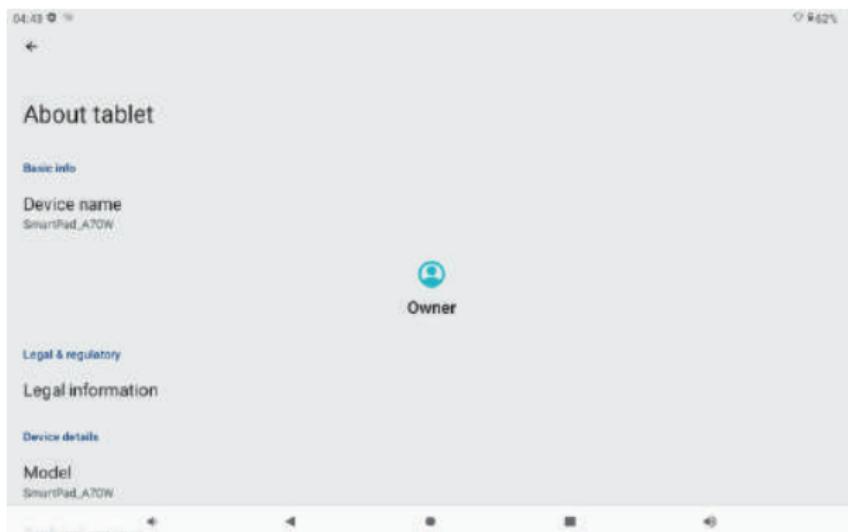

7. File Manager

This Tablet can support Android APP in market by third party, most Apps can install in the network, can copy to NAND FLASH or SD card.

Click “Files Go” APP to open, then you can check Apps, Images, Videos, Audio and Documents.

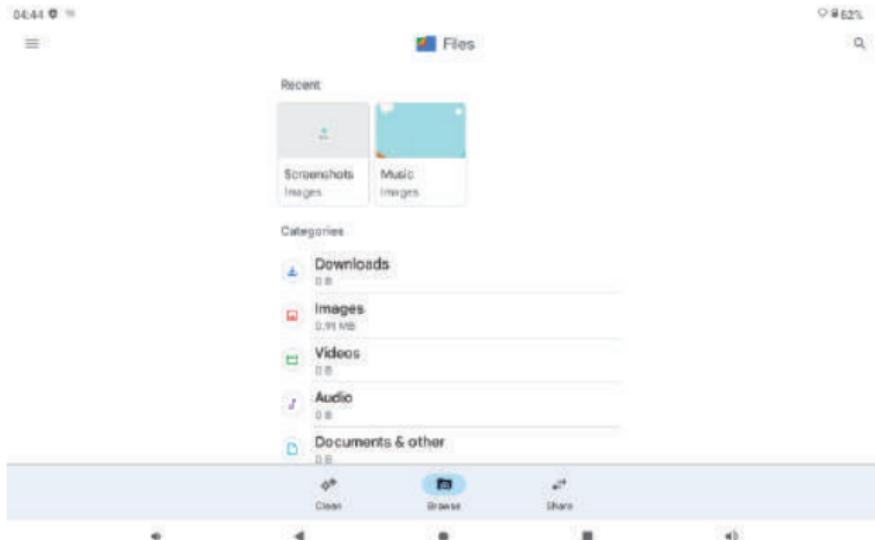

8. Problem solution

8.1 Device can't open

- A、Check the battery power
- B、Connect adaptor first, then check again
- C、Press the “reset” key first, the press “power” key
- D、After charging then can't to open, please contact with the supplier

8.2 Device shut down after start up

After startup the screen or the Power On Image appears, the device appear shutdown: Power is not enough, please charge

8.3 Headset can't hear the voice

- A Please check the volume whether set to 0
- B Check if the music file is damaged. Try playing another audio file.
- C If the file has been damaged it may lead to serious noise or popping sounds.


8.4 Can't copy file or play music, etc....

- A、Please check if the computer and device are correct connected
- B、check if the memory storage space is full
- C、check if the USB cable is good or not
- D、USB connection is disconnected


8.5 How do I forget the password.

- 1、First, turn off the tablet.
- 2、Then press and hold down the volume "+" button and the power button to enter the "Recovery" mode. In recovery mode, the volume "-"button indicates switchover selection and the Power key indicates confirmation.


3、Use the Volume “-”button to select the [wipe data/factory reset] option and press the “Power” key to confirm .

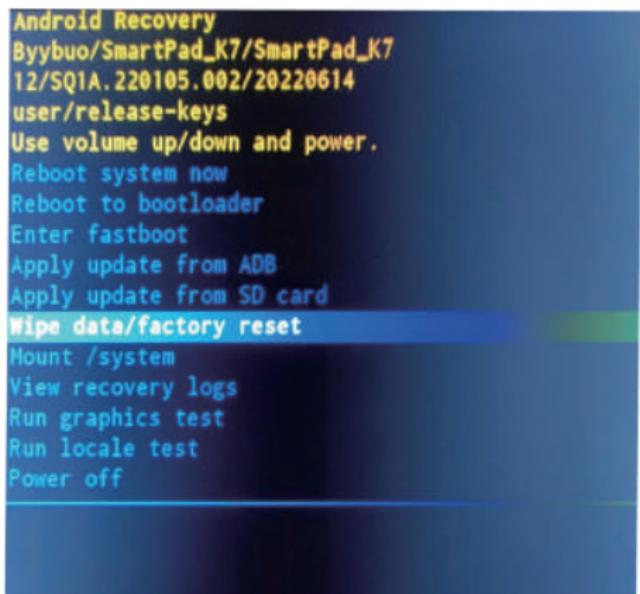

4.Select the “Factory data reset” option and press the “Power” key to confirm.

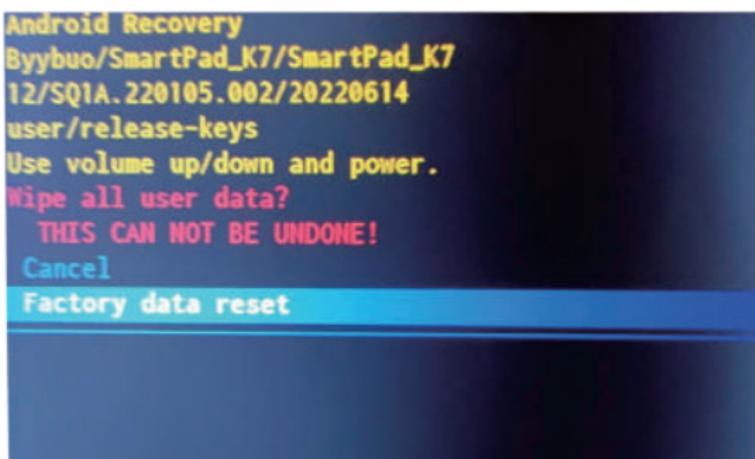

5. Select “Reboot system now” or “Power off” and press the “Power” key to confirm. Then the password will be cleared.

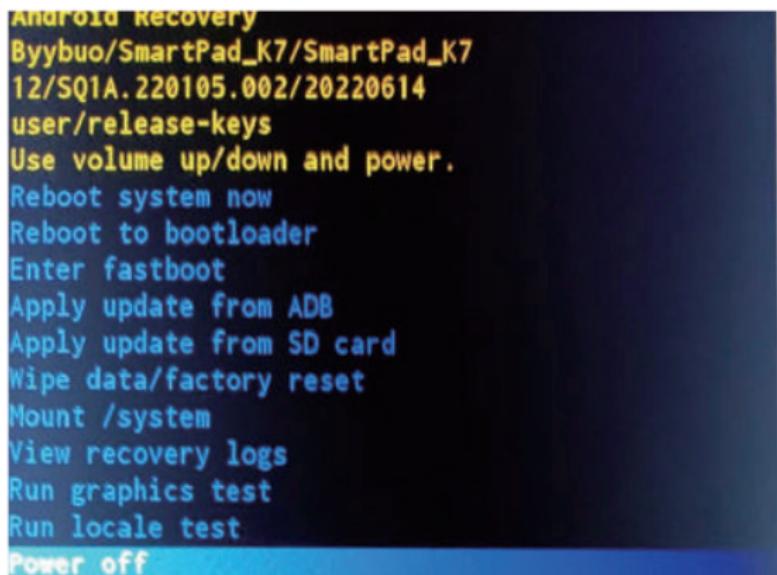

ANDROID Recovery
Byybuo/SmartPad_K7/SmartPad_K7
12/SQ1A.220105.002/20220614
user/release-keys
Use volume up/down and power.
Reboot system now
Reboot to bootloader
Enter fastboot
Apply update from ADB
Apply update from SD card
Wipe data/factory reset
Mount /system
View recovery logs
Run graphics test
Run locale test
Power off

Warning

■ Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

■ The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID:2AXUI-A70W

WARRANTY CARD

Model Name _____

Product Serial No. _____

Date of purchase



dd



mm



yy

Customer's Details

Name _____

Address in full _____

Telephone No. _____

Dealer Name & Address _____

Customer's signature & Date

Dealer's signature with rubber stamp



Designed by BYYBUO, Assembled in PRC

CONTACT INFORMATION



byybuo@163.com
www.byybuo.com

Manufacturer: CHITECH SHENZHEN TECHNOLOGY CO.,LTD

Address: 101, NO.48, Xiashijia Road, Gongming Town, Guangming
Dist., Shenzhen, China

Byybuo

Android is a trademark of Google LLC.