

120.00 mm

90.00 mm



MPD611

User Manual



- 1 X MPD611
- 1 X AUX Cable
- 1 X User Manual
- 1 X Shoulder strap
- 1 X Remote control
- 1 X Wired microphone
- 1 X Type C charging cable

Before using this product, please kindly read this detailed instruction.

SPECIFICATIONS

Output Power: 20W
SNR: \geq 80dB
THD: \leq 10%
Battery: Built-in 1200 mAh rechargeable battery
Power supplied: Power adapter 5.0V/1A
Loudspeaker: 6.5 inch x 2, magnetic resistant 3 ohms.

DEVICE FEATURES

- 1.Product dimensions: 9.25"H x 18.31"W x 8.86"D
- 2.BT, wireless stream music from any BT-enabled devices such as mobile phone and notebook.
- 3.Built-in MP3 digital decoder for decoding and playing MP3 files. It brings you perfect sound quality
- 4.External TF card and USB socket to enjoy music.
- 5.Micro DC 5V charging, supply with charging cable.
- 6.1200 mAh rechargeable battery.
- 7.Two individual knobs to control mic and main volumes.
- 8.FM digital radio(87MHZ-108MHZ), listen to the latest news and music.
- 9.Able to connect to any audio output equipment, such as mobile phones/MP3/MP4/laptops, etc.
- 10.Microphone input to enjoy outdoor KTV.

⚠️ WARNINGS:

1. Do not allow water to spill onto the surface or into the product
 2. Unless the relevant regulatory instructed or has been directed by a person whom responsible for the safety of the products they use, otherwise the product is not available for the person with body weak force, or there is a lack of sensory capabilities persons (including children)
 3. This product is not intended for using by children. Please take care of children, do not let them play with the product.
 4. If the product surface is damaged or the case of mechanical or electronic equipment malfunction, do not use this product, please contact with our service center.
 5. Do not shake or up-down dumped about this product.
 6. Do not place the product immersed in water.
 7. Do not place the product in light exposure to the location, to be placed in a dry and ventilate place.
 8. Do not place heavy objects on the product.
- Thank you for choosing our products!

INSTRUCTIONS

1. Volume knob: Turning the knob to control volume up (Turn right) and down (Turn left). Turning the knob to the "OFF" side to turn off and "ON" side to turn on the speaker.
2. Mic Volume knob: Turning the knob to control microphone's volume up (Turn right) and down (Turn left).
3. BASS+: Shortly pressing to enhance BASS effect. Longly pressing to keep enhancing BASS effect.
4. BASS-: Shortly pressing to decrease BASS effect. Longly pressing to keep decreasing BASS effect.
5. EQ: Shortly pressing to switch different music effects.
6. ✳️: Shortly pressing to switch different light effects or turn off.
7. **MODE/TWS**: Shortly pressing for switching among BT, FM, Aux in, TF Card, USB modes.
Longly pressing to turn on/off TWS function.
8. **⏮**: Shortly pressing to play the previous music under BT, TF Card, and USB modes. Shortly pressing to play previous radio station under FM mode. Long pressing to fast back under TF Card, and USB modes.
9. **▶/scan**: Shortly pressing for music play/pause. Long pressing for radio station automatic searching under FM mode.
10. **⏭**: Shortly pressing to play the next music under BT, TF Card, and USB modes. Shortly pressing to play next radio station under FM mode. Long pressing to fast forward under TF Card, and USB modes..
11. DC 5V: Charge Jack for built-in battery. When the plugs in type C charging cable, the indicating LED lights up
12. Aux: AUX IN can connect to PC, mp3, Phone, or other aux facilities.
13. USB Port: Support USB and can play MP3 format music in U disk.
14. TF card Port: Support TF CARD and can play MP3 format music in CARD.
15. Mic: Plug in a microphone into the port to enjoy music.

FUNCTION

1. How to connect to BT:
When you turn on the speaker, it should already be on the BT mode.
Please go on your smart device or cell phone and search for the BT connections.
You should seem, MPD611. Please select it and you will be connected and ready to enjoy the tunes.
Short pressing the **⏮** button to play last music.
Short pressing the **⏭** button to play next music.
Short pressing the **▶/scan** button to play/pause music.
Twist the volume knob to control volume up (Turn right) and down (Turn left).
2. How to pair two speakers with the TWS function:
Turn on speakers, Longly pressing the **▶/SCAN** button on one of the speakers. And then an indication voice would sound. Speakers would enter TWS mode in 1-3 seconds. Two speakers could be connected with a same BT device and then play music together. When Longly pressing the **▶/SCAN** button again to cancel the TWS function.
3. Radio function:
Shortly pressing the MODE/TWS button and switch to Radio mode.
Long pressing the **▶/scan** button for station automatic searching. (Automatic searching will be finished in 2-5 minutes.)
Short pressing the **⏮** button to play last station.
Short pressing the **⏭** button to play next station.
Twist the volume knob to control volume up (Turn right) and down (Turn left).

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.