


85mm

85mm

Roblox Wireless Speaker



User Manual

With large capacity battery , this Roblox Bluetooth Speaker delivers music playback,hands-free calling and impeccable sound quality for an entertainment experience that lasts longer than ever. Add multiple port connections(wireless Bluetooth and Aux-in connection),and what you have is a premium Bluetooth speaker with great looks and even better sound quality,wherever you go.


Specifications

Bluetooth Speaker	2 x 10W
Working mode	Bluetooth/AUX Mode
Bluetooth Version	V5.0
Bluetooth profile	A2DP,HFP,HSP,AVRCP
Connection Range	15M
Battery capacity	4000mAh
Charging interace	USB Port,5V/1A Input
Speaker Dimension	L200*W68*H76 mm
Speaker Weight	544g

Package Contents

1 * Roblox Bluetooth Speaker
1 * Packing
1 * USB Charging Cable
1 * AUX Cable
1 * User Manual

Product Diagram

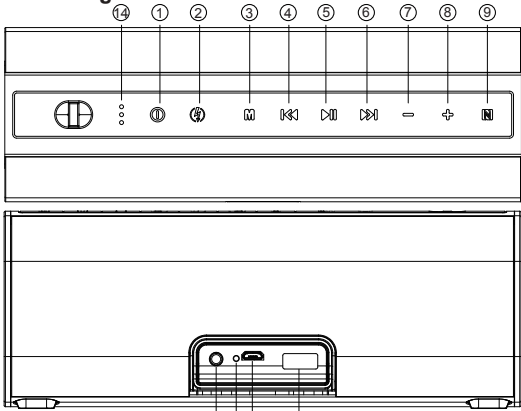

1.Power 2.Power Bank/power bank indicator 3.Mode/Mode indicator
4.Previous song 5.Multi-Function 6.Next song 7.Volume -
8.Volume + 9.NFC 10.AUX port 11.Reset 12.Charging Port
13.Power bank port 14.Battery indicator

Usage Guide Charging

When the battery is running low,a prompt tone will remind you to charge the Bluetooth speaker in time.
To charge,connect this Bluetooth speaker to the USB port of your computer via the provided USB charging cable,or by DC 5V/1A power adapter.

Connect and pair

Step 1: Press and hold the Power button for 2s to turn on the speaker. The speaker will emit a prompt sound and a blue LED light will flash quickly to indicate that the speaker is in Bluetooth pairing mode.
Step 2: Open the Bluetooth menu on your device and activate the Bluetooth function.
Step 3: Select "Roblox "from the list of available Bluetooth devices (If system requires a password, enter 0000).
Step 4: Once paired,the speaker will make a prompt sound and the blue indicator light will turn on.

Note:

-When power on, the speaker pairs automatically with any device that has previously been paired with it.
-The Bluetooth speaker will automatically power off if no devices connect within 10 minutes.
-The Bluetooth speaker will automatically power off if no operation or pausing music playback for 10 minutes.

NFC Pair

Open NFC in Bluetooth device .Touch the device on[N] position of the speaker.Sign of "Pair with bluetooth Roblox "comes up automatically on the bluetooth device.User confirm pair and the speaker will make a prompt sound and the blue indicator light will turn on and Bluetooth pair successfully.

Note:

NFC pair is only for bluetooth device with NFC .

Control Buttons

Mode	Function	Operation
Power and Mode	Power on/off	Press and hold the [1] button for 2s
	Mode switch	Short press [1] button(BT/AUX)
Bluetooth Mode	Volume+/Volume-	Press [+ / -] button
	Previous song/ Next song	Short press [2]/[3] button
	Music play/pause	Press [4] button
	Clear off old pairing records,ready for newpairing	Press and hold [5] button
Telephone Mode in Bluetooth	Answer incoming call/hang up	Short pres [6] button
	Reject incoming call	Long press [6] button
	Redial last phone number(standby status)	Double press [6] button
AUX Mode	Volume+/Volume-	Press [+ / -] button
	Music play/mute	Press [4] button
Power bank	Power bank on / off	Long press [7] button

Indicator Instruction

LED Indicator	Status
Blue indicator flashes	Waiting for pairing
Blue indicator light on	Already connected to Bluetooth-enabled device
Green indicator light on	AUX playing
Green indicator light flash	AUX mute statue
3 Battery indicator flash	charging
3 Battery indicator stay on	100% power
2 Battery indicator stay on	80%-99% power
1 Battery indicator stay on	20%-80% power
1 Battery indicator flash	0%-20% power

Aux Mode

1.Turn on your speaker,it would automatically enter into Bluetooth mode.
2.Connect music device with the speaker using the 3.5mm AUX cable.
3.It will automatically enter AUX Mode.
4.Short Press [1] button,switch to bluetooth mode.

Note:

It will turn back to Bluetooth mode after plugging out the audio cable from AUX port.

Power bank


When you need to charge your low power device,Long press [7] button to set on the power bank function.
Plug the charge cable to the power bank slot for charging your device.
After charging,long press [7] to set off the power bank function

Reset

Tap the Reset button using a toothpick or similar object to reboot the speaker if it freezes.

FAQs and Solutions

1.What should I do if the Bluetooth speaker can not power on?
-Make sure the Bluetooth speaker has been successfully charged.
2.Bluetooth speaker is not paired with my device.
-Ensure the speaker is in pairing mode and try again.
-Check if your Bluetooth device is supported by A2DP.
-Your device may be out of range, move it closer and try again.
3.Speaker standby for a long time, cannot boot.
-Battery get into protection condition, just recharge it before use.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.