


QUICK
START
GUIDE


FBK30

Bluetooth® / 2.4G

A4TECH
FSTYLER
COLLECTION

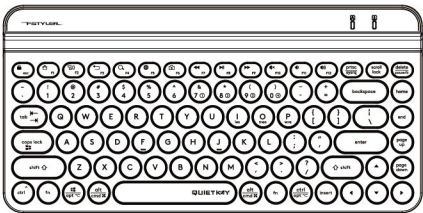

 WHAT'S IN THE BOX



Bluetooth/2.4G
Wireless Keyboard



2.4G Nano
Receiver



USB
Extension Cable




Alkaline
Battery




User
Manual


THE FRONT

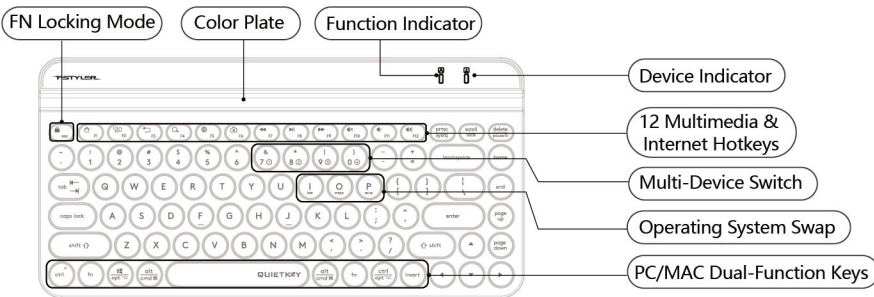


THE FLANK / BOTTOM

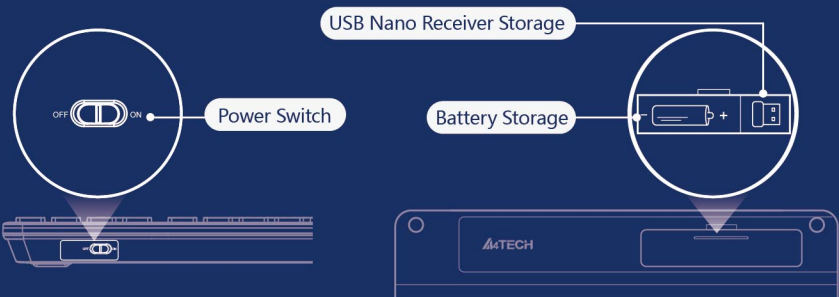

CONNECTING 2.4G DEVICE

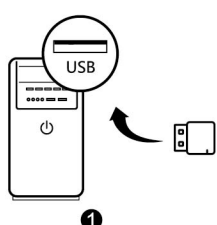

Plug the receiver into
the computer's USB port.

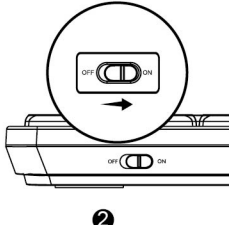

Turn on the keyboard
power switch.




Yellow light will be solid (10S).
The light will be off after connected.

Note: USB extension cable is recommended to connect with Nano receiver.
(Make sure the keyboard is closed to the receiver within 30 cm)

CONNECTING BLUETOOTH
DEVICE 1



(For Mobile Phone/Tablet/Laptop)

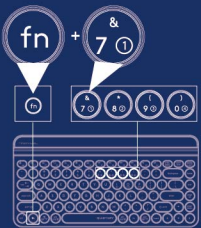

- 1: Short-press FN+7 and choose Bluetooth device 1 and light up in blue.
Long-press FN+7 for 3S and blue light flashes slowly when pairing.
2: Choose [A4 FBK30] from your Bluetooth device.
The indicator will be solid blue for a while then light off after the keyboard is connected.

CONNECTING BLUETOOTH
DEVICE 2


(For Mobile Phone/Tablet/Laptop)

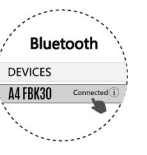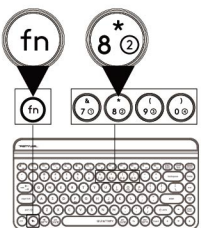

- 1: Short-press FN+8 and choose Bluetooth device 2 and light up in green.
Long-press FN+8 for 3S and green light flashes slowly when pairing.
2: Choose [A4 FBK30] from your Bluetooth device.
The indicator will be solid green for a while then light off after the keyboard is connected.

CONNECTING BLUETOOTH
DEVICE 3

(For Mobile Phone/Tablet/Laptop)

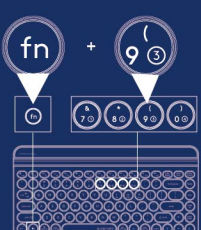

- 1: Short-press FN+9 and choose Bluetooth device 3 and light up in purple.
Long-press FN+9 for 3S and purple light flashes slowly when pairing.
2: Choose [A4 FBK30] from your Bluetooth device.
The indicator will be solid purple for a while then light off after the keyboard is connected.

OPERATING SYSTEM SWAP



Windows / Android is default system layout.

System	Shortcut [Long-Press for 3S]	Device / Layout Indicator
iOS		Light will be off after flashing.
Mac		
Windows, Chrome, Android & HarmonyOS		

Note: The layout you used last time will be remembered. You can switch the layout by following the above step.

INDICATOR

(For Mobile Phone/Tablet/Laptop)



Indicator	Yellow Light	Blue Light	Green Light	Purple Light
Multi-Device Switch				
Device Switch: Short-Press for 1S	Solid Light 10S	Solid Light 5S	Solid Light 5S	Solid Light 5S
Pair Device: Long-Press for 3S	No Need to Pair	Pairing: Flashes Slowly Connected: Solid Light 10S	Pairing: Flashes Slowly Connected: Solid Light 10S	Pairing: Flashes Slowly Connected: Solid Light 10S

FN MULTIMEDIA KEY
COMBINATION SWITCH


FN

FN Mode: You can lock & unlock Fn mode by short pressing FN + ESC by turn.



- ① Lock Fn Mode: No need to press FN key
② Unlock Fn Mode: FN + ESC

※ After pairing, FN shortcut is locked in FN mode by default,
and the locking FN is memorized when switching and shutting down.

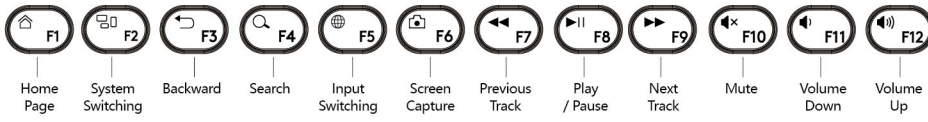

Windows / Android / Mac / iOS

OTHER FN SHORTCUTS SWITCH

Shortcuts	Windows	Android	Mac / iOS
	Pause	Pause	Pause
	Device Screen Brightness +	Device Screen Brightness +	Device Screen Brightness +
	Device Screen Brightness -	Device Screen Brightness -	Device Screen Brightness -
		Screen Lock	Screen Lock (iOS Only)
	Scroll Lock	Scroll Lock	

Note: The final function refer to the actual system.


DUAL-FUNCTION KEY



Multi-System Layout

Keyboard Layout	Windows / Android (W / a)	iOS / Mac (ios / mac)
	Switching Steps: ① Choose iOS layout by pressing Fn+I. ② Choose MAC layout by pressing Fn+O ③ Choose Windows / Android layout by pressing Fn+P.	
	Ctrl	Control ^
	Start	Option ~
	Alt	Command
	Alt (Right)	Command
	Ctrl (Right)	Option ~

LOW BATTERY INDICATOR

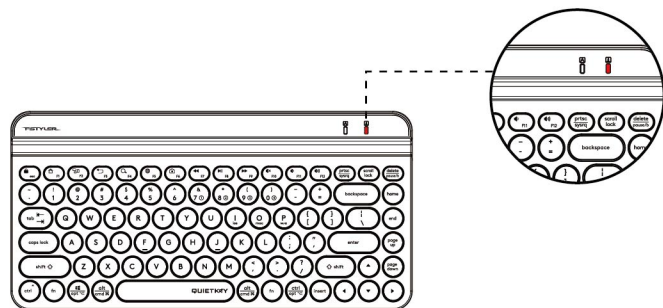

Flashing Red light indicates when the battery is below 10%.

SPECIFICATIONS



Model: FBK30

Connection: Bluetooth / 2.4G

Operating Range: 5~10 M

Multi-Device: 4 Devices (Bluetooth x 3, 2.4G x 1)

Layout: Windows | Android | Mac | iOS

Battery: 1 AA Alkaline Battery

Battery Life: Up to 24 Months

Receiver: Nano USB Receiver

Includes: Keyboard, Nano Receiver, 1 AA Alkaline Battery,
USB Extension Cable, User Manual

System Platform: Windows / Mac / iOS / Chrome / Android / Harmony OS...

Q & A

Question How to switch layout under different system?

Answer You can switch layout by pressing Fn + I / O / P under Windows | Android | Mac | iOS.

Question Does the layout can be remembered?

Answer The layout you used last time will be remembered.

Question How many devices can be connected?

Answer Interchange and connect up to 4 devices at the same time.

Question Does the keyboard remember the connected device?

Answer The device you connected last time will be remembered.

Question How can I know the current device is connected or not?

Answer When you turn on your device, the device indicator will be solid.
(disconnected: 5S, connected: 10S)

Question How to switch between connected Bluetooth device 1-3?

Answer By pressing FN + Bluetooth shortcut (7 - 9).

WARNING STATEMENT



The following actions may damage the product.

- To disassemble, bump, crush, or throw into fire is forbidden for the battery.
- Do not expose under the strong sunlight or high temperature.
- The discard of battery should obey to the local law, if possible please recycle it.
Do not dispose it as household garbage, because it may cause an explosion.
- Do not continue to use if severe swelling occurs.
- Please do not charge the battery.

EST. 1987®
A4TECH

FSTYLER
COLLECTION



www.a4tech.com



Scan for E-Manual

FCC regulatory conformance:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a **Class B** digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF Exposure

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.