

Content

1	General Information	2
1.1	Profile	2
1.2	Safety Information	2
1.3	Safety warning and Attentions	2
2	Your phone	4
2.1	Phone overview	4
2.2	Functions of Keys	4
3	Getting started	5
3.1	Installing the SIM Cards and the Battery	5
3.2	Installing T-Flash Card	6
3.3	Charging the Battery	6
3.4	Powering On/Off the Mobile Phone	7
3.5	Linking to the Network	7
3.6	Dialing Calls	7
3.7	Using the Headset	8
4	Input method	9
4.1	Icons for Input Methods	9
4.2	To Shift Entry Methods	9
4.3	Numeric Input	9
4.4	English input and numeric input:	9
4.5	Inserting a Symbol	10
5	Using the Menus	11
5.1	Talk & Call	11
5.2	Talk & SMS	11
5.3	Phone	11
5.4	SMS	11
5.5	Contacts	11
5.6	Apps	11
6	Appendix	16
7	FCC Information	18

1 General Information

1.1 Profile

Please read this pamphlet carefully in order to make your phone in perfect condition.

Our company may change this mobile phone without prior written notice and reserves the final right to interpret the performance of this mobile phone.

Due to different software and network operators, display on your phone may be different, refer to your phone for details.

1.2 Safety Information

If your phone has lost or been stolen, notify the telecommunication office the SIM card is disabled (network support is required). This can avoid economic loss caused by unauthorized use.

Please take measures as following to avoid your phone being unauthorized use:

- Set PIN code of SIM card
- Set phone password

1.3 Safety warning and Attentions

Safety warning

➤ ROAD SAFETY COMES FIRST

Do not use a hand-held phone while driving. Use hands-free fittings when calls are unavoidable while driving. In some countries, dialing or receiving calls while driving is illegal!

➤ SWITCH OFF IN AIRCRAFT

Wireless devices can cause interference in aircraft. Using a mobile phone in flight is illegal and risky.

Please make sure that your mobile phone is powered off in flight.

➤ SWITCH OFF BEFORE ENTERING RISKY AREAS

Strictly observe the relevant laws, codes, and regulations on the use of mobile phones in risky areas. Turn off your mobile phone before entering a place susceptible to explosion, such as an oil station, oil tank, chemical plant or a place where a blasting process is under way.

➤ OBSERVE ALL SPECIAL REGULATIONS

Follow any special regulations in force in any area such as hospitals and always switch off your phone whenever it is forbidden to use it or, when it may cause interference or danger. Properly use your mobile phone near medical apparatuses, such as pacemakers, hearing aids and some other electronic medical devices, as it may cause interference to such apparatuses.

➤ INTERFERENCE

The conversation quality of any mobile phone may be affected by radio interference. An antenna is built inside the mobile phone and located below the microphone. Do not touch the antenna area during a conversation, lest that the conversation quality deteriorate.

➤ QUALIFIED SERVICE

Only qualified personnel may install or repair phone equipment. Installing or repairing the mobile phone on your own may bring great danger and violates the warranty rules.

➤ ACCESSORIES AND BATTERIES

Use only approved accessories and batteries.

➤ USE SENSIBLY

Use only in a normal and proper manner.

➤ **EMERGENCY CALLS**

Ensure the phone is switched on and in service, enter the emergency number, e.g. 112, then press the Dial key. Give your location and state your situation briefly. Do not end the call until told to do so.

***Note:** Just like all other mobile phones, this mobile phone does not necessarily support all the features described in this manual due to network or radio transmission problems. Some networks even do not support the emergency call service. Therefore, do not rely solely on the mobile phone for critical communications such as first aid. Please consult the local network operator.*

Precautions

This mobile phone is well designed with fine art. Please exercise special care when using it. The following suggestions will help your mobile phone survive the warranty period and extend its service life:

- Keep the mobile phone and all its fittings beyond children's reach.
- Keep the mobile phone dry. Keep away from rain, moisture, liquid or other substances that may corrode electronic circuits.
- Do not use or store the mobile phone in dusty places, lest that active parts of the mobile phone be damaged.
- Do not store the mobile phone in a high-temperature place. High temperature will shorten the life of electronic circuits and damage the battery and some plastic parts.
- Do not store the mobile phone in a chilly place. Otherwise, moistures will be formed inside the mobile phone to damage electronic circuits when the mobile phone is moved to a constant temperature place.
- Do not throw, knock or shock the mobile phone, as that will destroy the internal circuits and high-precision components of the mobile phone.

2 Your phone

2.1 Phone overview

◆ Operating Frequency Band (RF):

GSM850: 824~894 MHz,

PCS1900: 1850~1990 MHz

WCDMA BAND II: 1850~1990 MHz

WCDMA BAND V: 824~894 MHz

Wi-Fi: 2412-2462MHz(TX/RX);

Bluetooth: 2402 MHz -2480 MHz (TX/

RX); GPS:1575.42MHz

LTE FDD Band 2 Uplink: 1850MHz-1910MHz,

Downlink: 1930MHz-1990MHz;

LTE FDD Band 4 Uplink: 1710MHz-1755MHz,

Downlink: 2110MHz-2155MHz;

LTE FDD Band 12 Uplink: 699MHz-716MHz,

Downlink: 729MHz-746MHz;

LTE FDD Band 17 Uplink: 704MHz-716MHz,

Downlink: 734MHz-746MHz;

2.2 Functions of Keys

The mobile phone provides the following keys:

◆ Left and right soft key

Press the left soft key to light up the screen, enter the standby interface, press the left soft key to enter the quick setting menu, and press the right soft key to return to the upper menu. You can also press the left soft key for specific function selection.

◆ Dial key

Press it to originate a call by entering the called number or selecting a contact from the phonebook; or press it to receive an incoming call; or press it in standby state to show the latest call records.

◆ End key

Press it to end a call being dialed or end an ongoing call; or or press it to exit the menu and return to the standby state; or hold it for two or three seconds to power on or off the mobile phone.

◆ Direction key

Press them to scroll the options when browsing function list. In standby state, press a direction key to enter the specified function page. You can also customize direction keys to match the desired functions. In conversation status, press up or down direction key to tune volume.

◆ OK key

Press it to confirm your selection.

◆ Number keys, * key and # key

Press number keys 0 through 9 to input or edit state to input numbers and characters;

The # key and the * key represent different functions in different states or different function menus.

Press the #key in edit state to switch between input methods.

Press the * key to show symbol select view.

When the keypad is locked, you can press left soft key then * key to unlock it.

3 Getting started

3.1 Installing the SIM Cards and the Battery

An SIM card carries useful information, including your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (PIN Unlocking Key), PUK2 (PIN2 Unlocking Key), IMSI (International Mobile Subscriber Identity), network information, contacts data, and short messages data.

Note:

After powering off your mobile phone, wait for a few seconds before removing or inserting an SIM card.

Exercise caution when operating an SIM card, as friction or bending will damage the SIM card.

Properly keep the mobile phone and its fittings such as the SIM cards beyond children's reach.

Installation

- ◆ Hold the End key for a while to power off the mobile phone
- ◆ Push the back cover above the battery and remove it.
- ◆ Pull the battery buckle outward and then lift the battery away.
- ◆ Insert the SIM card into the SIM card slot lightly with the corner cutting of the card aligning to the notch of the slot and the gold plate of the card facing down, till the SIM card cannot be further pushed in.
- ◆ With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down until it locks into place.

Usingcode

The mobile phone and the SIM cards support sorts of passwords, in order to prevent the phone and the SIM cards from being misused. When you are prompted to input any of the codes mentioned below, just input the correct code and then press the OK key. If you input a wrong code, press the Right soft key to clear it and then input the correct code.

◆ Phone lock code

The phone lock code may be set to prevent your mobile phone from being misused. In general, this code is provided along with the mobile phone by the manufacturer. The initial phone lock code is set to 1234 by the manufacturer. If the phone lock code is set, you need to input the phone lock code when powering on the mobile phone.

◆ PIN

The PIN (Personal identification number, 4 to 8 digits) code prevents your SIM card from being used by unauthorized people. In general, the PIN is supplied with SIM card by the network operator. If PIN check is enabled, you need to input the PIN each time when you power on your mobile phone. The SIM card will be locked if you input wrong PIN code for three times.

Unlocking methods as follows:

- Input the correct PUK according to the screen tips to unlock the SIM card.
- Then input the new PIN and press the OK key.
- Input the new PIN again and then press the OK key.
- If the input PUK is correct, the SIM card will be unlocked and the PIN will be reset.

Note: *The SIM card will be locked if you input wrong PIN code for three times. To unlock the SIM card, you need to input the PUK. In general, the PUK can be obtained from the network operator.*

◆ PUK

The PUK code (Personal Unlocking Key) is required to change a blocked PIN. It is supplied with SIM card. If not, contact your network operator. If you input wrong PUK code for 10 times, SIM card will be invalid. Please contact the network operator to replace the SIM card.

◆ Barring code

A barring code is required for setting the call barring function. You can obtain this code from the network operator to set the call barring function.

3.2 Installing T-Flash Card

The T-Flash card is a pluggable mobile storage card inside the mobile phone.

To install the T-Flash card, place its indented side downward, insert the card into the card slot, till cannot push in.

To remove the T-flash card, slightly take the card out, finish remove.

Note:

- 1. The mobile phone cannot automatically identify the T-flash card being inserted when the mobile phone is powered on. You must power off the mobile phone and then power it on, so that the phone can identify the T-Flash card.*
- 2. The T-Flash card is a miniature object. Keep it out of the reach of children for fear that children swallow it!*

3.3 Charging the Battery

The lithium battery delivered with the mobile phone can be put into use immediately after being unpacked.

Battery level indication:

- ◆ Your mobile phone can monitor and display the battery state.
- ◆ Normally the remaining energy of the battery is indicated by the battery level icon at the upper right corner of the display screen.
- ◆ When the battery energy is insufficient, the mobile phone prompts "Battery low". If you have set an alert tone, an alert tone will be given off when the battery level is too low.
- ◆ A charging animation appears when the battery is being charged. When the charging is complete, the animation disappears.

Using a travel adapter:

- ◆ Install the battery into the mobile phone before charging the battery.
- ◆ Connect the adapter of the travel charger with the charging slot in the mobile phone. Ensure that the adapter is fully inserted.
- ◆ Insert the plug of the travel charger to an appropriate power outlet.
- ◆ During the charging, the battery level grids in the battery icon keep flickering till the battery is fully charged.
- ◆ It is normal when the battery is become hot during the charging period.
- ◆ The battery icon does no longer flicker when the charging process ends.

Note:

Ensure that the plug of the charger, the plug of the earphone, and the plug of the USB cable are inserted in the right direction. Inserting them in a wrong direction may cause charging failure or other problems.

Before the charging, ensure that the standard voltage and frequency of the local mains supply match

the rated voltage and power of the travel charger.

Using the Battery

The performance of a battery is subject to multiple factors: radio network configuration, signal strength, ambient temperature, chosen functions or settings, phone fittings, and the voice, data or other application mode you choose to use.

To guarantee the optimal performance of your battery, please stick to the following rules:

- ◆ Use only the battery provided by the vendor. Otherwise, damages or even injuries could be caused during the charging.
- ◆ Power off the mobile phone before removing the battery.
- ◆ The charging process lasts a longer time for a new battery or a battery not in use for long. If the battery voltage is too low to enable the mobile phone to be powered on, charge the battery for a longer time. In this case, the battery icon does not flicker until a long time after the battery enters the charge status.
- ◆ During the charging, ensure the battery is placed in a room temperature environment or in an environment close to room temperature.
- ◆ Immediately stop using the battery if the battery produces odor, overheats, cracks, distorts or has other damage, or if the electrolyte leaks.
- ◆ The battery wears out with use. A longer charging time is required as the battery is put into use for a long time. If the total conversation duration decreases but the charging time increases even though the battery is properly charged, purchase a standard battery from the OEM or use a battery approved by our company. Using any poor-quality fittings will cause harm to your mobile phone or even incur danger!

***Note:** To guarantee your personal safety and protect the environment, do not litter the battery! Return the old battery to the mobile phone manufacturer or place it in specified battery reclamation areas. Do not litter any battery with other rubbish.*

Warning: Short-circuits of the battery may cause explosion, fire, personal injury or other severe consequences!

3.4 Powering On/Off the Mobile Phone

Hold the End key for a while to power on the mobile phone. A power-on animation appears on the display screen.

Input the phone lock code and press the OK key if the mobile phone prompts you to input the phone lock code. The original code is 1234.

Input the PIN and press the OK key if the mobile phone prompts you to input the PIN. The PIN is provided by the network operator for new opening SIM card.

Enter the standby interface.

To power off the mobile phone, hold the End key for a while.

3.5 Linking to the Network

After the SIM card and the mobile phone are successfully unlocked, the mobile phone automatically searches for an available network. After finding a network, the mobile phone enters the standby state. When the mobile phone is registered in the network, the name of the network operator is displayed on the screen. Then you can dial or receive a call.

3.6 Dialing Calls

In the standby interface, press number keys to input the area code and the telephone number,

and then press the Dial key to dial a call. To end the call, press the End key.

◆ **Dialing an international call**

Press quickly * key and input "+". Then input the country code, the area code and the telephone number. Finally, press the Dial key.

◆ **Dialing a call to a number in the phonebook**

Enter the phonebook and use the up or down direction keys to find the telephone number you want to call.

Press the Dial key. The mobile phone automatically dials the chosen telephone number.

◆ **Redialing the last number**

In the standby interface, press the dial key to show the dialed calls.

Press the up or down direction keys to select a number you want to dial and then press the Dial key.

◆ **Answering incoming calls**

Press the Dial key or the Left soft key to answer an incoming call.

Press the End key to end the current conversation.

To reject an incoming call, press the End key or the Right soft key.

***Note:** If the caller can be identified, the mobile phone will present the calling number. If the calling number exists in the phonebook, the mobile phone will present both the name and the phone number of the caller. If the caller cannot be identified, the mobile phone will present the calling number only. You can answer an incoming call when using a function list or browsing the phonebook.*

◆ **Using options during a conversation**

Select Options during a conversation to pause, end the ongoing call, originate a new call, browse the phonebook, view information, set the mute, or perform other operations. For details, refer to the menu guide.

3.7 Using the Headset

It would enter headset mode automatically when you insert headset to the slot. Make sure of inserting it at the bottom of the slot, or you can't use it normally.

4 Input method

This mobile phone provides multiple input methods, including English input and numeric input. You can use these input methods when editing the phonebook, short messages, files and greeting text.

4.1 Icons for Input Methods

After you enter an edit window such as a window for editing the phonebook, short messages or the memorandum, an icon is displayed to indicate the current input method:

Numeric input: “123”

Smart English input in lower case: “Abc”

4.2 To Shift Entry Methods

Press the # key to switch between input methods.

4.3 Numeric Input

You can input numbers with the numeric input method. Press a number key to input the corresponding number.

4.4 English input and numeric input:

The keyboards for English input and numeric input are defined in the following table:

Key	Character or Function	Remarks
Number key 1	. , - ? ! ' @ : # \$ / _ 1	
Number key 2	ABCabc2	
Number key 3	DEFdef3	
Number key 4	GHIghi4	
Number key 5	JKLjkl5	
Number key 6	MNOmno6	
Number key 7	PQRSpqrs7	
Number key 8	TUVtuv8	
Number key 9	WXYZwxyz9	
Number key 0	0,the blank space	
* key	Press it to input a symbol	
# key	Press it to switch between input methods	
Left direction key	Press it to move to the left	
Right direction key	Press it to move to the right	
Left soft key	Equivalent to OK or Options	
Right soft key	Equivalent to Back or Clear	
End key	Press it to return to the standby interface	

English input:

- Each key is used to represent multiple characters. Quickly and continuously press a key till the character you want appears. Input the next character after the cursor moves.
- Press the # key to switch between input methods

- To input a blank, switch to the English input mode (in upper or lower case) and then press number key **0**.
- To clear wrong inputs, press the **Right soft** key.

4.5 Inserting a Symbol

Press the * key to enter the **Select symbol** interface, use direction keys to select a symbol you want.

5 Using the Menus

5.1 Talk & Call

You can make phone calls by voice.

5.2 Talk &SMS

You can send messages by voice.

5.3 Phone

Incoming calls

You can view all incoming calls. Choose **received calls** and then select the received call to be called, write the message, add to the contact, add to the blacklist, delete, remove all and mark.

Outgoing calls

You can view all the dialed calls. Select dialed call to call, then select dialed call to call, write message, add to contact, add to blacklist, delete, delete all and mark.

Missed calls

You can view the latest list of missed and rejected calls.

Note: when the phone shows some missed or rejected calls, you can select **OK** to enter the list of missed calls. Navigate to missed calls, then press option to select details, calls, write messages, add contacts, add blacklists, delete, and delete everything.

5.4 SMS

You can send messages through the SMS, but it's not the default messaging app on your phone.

5.5 Contacts

The mobile phone can store up to 500 telephone numbers. The number of telephone numbers that an SIM card can store depends on the storage capacity of the SIM card. The telephone numbers stored in the mobile phone and in the SIM cards form a phonebook.

After selecting a telephone number in the contacts, select **Options** to perform the following operations:

- ◆ **New contact:** Create new contact.
- ◆ **Delete:** Delete the telephone number from the contacts.
- ◆ **Transfer contacts:** You can use bluetooth and the MLS Easy Launcher feature to transfer your phone's connections to other parts of the phone.

5.6 Apps

Camera

The phone is provided with a camera, you can take photos.

Photos

You can view the photos taken by the camera through this feature.

Pharmacies

You can check your local drugstore, its address, phone number and other basic information.

Weather

You can check the weather conditions for the coming week after connecting to the Internet

Settings

◆ **Rintone**

You can set your ringtone or choose the default ringtone.

◆ **Message sound**

You can set your informational ringtone or choose the default ringtone.

◆ **Sound volumes**

You can set the volume of calls, messages and voice sound volumes.

◆ **Screen lock**

You can set screen locks, including lock free, simple and pin code.

◆ **Screen idle time**

You can set the brightness screen time.

◆ **Screen brightness**

You can choose brightness level for your screen.

◆ **Change lockscreen wallpaper**

You can take a picture as a lock screen wallpaper.

◆ **SIM cards**

You can set some information about the phone's sim card.

◆ **Set My Phone Number**

You can enter a number as My Phone Number.

◆ **Primary contacts**

You can add some primary contacts.

◆ **Call settings**

You can set the function about making phone calls.

◆ **Keyboard settings**

You can choose familiar languages for your keyboard.

◆ **MAIC Setting**

You can set some functions about maic.

◆ **SOS Button**

This is an emergency help button. You can press it when you are in danger.

◆ **Set SOS Message**

You can set up some information about emergency help.

◆ **Power save mode**

You can turn it on in power-saving mode when your phone's battery is low.

◆ **System Settings**

You can set some system information here, such as battery, bluetooth, wifi, time and so on

◆ **Language**

You can choose the phone's default language and download the voice pack.

MLS Updater

You can update the version of MLS and view some mobile information such as device number here.

Easytube

You can see video here.

MLS Live

You can check the recent weather, nearby drugstores, hospitals, gas stations, coffee shops, Banks, restaurants, parking lots and so on.

Clock

Turn on the clock and you can see the world time as well as the alarm Settings, stopwatch and timer.

Calendar

You can open Calendar to creat and view events you've created.

Select the Calendar icon in the main menu interface.Events from each account you've added to your phone and configured to synchronize calendars are displayed in Calendar.

Music

You can play music on your phone.

Browser

You can browse the web, search for information on the Internet and so on after connecting to the Internet.

Calculator

The calculator can add, subtract, multiply and divide. To use the calculator:

- ◆ Press the up, down, left and right key to select $+$, $-$, \times , \div , respectively.
- ◆ Press right soft key to delete the figure.
- ◆ Press OK key to get the result.

Call Fire Wall

You can add nuisance Numbers to set up call, information firewall.

Contacts

You can add, edit, find, and delete contact information.

Add contact: Select add contacts icon in the left down side, fill in the information and save it.

Contacts to display: You can set the option to display all contacts or phone /sim card contacts.

Import/Export: you can import/export the contacts form SIM card or storage; you can also share the visible contacts.

Batch delete : You can batch select contacts stored in the address book to delete.

SIM capacity: Cell phone card storage capacity details and maximum capacity.

Downloads

You can use Downloads to view a list of files and applications which you downloaded from the web page.

Extra

You can see some of the extra features of the phone and use them.

Family

You can add the number in the address book to the family number.

Fire Explorer

You can manage audio, photos, video, files and sd card files in your phone here.

Firefox

You can use firefox to view webpages and search for information on the web.

FM radio

You can use the application as a traditional FM radio with automatic tuning and saved channels. In FM radio interface, left or right direction icon to search channels manually, ok key to play/pause the playing process of the current channel.

Gallery

Both pictures and videos taken by camera or stored in the phone and the SD card can be scanned through this function.

Nikie

This is about Nikie phone language and other basic Settings

Note

You can create different folders and record your lists, your mood, minutes of meetings, important things in different files, etc

SIM Toolkit

STK service is the tool kit of SIM card. This phone supports the service function .The specific items are depended by SIM card and network. Service menu will be auto added to the phone menu when supported by network and SIM card.

SOS

You can do some emergency Settings.

Sound Recorder

Use this application to record audio files. Three function icons at the bottom of the Recorder

screen are corresponding to configure recorder, start recording and view recording file list.

Torch

You can press ok to turn the torch on or off.

Video Player

You can choose to play video inside the phone including some downloads, recorded video.

6 Appendix

Appendix 1: Troubleshooting

If you find exceptions when operating the mobile phone, restore the factory settings and then refer to the following table to solve the problem. If the problem persists, contact the distributor or service provider.

Fault	Cause	Solution
SIM card error	The SIM card is damaged.	Contact your network service provider
	The SIM card is not in position.	Check the SIM card
	The metal face of the SIM card is polluted.	Clean the SIM card with a clean cloth
Poor received signal quality	Signals are obstructed. For instance, radio waves cannot be effectively transmitted nearby a high building or in a basement.	Move to a place where signals can be effectively transmitted
	Line congestions occur when you use the mobile phone in high-traffic hours	Avoid using the mobile phone in high-traffic hours
The mobile phone cannot be powered on	The battery energy is exhausted.	Charge the battery

Calls cannot be dialed	Call barring is activated	Cancel call barring
The mobile phone cannot connect the network	The SIM card is invalid	Contact your network service provider
	The mobile phone is not in a service area of the GSM network	Move to the network operator's service area
	The signal is weak	Move to a place where the signal quality is high
The battery cannot be charged	The charging voltage does not match the voltage range indicated on the charger	Ensure the charging voltage matches the voltage range indicated on the charger
	An improper charger is used	Use the charger specially designed for the mobile phone
	Poor contact	Ensure the charger plug is in good contact with the mobile phone

FCC compliance statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

Important: Changes or modifications to this product not authorized by JOSH COMMUNICATION TECHNOLOGY CO.,LIMITED could void the electromagnetic compatibility (EMC) and wireless compliance and negate your authority to operate the product.

This product has demonstrated EMC compliance under conditions that included the use of compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables between system components to reduce the possibility of causing interference to radios, televisions, and other electronic devices.

SAR Statement:

This Smart Phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types:DL241(FCC ID:2AXY3DL241) has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.