

# Bluetooth Speaker

## INSTRUCTION MANUAL

### Getting Started

- Remove the product from the box.
- Remove any packaging from the product.
- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

### Package Contents

- Bluetooth Speaker
- USB charging cable
- 2M microphone
- Instruction Manual


### Key Features

- Built-in Bluetooth – connect & stream wireless music anytime, anywhere
- Streams music from up to 10m away
- Built-in stereo speakers that deliver high definition sound
- Multi-function speaker – supports USB flash drives, Micro SD cards, FM radio and Aux jack
- Built-in USB rechargeable battery

### Safety Instructions

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This unit is not a toy.

## Description of Parts

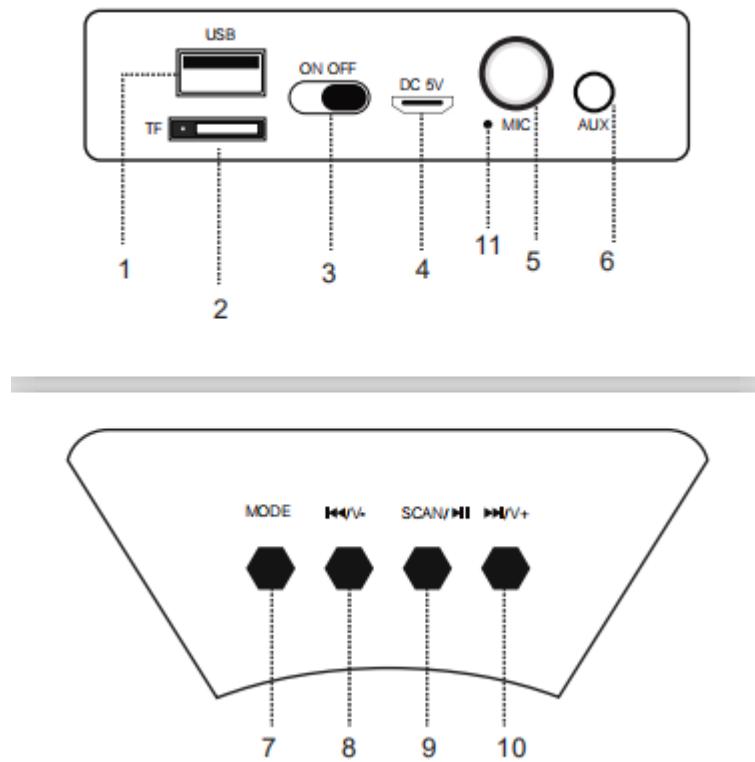

## Location of Controls

| Number | Item                                 | Function                                                                     |
|--------|--------------------------------------|------------------------------------------------------------------------------|
| 1      | USB slot                             | USB input (Flash Drive)                                                      |
| 2      | Micro SD (TF) slot                   | Micro SD (TF) card input                                                     |
| 3      | ON/OFF SWITCH                        | Turn the speaker On or Off                                                   |
| 4      | DC 5V IN                             | Charging port                                                                |
| 5      | MIC IN                               | Microphone input                                                             |
| 6      | AUX IN                               | External audio input                                                         |
| 7      | MODE                                 | Short press to change the mode between Bluetooth / FM radio / USB / SD / AUX |
| 8      | PREVIOUS<br>TRACK/Decrease<br>VOLUME | Short press:Skip to previous track<br>Long press:Decrease the speaker volume |
| 9      | PLAY/PAUSE/SCAN                      | PLAY/PAUSE, scan FM radio stations (only in FM radio mode)                   |
| 10     | NEXT TRACK/Increases<br>VOLUME       | Short press:Skip to NEXT track<br>Long press:increase the speaker volume     |
| 11     | CHARGING INDICATOR                   | Turns RED while charging. Turns off when fully charged                       |

## **INSTRUCTIONS FOR USE**

### **Charging the Bluetooth Speaker**

#### **For best results, fully charge the unit before use.**

1. Plug the Micro USB end of the included USB charging cable into the charging port of the speaker.
2. Plug the other end into a USB port on your computer or USB power source with 1A output.
3. Charging Indicator turns RED while charging, and turns off when fully charged

Note: Before using the unit for the first time, please charge it for around 3-4 hours or until the Charging Indicator turns off.

### **Turn On/Off the Speaker**

Slide the ON/OFF SWITCH to ON position to turn on the unit with colour changing LED lights, or OFF position to turn off the unit.

### **Pairing your device with the Speaker –**

Your **Bluetooth Speaker** can stream wireless audio from any Bluetooth enabled device within the range of up to 10m. Simply follow the below steps.

1. Turn ON the speaker.
2. Indication tone would be heard. The speaker is now in pairing mode.
3. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
4. It will search for available Bluetooth devices.
5. Bluetooth Speaker would appear as “**ZBT-098**”, in the list of searched devices. Select it from the available list of devices.
6. If required, enter the password ‘0000’ to confirm pairing.
7. Once paired successfully, another indication tone would be heard.
8. If you fail to pair it within a few seconds or you want to pair it with a new device, please repeat above steps.

Play your favourite song on the Bluetooth source device and music would now stream through the speaker.

## Listening to Wireless Music

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the speaker to stream wireless music. Once it is paired, play music from your device.

| Function                   | Operation     | Button                                                                                                                            |
|----------------------------|---------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Increase / Decrease Volume | Playing music | LONG press V+/V- to adjust the volume to your desired level, or<br>Adjust volume from the source device (in Bluetooth mode only). |
| Pause                      | Playing music | Short press PLAY/PAUSE/SCAN button once to pause music                                                                            |
| Play                       | Pause         | Short press PLAY/PAUSE/SCAN button once to resume music                                                                           |
| Previous track             | Playing music | Short press the PREVIOUS TRACK/STATION button to the previous track                                                               |
| Next track                 | Playing music | Short press the NEXT TRACK/STATION button to the next track                                                                       |

## Listening to Music using USB / Micro SD (TF) Card Slot

1. Turn on the speaker.
2. Insert USB flash drive into the USB slot or Micro SD (TF) card into the Micro SD (TF) card slot accordingly. and music would play automatically.
3. Short press the NEXT TRACK/STATION button or PREVIOUS TRACK/STATION button to move forward or backward on your playlist.
4. Short press PLAY/PAUSE/SCAN button to Play or Pause a track.

## Listening to Music using AUX-In

1. Turn on the speaker.
2. Plug cable (included) into the AUX-In port of the speaker. Short press the MODE button each time until it reaches LINE mode. An indication tone would be heard. Plug the other end of the Aux-in cable to the audio device (such as MP3 Player, Computer, Tablet etc.).
3. Select your favourite song at the source device to play.

**(Note:** While using AUX-In function, except volume function, all functions such as playing next/previous track can be controlled only through your source device).

## **Listening FM radio**

1. Turn on the speaker.
2. Short press the MODE button each time until it reaches FM radio mode, a FM radio frequency with sound.
3. Press and hold the PLAY/PAUSE/SCAN button 2-3 seconds for searching and recording all radio stations within frequency range 87.5-108MHz.
4. Short press the NEXT TRACK/STATION button or PREVIOUS TRACK/STATION button for listening next or previous already saved radio station.

## **Tips!!**

1. Short press the MODE button to switch different functions of the speaker. The functions are – Bluetooth / FM radio / AUX / USB-Micro SD (TF).
2. When the speaker is not in use, turn OFF the device to save the battery power.
3. Do not overcharge the speaker.

## **Using the Microphone**

1. Turn on the speaker
2. Insert the plug of the Microphone (not included) into the MIC INPUT of the speaker.
3. Turn on the Microphone, and speak for microphone operation or sing for Karaoke operation.
4. Turn VOLUME KNOB to adjust the desired level.

## **Do's and Don'ts**

- Do not play music at excessive levels as damage to hearing and/or equipment may result.
- Do not use outdoors in wet or in damp surroundings.

## **Care and maintenance**

Clean the unit with a soft, dry cloth. Never use chemicals or hard abrasives.

Keep this unit away from wet or damp surroundings.

## **Product Specifications:**

Bluetooth version: 5.0

Unit size: 192mm L x 121mm W x 264mm H

Unit weight: ~0.8Kg

Power input: DC 5V

Charging time: 3-4 hours

Play time: 1 to 2 hours (maximum volume)

Bluetooth range: 10m

FM frequency range: 87.5-108MHz

Built-In Rechargeable Lithium Battery: 3.7V 1200mAh

(Note: Battery life & charging time may vary based on usage, types of devices connected & wireless distance.)

## TROUBLESHOOTING

| Problem                 | Possible Cause                                                                                      | Solution                                                                                                                                                                                                   |
|-------------------------|-----------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Low sound level</b>  | Source (Tablet, Mobile Phone, Laptop, etc.) volume too low.<br>Battery dead                         | Adjust source volume.<br>Charge battery.                                                                                                                                                                   |
| <b>No sound</b>         | Volume in minimum position.<br>The connected device is not in play mode.<br>Input source incorrect. | Long press V+ to increase the volume.<br>Play the music in the connected device and make sure the volume level is in high level.<br>Press the MODE button to set the input source to the desired function. |
| <b>Sound distortion</b> | Volume level too high                                                                               | Long press V- to decrease the volume.                                                                                                                                                                      |

## Information on Disposal for Users of WEEE

The wheelie bin symbol on the product(s) and / or accompanying documents means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge.

Alternatively, in some countries, you may be able to return your products to your local retailer upon purchase of an equivalent new product.

Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling.

Please contact your local authority for further details of your nearest designated collection point

## FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.