

World
Scanner
Go

www.e-pens.com

Introduction to the World Scanner Go

Thanks for choosing the World Scanner Go. This guide will outline everything you need to know to help you start scanning.

After connecting to the internet, you will have full access to all features mentioned throughout this guide.

 
 
Package Contents

- World Scanner Go
- USB-C cable
- User guide
- 3.5mm wired headphones

Product Specifications


- Product Name: World Scanner Go
- Screen: 2.98 inches (resolution 800*268)
- Capacity: 8GB
- Lens: 0.3 mega pixels
- Use environment: 0-45°C
- Product size: 146.5*31.6*14.3mm
- Speaker: 8-ohm, 1-watt single speaker
- Transmission and chargeable cable: USB-C cable (Type C)
- Battery: 1050mAh rechargeable lithium polymer battery

Parts of the World Scanner Go

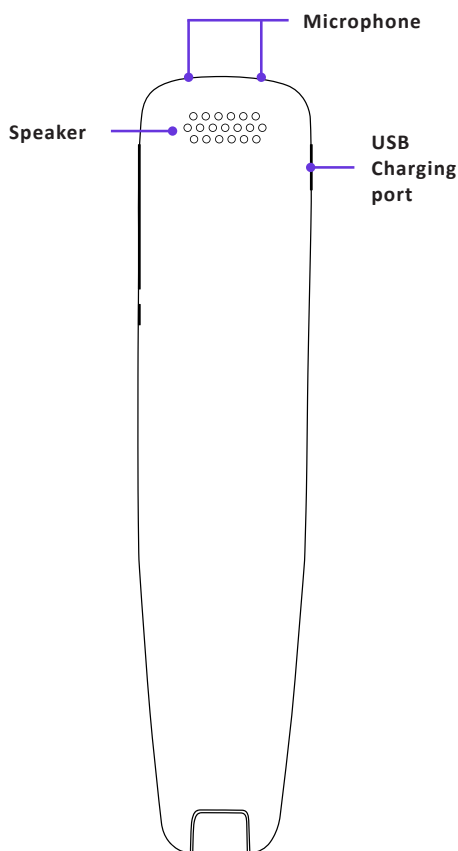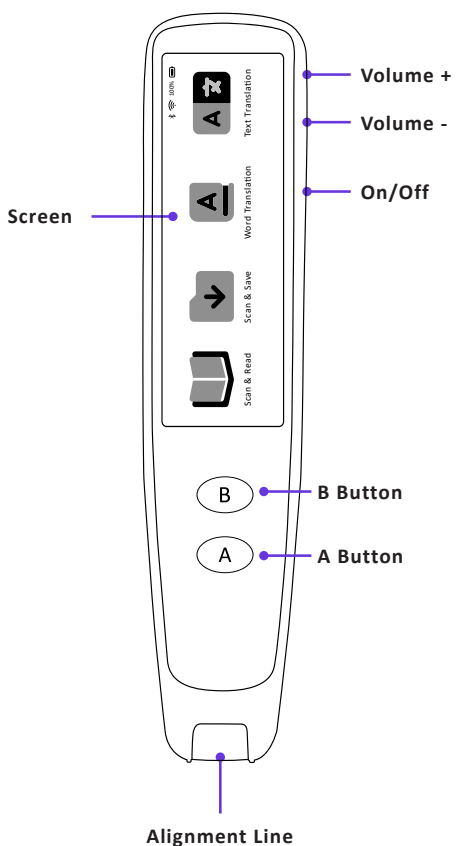

Getting Started


Power On/Off

Hold the **Power On**  button to the side of the pen for about 3 seconds until the start-up screen appears.


Menu Navigation

To navigate the menu, simply swipe along the touchscreen and tap on any of the icons available.

Connecting to Wi-Fi

Go to **Settings**  and make sure the Wi-Fi option is turned on. Available Wi-Fi options should then appear. Choose the relevant connection, and if successful, the Wi-Fi icon should appear in the top right corner of the screen.


Left or Right-Handed Option

Before you start scanning, it is important to check the screen orientation matches your preferred scanning hand. To do this, go to **Settings**  and tap relevant orientation.

 
 
Here, you can flip the screen so it is correctly viewable for left/right-handed use.

Available Functions

(1) Scan & Read


Tap the **Scan & Read**  on the home screen.

Hold the pen at a slight angle, then press the tip of the pen over the word until it lights up. To scan, ensure the black line on the tip is in the middle of the text and then slowly drag the pen from left to right over a word or sentence at a consistent speed.




Once you have finished scanning, lift the pen off the page. A voice will read aloud what you have scanned.



(2) Scan & Save

Tap the **Scan & Save**  on the home screen and create a file. You can then Scan & Save the document.

Once you have finished scanning, you will be able to edit the file name or delete the file.

(3) Voice Recorder

To enable voice recorder, tap the **Voice Recorder**  on the home screen, where you will then be asked to create a new file.


Tap **Microphone**  to start recording. Press the microphone again to stop the recording. Press  to save your recording.



Online Functions

NOTE: The following section details features that require access to a WiFi network.


(1) Word Translation

Word Translation allows you to get definitions of words you have scanned.

To use this function, on the home screen, tap the **Word Translation** . Scan your desired text, then tap a word for its definition.

To have the definition read aloud, tap the **Speaker**  and to add a word into the built-in storage, tap the **Star** .


(2) Text Translation

The Text Translation function provides a range of languages. From the home screen, tap **Text Translation** . Swipe from the right side of the screen to select languages.

Scan a sentence and press **Go Translate**. The translation will show up on screen and the translation will be read aloud.

(3) Voice Translation

Voice Translation allows you to speak into the pen and translate up to two languages at a time.

Tap **Voice Translation**  and then choose the languages you are going to use, assigning them to the A and B buttons.

To start translating, press and hold either the A or B button and begin speaking.

 
After you release the button, you can begin translating the text into the two languages you have chosen and have it read aloud.

USB Charging

You will be notified when the battery of the World Scanner Go is low, so be sure to get to an outlet as soon as possible.

The World Scanner Go uses a rechargeable battery powered by USB-C (included) and takes between 2-3 hours to reach a full charge.

The charging port can be found on the side of the device.

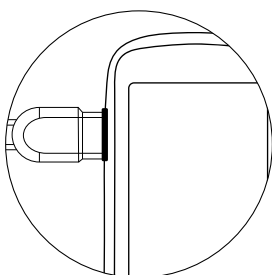


Device Connection

This product is designed for use with both Windows/Mac computers and Android devices.


Volume Adjustment

Use the + and – buttons on the right side of the pen to adjust the volume to a comfortable level.

Force Shutdown

Long press the **Power**  button on the right side of the pen for at least 10 seconds. The system will then force shutdown, after which you can power on the World Scanner Go as usual.

Software Update

Select **Settings**  and navigate to **Software Update**. Use the **Check for Updates** option to check that you have installed the most up-to-date software.

If you do not have the most recent software version installed, you will be given the option to **Download Update**.

WARNING. Before updating system software, ensure that the device has sufficient power (50% battery and is connected via USB to a charging port). Do not attempt to use the device whilst the system installation is being downloaded.

Usage Notice

Safety

- Do not expose this product to direct sunlight or extreme heat.
- This product is not a toy. Users under the age of 4 should use this product under adult supervision.
- Do not soak this product and its accessories in liquids.
- Before using the charger, check whether the wires, plugs, shells, or other

parts are damaged. If damage is found, stop using immediately until repaired.

- This product can only be used with the recommended power supply (recommended power supply specification 5V-1A) and power supply that complies with certification specifications and meets the standard requirements.
- Built-in 1050mAh lithium polymer battery cannot be removed or replaced. If damaged, please contact post-sales service for guidance around repair.
- The charger should be used under adult supervision.
- For user safety, the device cannot be used while charging.

Cautions

- Only use the same type or equivalent type of battery to replace.
- For your safety, please do not expose the battery to environments prone to causing overheating such as fire or direct sunlight.

Troubleshooting

ERROR	TRY
Boot failed	Charging the device
Computer cannot detect pen	Using the USB Cable that came with the product
Pen does not read out after scanning	Ensure Mute mode is off in Word Translation menu.
No Voice Translation	Ensure device is connected to WiFi network
Touchscreen unresponsive	Long press the Power button for 10 seconds to force shutdown then boot as usual
No scanning registered	Adjust posture to ensure full contact with the page
Other	Contact Customer Services.

For more detailed solutions
and FAQs, refer to:

www.e-pens.com



You can also explore the
Contact Us section on the
webpage to speak to one
of the team.

WARRANTY INFORMATION

You can find warranty details
on our website:

www.e-pens.com

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.