

**WR04-08CH**

 
INS-101-C019

A-13 October 2024


# TABLE OF CONTENTS

<b>1. Introduction .....</b>	<b>1</b>
<b>2. Initial Setup Programming.....</b>	<b>3</b>
<b>3. Adjusting Limits.....</b>	<b>5</b>
<b>4. Adjusting Motor Speed.....</b>	<b>6</b>
<b>5. Mirroring Remote.....</b>	<b>7</b>
<b>6. Percentage Mode and Tilt Mode.....</b>	<b>8</b>
<b>7. Additional Features.....</b>	<b>10</b>

# Introduction

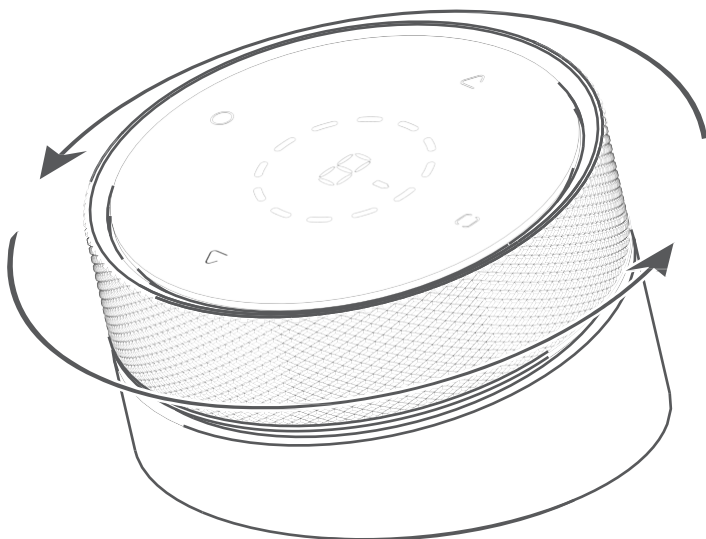


## Button Function Description

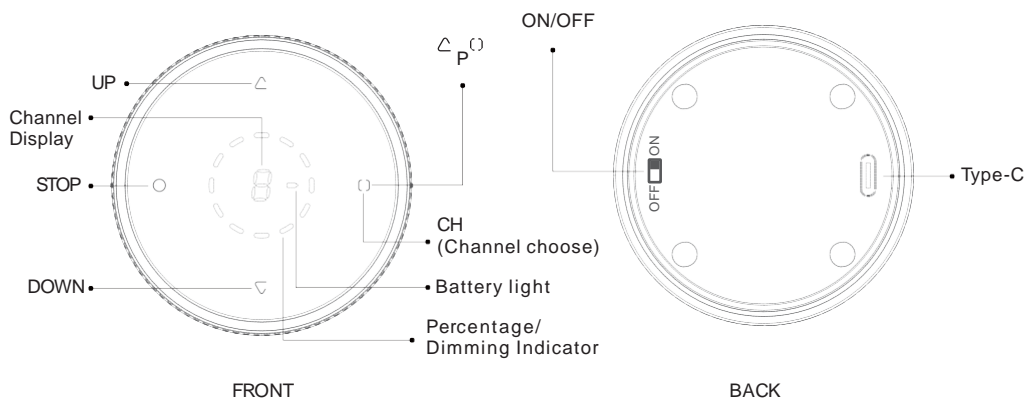 


# Introduction

## Technical Support

Technical specification	Function instruction
<ul style="list-style-type: none"><li>Input voltage: 3.7V</li><li>Transmitting frequency: 433.925MHz</li><li>Transmitting power: 10 Milliwatt</li><li>Operating temperature: -5°C~50°C</li><li>Transmission distance: outside: 200 meters, inside (between two walls): 35 meters</li></ul>	<p>One number of screen means one control channel. Press "channel choose" button  to change the channel. On the analogy of this, loose finger when the screen shows the suitable channel that you select effective channel. If screen number show "o" that means all channels if effective (group control state).</p> <p><b>Notice:</b> Emitter couldn't be exposed to moisture and struck, otherwise it may affect the product's durability. When you use emitter, if found emission distance obviously short or less sensitive, please change another same new battery. Please have batteries for recycling.</p> <p><b>Caution:</b> Risk of explosion If battery is replaced by an Incorrect type Dispose of used batteries according to the instructions.</p>

 
## Wall Mounted Magnetic Suction Bracket

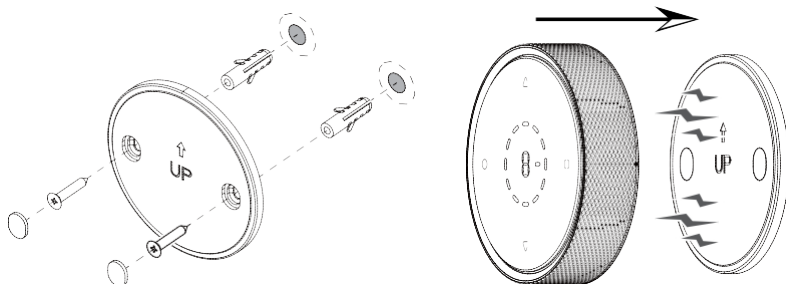

Place the magnetic bracket horizontally on the wall, mark the wall through the two small holes in the middle, fix the magnetic bracket at the marked position with screws, and then attach the rubber pad.

# Initial Setup Programming
 
## Pairing Remote To Motor

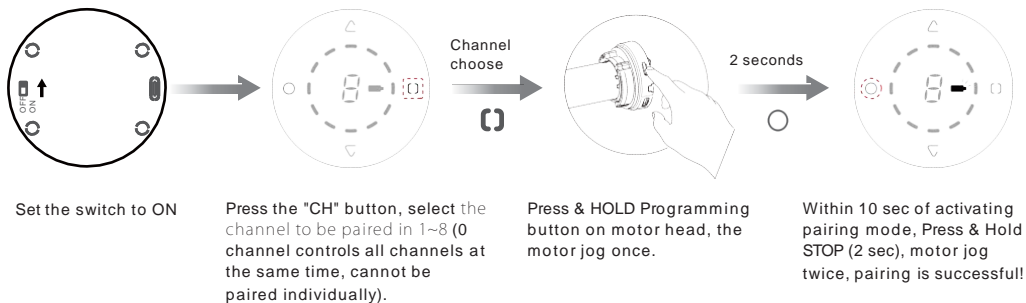

Note

· Repeat the above steps to remove this remote channel.

## Change Motor Direction (If Needed)

### First method:

Before continuing, check the motor direction by holding UP or DOWN. If the shade doesn't behave as expected, change the motor direction. This is only possible during initial set-up.



 
Hold Up and DOWN for 2 seconds

Shade will jog once

## Change Motor Direction (If Needed)

### Second method:

If the limits have already been set, the first method will not work. Please follow the second method.

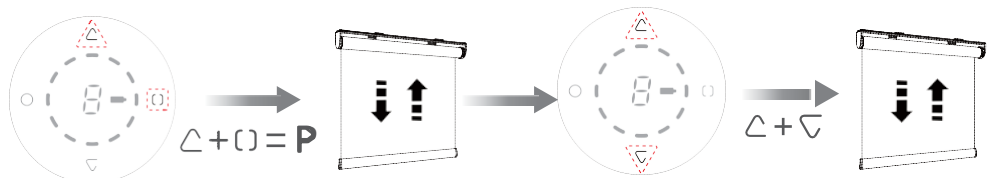

Press PAIR/P


Shade will jog once

Press Up and DOWN


Shade will jog once

# Initial Setup Programming
 
## Set Top Limit

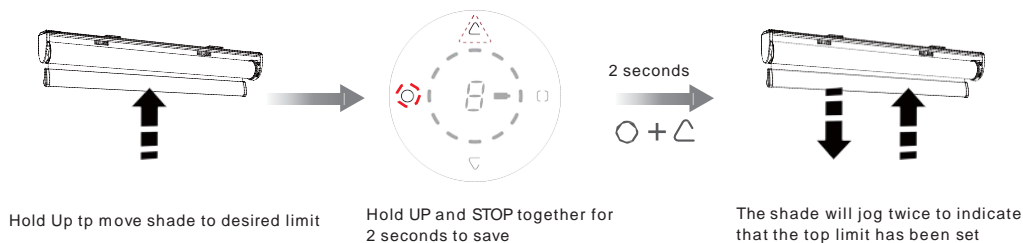


## Set Bottom Limit

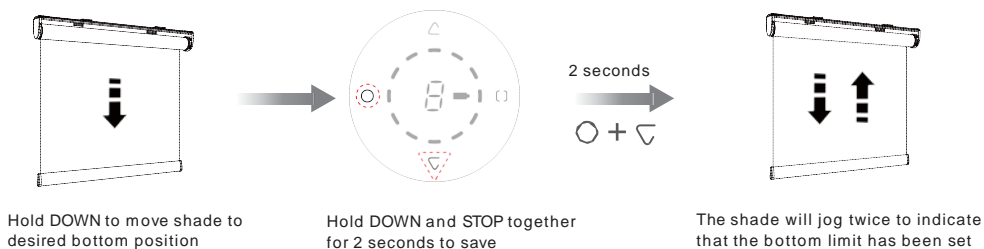 


## Save Favorite Position
 
### Step 01

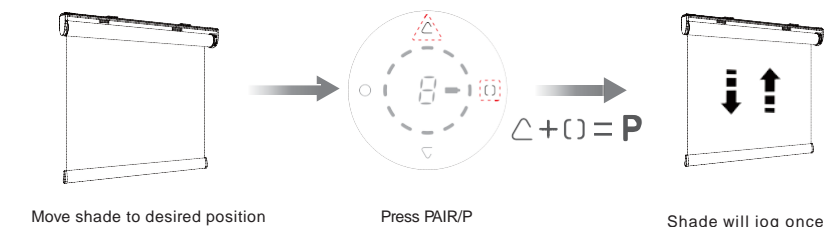


### Step 02

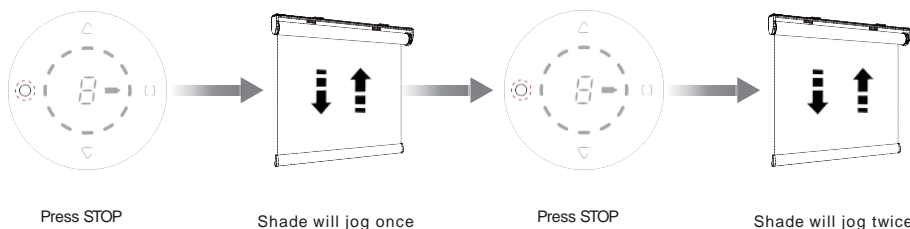 

Press and hold the STOP for 2 seconds; the blind will move to your favorite position. Repeat the same operation to cancel the favorite position setting.


# Adjusting Limits
 
## Adjusting Upper Limit

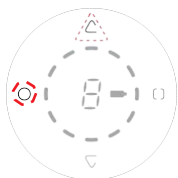

5 seconds  
○ + ▲

 
Hold UP and STOP together for 5 seconds

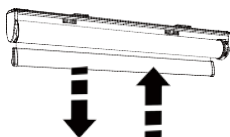

Shade will jog once




 Adjust the upper limit to the desired position.

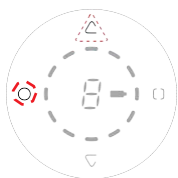

5 seconds  
○ + ▲

 Hold UP and STOP together for 5 seconds

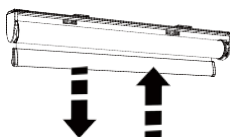


Shade will jog twice




Set Top Limit

## Adjusting Lower Limit

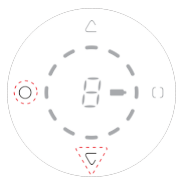 


5 seconds  
○ + ▼

 Hold DOWN and STOP together for 5 seconds

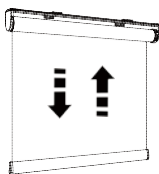

Shade will jog once

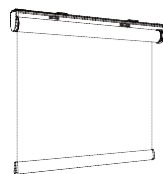 


Adjust the lower limit to the desired position




5 seconds  
○ + ▼

 Hold DOWN and STOP together for 5 seconds

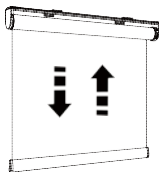

Shade will jog twice


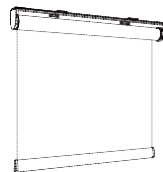 


Set Lower Limit

# Adjusting Motor Speed

 
 
## To Increased Speed

### Step 01

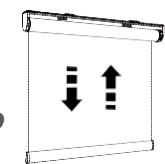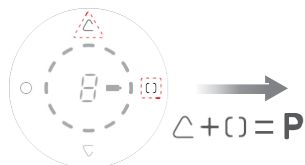


Shade will jog once

### Step 02

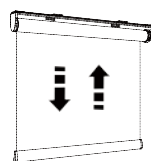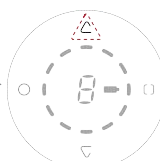  

Shade will jog once


### Step 03

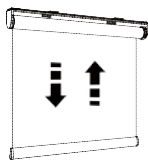 


Shade will jog thrice

## To Decreased Speed
 
### Step 01

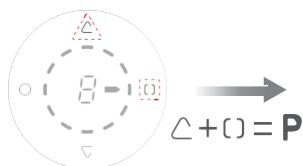


Press PAIR/P

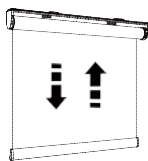 



Shade will jog once

### Step 02

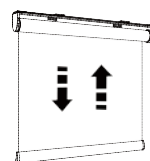 

Shade will jog once

### Step 03

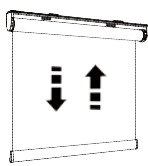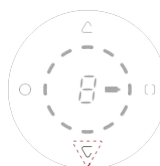  


Shade will jog once



# Mirroring Remote
 
## Step 01

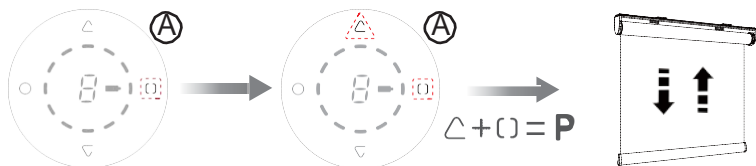


Select channel that operates the shade

Press PAIR/P

Shade will jog once

## Step 02

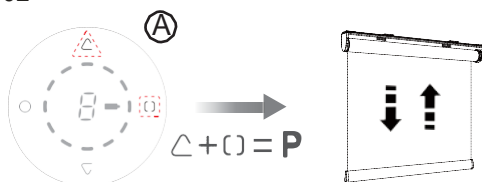 


Press PAIR/P

Shade will jog once


## Step 03

 Select the channel you want to use




Select the channel you want to use

 Press PAIR/P



Press PAIR/P

 
OR

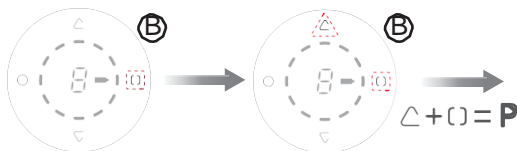


Select the channel you want to use

Press PAIR/P

 The shade will jog twice to indicate that the new remote has been paired



Select the channel you want to use

 

Press PAIR/P

The shade will jog twice to indicate that the new remote has been paired


# Percentage Mode and Tilt Mode
 
## Switch Between "Percentage Mode" And "Tilt Mode"




- The factory default is percentage mode.
- Dimming cannot be performed when the shade has not reached the maximum downstroke point.

Enter Tilt Mode:

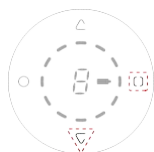

Press and hold the "channel choose" key and the down key.

 5 seconds

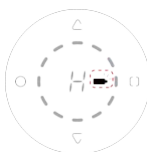

Until the power indicator flashes 5 times

flashes 5 times



 
Enter Tilt Mode

Enter Percentage Mode:



Press and hold the "channel choose" key and the down key.

5 seconds

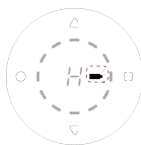

Until the power indicator flashes 2 times


flashes 2 times




Enter Percentage Mode

## Motor Operating Instructions In "Percentage Mode"

 
·When the emitter is in Percentage Mode, the percentage of window opening/closing can be controlled by rotating the control ring.

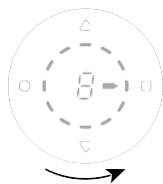

 
Open the shade by turning the Control Ring clockwise; when the lights are all on, the shade is fully open.

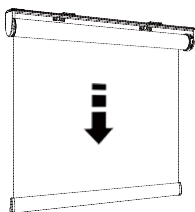

 Close the shade by turning the Control Ring counterclockwise; when the lights are all off, the shade is fully closed.




## Percentage Mode and Tilt Mode

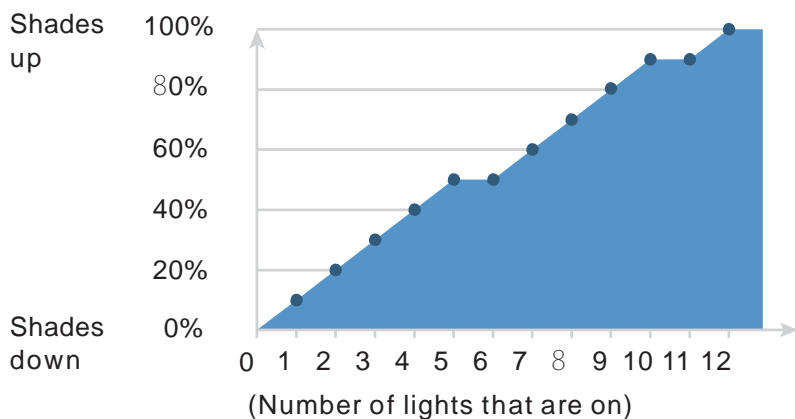 

The position of the shade corresponding to the "percentage indicator"

### Motor Operating Instructions In "Tilt Mode"

 - ⊗ When the emitter enters Tilt Mode, the light transmission of the blinds / wood blinds / ShangriLa shades can be controlled by rotating the control ring. ⊗

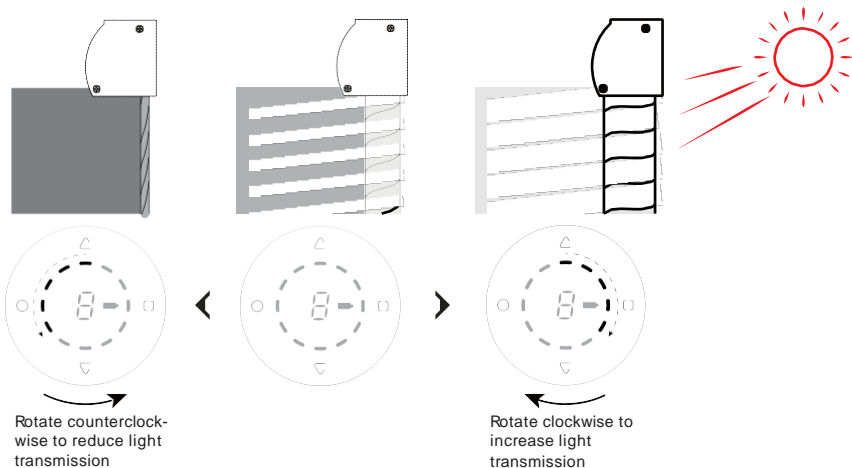

- Gently turn the control ring so that as the indicator lights up gradually in a clockwise direction, the shade increases the amount of light that can pass through;
- When the indicator lights up gradually along the counterclockwise direction, shade decreases the light that can pass through.

## Additional Features

 
Match the tilt mode used by the lower version of the motor.




Note.

- The factory default is percentage mode.
- Dimming cannot be performed when the shade has not reached the maximum downstroke point.

Enter Tilt Mode (compatibility):

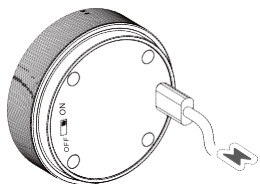


 - When operating this step, the transmitter must be connected to power.  
Plug the powered-on Type-C charging cable into the type-c charging port on the back of the transmitter.

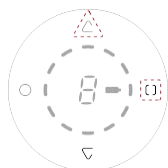

Press and hold the "channel choose" key and the "UP" key.

 5 seconds

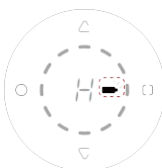


Until the power indicator flashes 5 times.

flashes 5 times




Enter Tilt Mode

 Enter Percentage Mode (compatibility):

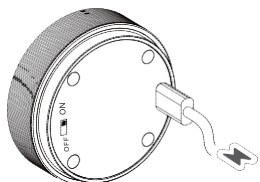


 - When operating this step, the transmitter must be connected to power.  
Plug the powered-on Type-C charging cable into the type-c charging port on the back of the transmitter.

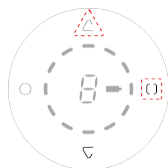

Press and hold the "channel choose" key and the "UP" key.

 5 seconds

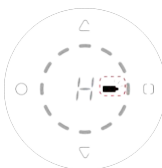

Until the power indicator flashes 2 times.

flashes 2 times



Enter Percentage Mode

---

---

## FCC Caution

---

---

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

