

USER GUIDE

BABY MONITOR SM43A

(Digital Wireless Video Baby Monitor With 4.3 inches Color Screen)



CATCH EVERY PRECIOUS MOMENT OF YOUR BABY

**THANK YOU FOR PURCHASING THIS BABY MONITOR
PLEASE ACTIVE AND EXTEND YOUR WARRENTY NOW**

Congratulation!

Now you can take care of your babies anywhere and anytime !

Please read the user manual before you use !

Please retain your original dated sales receipt for your records.

For warranty service of your baby monitor, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

Before you use the product, we recommend you to fully charge the battery in the parent unit, so that it continues to work even when disconnected from the power supply for transferring to another location.

Please read the Safety instructions.

Please make sure you have the following in this packing.

- 1.Parent unit x 1
- 2.Baby unit x 1 (x 2 in SM43A-2 Model)
- 3.Adapter x 2 (x 3 in SM43A-2 Model)
- 4.User manual x 1
- 5.Srew set x 1 (x 2 in SM43A-2 Model)

CONTENT

1. SAFETY INSTRUCTIONS	01-02
2. PRODUCT OVERVIEW	03-06
3. USING THE BABY MONITOR	07-10
4. MENU OPERATION	11-16
5. TECHNICAL DATA	17
6. TROUBLE SHOOTING	18

1. SAFETY INSTRUCTIONS

CAUTION: Keep small parts away from children.

Strangulation Hazard: Children can become entangled in cords. Power cords should be kept more than 3 feet away from the crib and baby's reach all the time. Baby monitors and cameras with power cords should never be hung on or near the crib. This product is not a toy and should be kept out of children's reach. This product contains small parts. Be care when unpacking and assembling the product.

Read and keep instructions: All the safety and operating instructions should be read before the video baby monitor is operated.

This product cannot replace responsible adult supervision.

Water and moisture: This product is designed for indoor use only. The unit should not be exposed to rain, moisture, dripping or splashing. No objects filled with liquid should be placed on top of, or beside the product, such as a glass or vase. This item should not be used near water.

DO NOT USE THE APPLIANCE:

- If the cord or plug is damaged.

- If your baby monitor is not operating properly or has suffered any damage.

Contact service: The service center to request inspection and repair it in order to avoid any possible risk.

DO NOT: Attempt to repair or adjust any of the electrical or mechanical functions of the unit since, if you do, the guarantee will be made void.

Ventilation: This baby monitor should not be used on a bed, sofa, rug or similar surface that may block the ventilation openings, or be placed in an enclosed area, such as a bookcase or drawer that may impede air flow.

Keep away from sources of heat: This unit should not be exposed to direct heat sources such as a candle, replace, radiator, heat register, stove or other appliance that emits heat. The unit should not be left in direct sunlight.

Power source: This unit should only be used with the adapter included in this package

Damage requiring service: This unit should be serviced by qualified personnel.



 
WARNING: IR emitted from this product. Do not stare at operating lamp!




CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

2. PRODUCT OVERVIEW

2.1 Package List

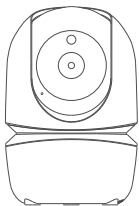

Baby unit x1

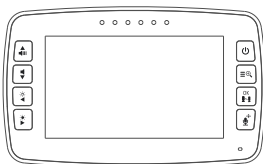 

Parent unit x1



Adapter x2

 


User manual x1



Screw set x1

2.2 Parent Unit (Monitor)

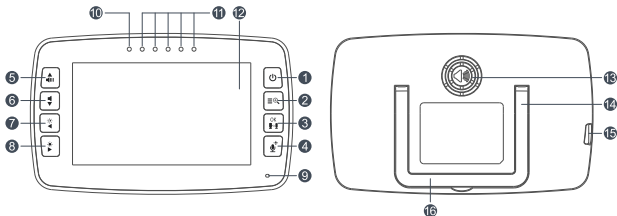**1 Power key:**

Long press to turn on/off the monitor; short press to screen on/off.

2 Menu / Exit:

Short press Menu/Exit key the menu will pop up, and press again to Exit.

Press and hold the Menu/Exit key around 2 seconds to operate Zoom in/out.

3 OK key:

Press the OK key to view/scan camera or to confirm.

4 Pan&Tilt / Talk to baby:

Short press the key to enter into the pan/Tilt mode.

To talk, press and hold the talk key on the front of the monitor; release to turn it off.

*Bear in mind that you can't listen to your baby while you're talking to them; to listen to it, you will have to stop pressing this button.

5 Volume + / Up key:

Press Volume+ to increase the volume/ To up the camera in the Pan/Tilt mode.

6 Volume - / Down key:

Press Volume- to decrease the volume/ To down the camera in the Pan/Tilt mode.

7 Brightness - / Right key:

Press the Brightness- to decrease the brightness/ To left the camera in the Pan/Tilt mode.

8 Brightness + / Left key:

Press the Brightness+ to increase the brightness/ To right the camera in the Pan/Tilt mode.

9 Mic:

When talk to the baby, collect the voices of the parents.

10 Power&Charging Indicator LED:

*The LED shows red when charging.

*The LED displays shows green after the battery is fully charged.

11 Volume LED:

When the baby unit detects the voice, the indicator light will be on.

The louder the detected sound, the more lights will light up.

12 LCD screen:

Display the baby's picture and the adjustment of each button function.

13 Speaker:

Hear the sound from the baby.

14 Stand:

Monitor placement stand.

15 Reset key (under the stand):

Long press the reset button with a pin to reset the display.

 
16 DC-jack:

Charge the monitor by connecting the Power Adapter to the monitor and a socket.


Note:

If you want to adjust the Volume/Brightness, you have to exit the Pan/Tilt mode before you operate it.

2.3 Baby Unit(Camera)

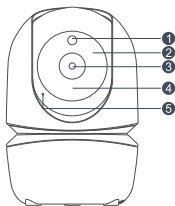

 - ① Light sensor
- ② Infrared LEDs
- ③ CMOS sensor
- ④ Power LED
- ⑤ MIC

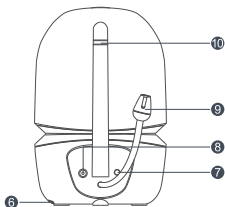

- ⑥ Speaker
- ⑦ Pair key
- ⑧ DC-Jack
- ⑨ Temperature sensor
- ⑩ Antenna

2.4 Icons Overview


--- Signal	----- Volume	----- Zoom
--- Alarm	----- Brightness	----- Night vision
--- Lullaby	----- ECO	----- Talk to baby
--- Camera	----- Battery	----- Temperature

3. USING THE BABY MONITOR

3.1 Charging And Powering The Monitor Unit


Step1:

 Charge the monitor by connecting the A/C adapter included in this package to the monitor and a socket. (It takes about 4 hours for the monitor to be fully charged).

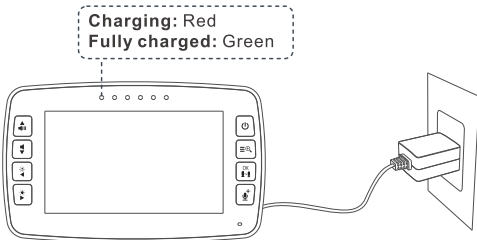

Step2:

 Use the provided AC adapter included in this package to connect the wall outlet with the baby unit.

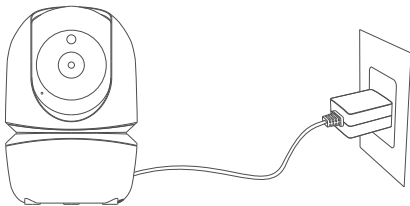

Note:

*Place the camera at least 3ft / 1m away from your baby. Gently press and hold the Power Button for 3s to turn on the monitor, then you can see the live view.

*Follow your needs to adjust the sound, brightness, and reasonable placement of the camera.

Tips:

To use the baby monitor, you must be able to establish a radio link between the monitor and camera, and the range will be affected by environmental conditions:

*Any large metal object, like a refrigerator, a mirror, a filing cabinet, metallic doors or reinforced concrete between the baby and parent unit may block the radio signal.

*The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TV, computers, cordless or mobile phones, fluorescent lights or dimmer switches.

*When using the other 2.4GHz product, such as wireless networks (Wi-Fi routers), Bluetooth systems, or microwave ovens, may cause interference with this product, so keep the baby monitor away at least 5ft(1.5m) from these types of products.


3.2 Pan And Tilt

The camera unit can be remotely controlled from the monitor unit

Step1. Press the Pan/Tilt key  enter the Pan/Tilt mode.


Step2. Press the  or  to tilt upward or downward.

Step3. Press  or  to Pan left or right.



Step4. Press the Pan/Tilt key  to exit the Pan/Tilt mode.

Note: During the Pan/Tilt mode can not use the navigation key to adjust volume and Brightness.


3.3 Night Vision Mode

When the built-in photo sensor detects a low level of ambient light, the screen on the monitor unit will display in black and white. the  icon will be displayed on the screen.




3.4 Talk Mode

Press and hold the  on the monitor unit to talk to your baby through the camera unit's loudspeaker. A  icon will be displayed at the bottom right corner of the screen.

3.5 Digital Zoom

Step1. Press and hold the Menu/Exit key  around 2 seconds enter Zoom mode.



Step2. At the Zoom mode, press the Pan/Tilt key  to adjust the direction of the camera/image.

Step3. Press the LEFT key  to pan left; Press RIGHT key  to pan right; Press UP key  to tilt up; Press Down key  to tilt down.

Step4. Press and hold the Menu/Exit key again around 2 seconds to operate Zoom out. During digital zoom mode, the zoom icon will be displayed on the top of screen.

Warm reminder: If you want to adjust the Volume/Brightness, you have to exit the Pan/Tilt (press Pan/Tilt key) mode before you operate it.

3.6 Scan And Switch The Cameras

Press  key 2 seconds to view/scan camera, during the scan mode, the  icon will be displayed on the top of the screen. Each camera's video will be stay on the LCD around 10 seconds then change to the next camera.

Short press the scan key again to switch the camera under the scan mode.

Note: This function is only available when two or more cameras are paired.

4. MENU OPERATION

4.1 Lullaby Setting

You can soothe the baby to sleep by playing a gentle lullaby from the baby unit.

 
Step1: Press Menu/Exit key  and the menu will display;

Step2: Press the LEFT key  or RIGHT key  until the lullaby icon is highlighted;

Step3: Press the UP key  or DOWN key  to select the lullaby you need;

Step3: Press the UP key  or DOWN key  to select the Playback time and volume;

Step4: Press OK key  to confirm.

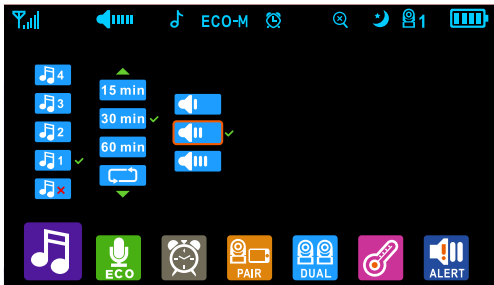

4.2 ECO Mode Setting

This mode allows you to control the sound activation of your baby monitor. When The ECO default setting is on, If there is no sound around the camera within 30 Seconds, the baby unit will stop transmitting signal. The monitor screen turns off when the camera is not transmitting. When the camera detects that the sound is louder than the preset sensitivity level, it will start transmitting the signal to the monitor again.

 
To change the ECO level, please follow the next instructions:

Step1: Press the Menu/Exit key  and the menu will display;

Step2: Press the LEFT key  or RIGHT key  until the ECO icon is highlighted;

Step3: Press the UP key  or the DOWN key  to select the desire level;

Step4: Press the OK key  to confirm.

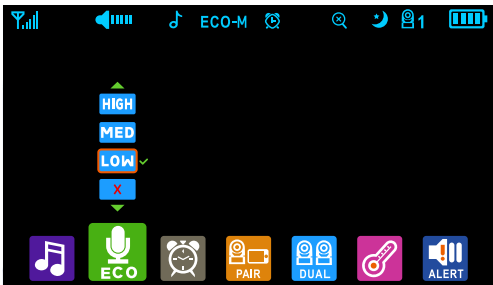

Note:

LOW --- High volume of sound is required to reactivate the transmission

MED --- Medium volume of sound is required to reactivate the transmission

HIGH --- Low volume of sound is required to reactivate the transmission

X --- No standby mode

4.3 Feeding Timer Setting

 
You can use the alarm to remind yourself to feed baby/change diapers/sleep, etc

Step1: Press Menu / Exit key  and the menu will display;

Step2: Press the LEFT key  or RIGHT key  until the alarm icon is highlighted;

Step3: Press the UP key  or DOWN key  to select desired alert time;

Step4: Press the OK key  to confirm.

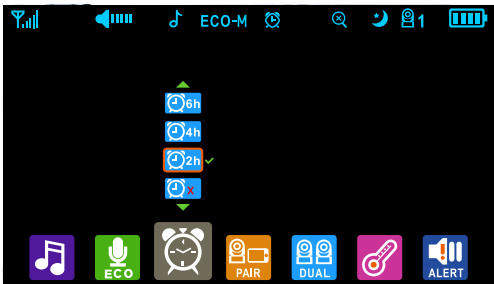

Note:

If the alarm is ringing and no one answers, then the ring will last for 1 minute; after 3 minutes the ringing will start again.


The alarm will ring for 3 times in total, after this the alarm goes off.

Once the alarm is turned on, alarm icon  will displayed on the Screen.

The alarm default setting is OFF.

When the alarm is ringing, press any key on the parent unit to turn the alarm off.

4.4 Pairing The Camera And Monitor

 
Step1: Press Menu/Exit key , then the menu will display;

Step2: Press the LEFT key  or RIGHT key  until the PAIR icon is highlighted, then press UP key  or DOWN key  to select the baby unit to pair;

Step3: Press OK key  to start the pairing;

Step4: While the LED is flashing, press and hold the PAIR button on the back of the baby unit, once paired, the screen will display the image from the baby unit;

Step5: If failed, please repeat the steps above.

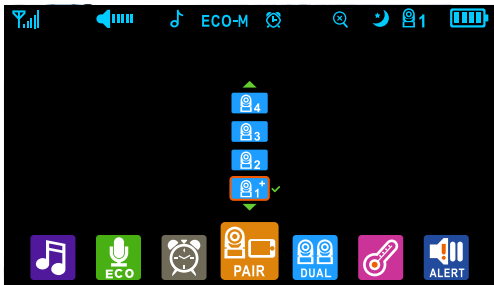


4.5 Dual View Setting

Step1: Press Menu/Exit key  and the menu will display;

Step2: Press the LEFT key  or RIGHT key  until the DUAL icon is highlighted;

Step3: Press the UP key  or DOWN key  to select the single or dual view display;

 Step4: Press OK key  to confirm.

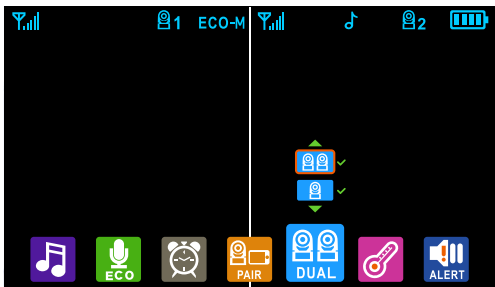

4.6 Temperature Unit Settings

The reading from the temperature sensor will be displayed at the top of the parent unit screen.

 
To change the temperature display from °C to °F, please follow the next instructions:

Step1: Press Menu/Exit key  and the menu will display.

Step2: Press the LEFT key  or RIGHT key  until the temperature icon is highlighted;

Step3: Press the UP key  or DOWN key  to select °C or °F;

Step4: Press OK key  to confirm.

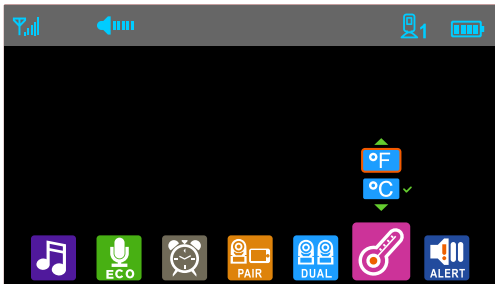

(Temperature unit setting)

4.7 Alert Volume Setting

Step1: Press Menu/Exit key $\equiv \oplus$ and the menu will display;

Step2: Press the LEFT key \blacktriangleleft or RIGHT key \blacktriangleright until the ALERT icon is highlighted;

Step3: Press the UP key \blacktriangleup or DOWN key \blacktriangledown to select the desire level;

Step4: Press OK key $\text{OK} \updownarrow$ to confirm.



5. TECHNICAL DATA**5.1 System General**

Frequency	2.4GHz FHSS
Operation Enviroment	Indoor use only; Temperature: 0-40 °C; Humidity: 5%-90% rh.(relative humidity)
Operating Range	Up to 900 feet(straight line and open space)
Power adapter	Input: 100-240VAC 50/60Hz, 300mA Max Output: 5V,1A
LCD	4.3" LCD Screen
Rechargeable battery for monitor	Model: 503450; 3.7V, 2100 mAh
Operating time with battery fully charged(parent unit)	Up to 12 hours (VOX on)
Image sensor type	1/6.5" Color CMOS image sensor
IR LED type	940 nm

6. TROUBLE SHOOTING

No reception on the monitor	<ul style="list-style-type: none">*The power adapters may not be properly connected.*Confirm that the camera and monitor are ON.*Camera may be far away from the monitor.*Camera and monitor may not properly paired, follow PAIRING instructions. Restart baby unit and parent unit. <ul style="list-style-type: none">*Press the reset key at the back of parent unit.
Interference or poor reception	<ul style="list-style-type: none">*Move the monitor close to the camera.*The camera or monitor may be placed too close to many metal objects.*Other electronic devices may be interfering with the signal.*The battery power may be too low.*Restart baby unit and parent unit.*Press the reset key at the back of parent unit
Feedback (screeching, static)	<ul style="list-style-type: none">*The camera and monitor may be too close together.*The volume on the monitor may be set too high.*Press the reset key at the back of parent unit.
Cannot hear the baby on the parent unit	<ul style="list-style-type: none">*Volume setting may be too low.*Press the reset key at the back of parent unit.
Image frozen	<ul style="list-style-type: none">*Restart the baby unit(plug out the adapter then plug it into the socket again).*Press the reset key at the back of parent unit(hidden behind the stand).

FCC STATEMENTS:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must not accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAR Max. Values: 0.719 W/Kg (1g) for body-worn device.
The back of the device kept 0mm from the body.

USER GUIDE



WARNING

Keep the small parts away from children

All rights reserved

The features described in user's manual are subject to modifications without prior notice.



Printed in china