

投影仪PD-201说明书

尺寸：110\*150mm


封面200g铜版纸，彩色印刷过哑膜

内页：80g书纸，黑白印刷

# DXYIITOO

## MULTIMEDIA PROJECTOR

Model: PD-201

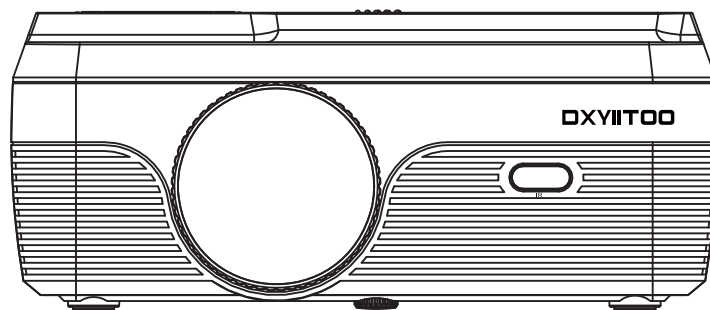

DXYIITOO Customer Team guarantee every customers the best services and the best of your experience with us, any problem, please feel free to contact us by email

**[dxyiitoo@hotmail.com](mailto:dxyiitoo@hotmail.com)**

## Contents

Troubleshooting .....	2
Important safety instructions .....	4
Additional Warnings and Precautions .....	5
Package Listing .....	5
Remove and close the lens cover .....	6
Place your projector .....	6
Place your projector on the ceiling .....	7
Adjust the vertical position .....	7
To reduce image distortion .....	8
Adjust the focus and keystone .....	8
Remote control .....	9
Install / Remove the remote control battery .....	10
Controls of the projector .....	11
Main Operation .....	12
Install Power Adapter .....	12
Menu option: Picture .....	13
Menu option: Sound .....	14
Menu option: Option .....	15
Using Bluetooth Playback .....	16
Connect HDMI .....	17
Connect AV .....	17
Connected to the smartphone .....	18
Connect to Apple MacOS system computer .....	19
Connect PC/TV Box via HDMI / VGA interface .....	19
Problems when connecting smart devices .....	19
Connect VGA .....	20
Connect Audio Output (Aux Output / Line Out / Headphone) .....	21
Install USB Device and Micro SD Card .....	21
Using DVD playback .....	22
Specifications .....	24
Warranty .....	24

## Troubleshooting

Before resorting the maintenance service, please kindly check by yourself with the following chart.

No Image is Projected or a "No Signal" message is displayed	<ol style="list-style-type: none"> <li>1. Power light is on. If it is not on, check the projector is plugged into the mains, that the socket is switched on, and then presses the power button on the projector.</li> <li>2. Check the lens cover has been removed.</li> <li>3. Check the cables are clearly attached and installed as per the User Manual.</li> <li>4. The image source may not be correct. Press the Source button on the control panel.</li> <li>5. Check in the menu section under Video input signal to make sure that has been set correctly.</li> </ol>
The lamp (lamp) switches off after a certain time	<p>Is the warning light indicator red? If so, the projector is over heating which turns off the light off automatically.</p> <ol style="list-style-type: none"> <li>1. Leave the projector to cool for a few moments.</li> <li>2. Once cooled, check nothing is blocking the ventilation vents.</li> </ol>
Stains on the screen.	<p>The screen of the running projector is static, so it is easy to adsorb dust. Please turn off the projector.</p> <ol style="list-style-type: none"> <li>1. Gently vibrate or shake the projector to remove dust.</li> <li>2. In the air outlet of the projector, use the vacuum cleaner to absorb the inside of the projector, and suck the dust from the screen.</li> </ol>
No Image, all black	<p>Check if the lens cover is removed, if not, remove it before using. Don't forget to cover it when not using.</p>
Blurry Image	<p>Adjust the keystone, focus ring, and the projection distance.</p>
USB flash disk / TF card not recognized	<p>Make sure your USB flash disk / TF card storage is not more than 32GB.</p>

No sound	<p>Turn off Dolby audio in your device.</p> <p>If the movie's audio is "ac3"(Dolby sound), then the sound may not be played (this kind of movie is very rare).</p> <p>Dolby, AC3 and stereo sound can not be decoded via the USB and SD ports. We recommend using the HDMI input.</p> <p>If you have no sound on the Fire TV Stick (APP: Netflix and Prime Video) due to HDCP, please turn off the Dolby sound and using other sound(Surround sound).</p>
	<p>If there is no sound from the stereo audio output when playing media contents from a set top box, BD/DVD or streaming players connecting to the HDMI input, please check the set top box or the player's digital audio settings and make sure it is set to "PCM Stereo" mode.</p>
Connect the projector to your Smartphone/ iPad.	<p>For Android device, you need a "Micro USB/Type C to HDMI cable" ( Not included)</p> <p>For iOS device, you need a "lightning to HDMI cable" (Not included)</p>
Bluetooth	<p>The Bluetooth of the projector can only connect to the Bluetooth speakers, it cannot connect to the Bluetooth of the smartphone.</p> <p>A small number of models of Bluetooth speaker may not be compatible, please try other Bluetooth speaker.</p>
TV Stick	<p>Due to copyright issues, Netflix / Disney / Amazon prohibits playing movies directly from the projector. You can use a TV Stick to connect the projector to watch movies from Netflix, Hulu, and other similar services.</p>
No Signal	<p>When using HDMI to connect a TV or laptop to a projector, you need to select the input source as HDMI in the projector. If you use an HDMI cable to connect to the projector's HDMI1 port, you need to select the corresponding HDMI1 source interface in the projector.</p>
Don't Work	<p>Please take out the protection card inside before using the DVD.</p>

We have prepared a lot of instructional videos, the operation is very simple, if you have any questions, please contact our service team by email: [dxyitoo@hotmail.com](mailto:dxyitoo@hotmail.com)

## Important safety instructions

 
1. Read these instructions.
2. Keep these instructions.
3. Pay attention to all warnings.
4. Follow all instructions.
5. Do not use this unit near water.
6. Clean only with a dry cloth.
7. Do not block ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install the unit near heat sources such as radiators, heaters, stoves, or other equipment (including amplifiers) that heat the product.
9. Protect the power cord from being crushed or crushed, especially at plugs, sockets, and at the point where it exits the unit.
10. Use only manufacturer-specified accessories / accessories.
11. Pull out the device during a thunderstorm or when not in use for a long time.
12. Leave all maintenance to qualified service personnel. Maintenance is required if the device has been damaged in any way, eg. For example, if the power cord or plug is damaged, liquid spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been deleted.
13. Use only a cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the unit. If a cart is being used, be careful when moving the cart / implement combination to avoid tipping over.



## Additional Warnings and Precautions

1. Do not look directly into the projector light.
2. Don't touch the projector lens.
3. Mains adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
4. **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
5. **WARNING:** Changes or modified to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
6. **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
7. **WARNING:** Shock hazard - Do Not Open.
8. Caution and marking information is located at the rear or bottom of the apparatus.
9. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
10. Objects fill with liquids, such as vases, shall not be placed on the apparatus.

## Package Listing




Projector



Lens Cover



 Tripod




Power Adapter



HDMI Cable



 Carrying Bag



AV Cable




Remote Control




User Manual

## Remove and close the lens cover

Remove the lens cover before using

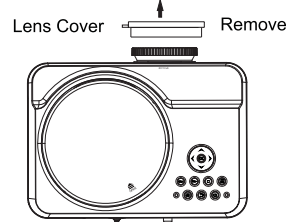


Close the lens cover when unit not using

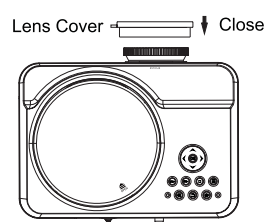

## Place your projector


### Select location

You can decide where you want to install based on your room layout or personal preferences. Consider the size and position of the screen, the location of the appropriate power outlet, and the location and distance between the projector and the rest of the equipment. The projector can be installed in one of the following locations:

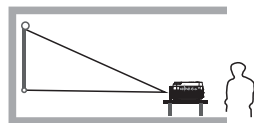


#### 1. Front display on the desk

When this position is selected, the projector is placed directly in front of the screen. This is the most common way to place a projector, and it's fast and mobile.

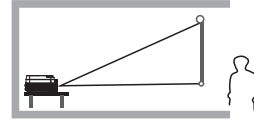


#### 2. Back display on the desk

When this position is selected, the projector is located directly behind the screen. Please note that you need a special rear projection surface.

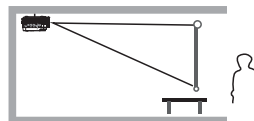

#### 3. Back to display by hanging

When this position is selected, the projector will be hung upside down on the ceiling directly behind the screen. Please note that this installation requires a dedicated rear projection screen and a ceiling mounting kit for the projector.

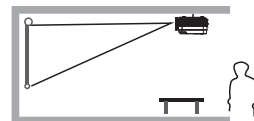

#### 4. Front display by hanging

When this position is selected, the projector is hung upside down directly on the front of the screen. Acquire a special projector ceiling kit from your dealer to mount the projector to the ceiling.




## Place your projector on the ceiling

1. When installing the projector in the ceiling, please purchase a projector bracket recommended by an installation professional and follow the instructions supplied with the bracket.


2. Before installing the projector on the ceiling, please check if the mounting structure can support the weight of the projector and the bracket. If in doubt please consult the advice of an installation.

NOTE: Projector bracket and screw (s) are not included.

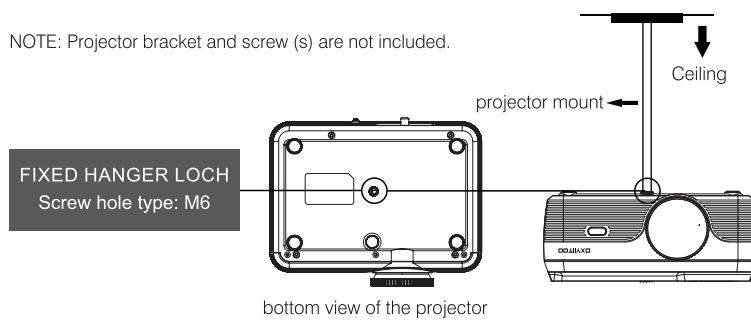


## Adjust the vertical position

Follow the picture below to adjust the vertical position.

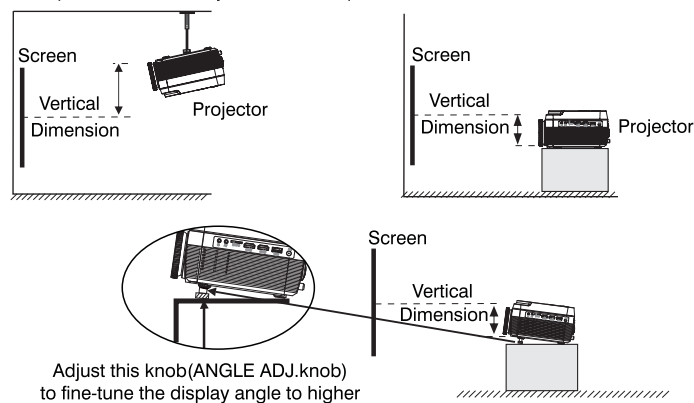

## To reduce image distortion

Measure the distance between the projector and the location where you want to position the screen. This is the projection distance.

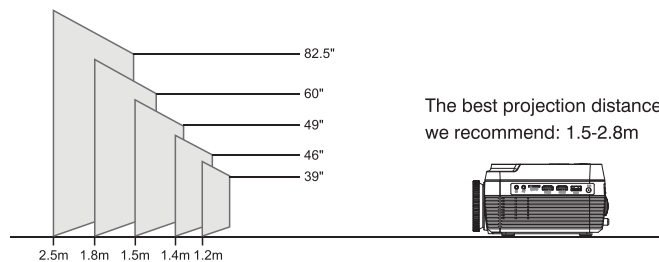

## Adjust the focus and keystone


Follow the picture below to adjust the focus and the trapezoidal screen.

Adjust the focus by turning the knob while observing the image pixels near the center of the screen. The optimal focus is achieved when the pixels are clearly visible.


Depending on the projected screen size, the focus near the edges of the screen may be less sharp than in the center of the screen.

### FOCUS ADJ.KNOB

Then sharpen the image by turning the focus knob.

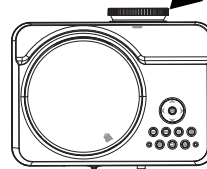

The keystone image is created when the projector beam is projected at an angle on the screen. The keystone correction returns the distorted image to a rectangular or square shape.

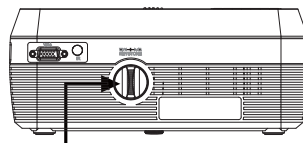


TRAPEZOIDAL ADJ.KNOB

## Remote control



	<b>POWER</b>	Press to power ON.
	<b>MUTE</b>	Mute the audio of the player. Press it again to activate the sound.
	<b>RANDOM</b>	Press to random playing for the loaded disc.
	<b>DISPLAY</b>	Press to display the information of the current video/ audio
	<b>ANGLE</b>	On supported DVDs, press and hold to view alternate angles.
	<b>SUBTITLE</b>	Short press to change subtitle mode.
	<b>REPEAT</b>	Press here repeatedly to cycle through repeat options for the loaded disc.
	<b>PBC</b>	Press to activate Play Back Control function only for a VCD disc. Press it again to be off.
	<b>TITLE</b>	Press to view the title menu on a loaded DVD.
	<b>MENU</b>	Press to view the main menu on a loaded DVD.
	<b>A-B</b>	Press to create a repeating loop on a loaded DVD.
	<b>PROG</b>	Program a loaded disc to play chapters and titles or tracks in a specified order.
	<b>SLOW</b>	During playback, press the SLOW button repeatedly to set the slow motion speed. Press OK button to resume.
	<b>DVD SETUP</b>	Press to access the setup menu only for DVD mode.
		Press to skip between chapters or tracks.
		Press to search through an individual chapter or track.
		Press to navigate and confirm selections in settings and other menus.
<b>SOURCE/MODE</b>	Press to select media source (DVD / HDMI / HDMI2 / VGA / AV / USB / TF)	
<b>DVD</b>	Press to enter the DVD player mode once in other source.	
<b>MENU/SETUP</b>	Press to access projector settings menu.	
<b>EXIT</b>	Press to exit the projector menu or the audio/movie playback.	
	Press here to play or pause the audio / movie playback.	
<b>STOP</b>	Stop the audio/video /photo playback.	
<b>FLP/REVERSE</b>	Press to rotate/ mirror projector screen.	
<b>AUDIO</b>	Press here to switch the available audio channels provided by the disc.	
<b>VOL + / VOL -</b>	Adjust the volume up. / Adjust the volume down.	
<b>Number Keypad</b>	Number Keypad Enter chapter/title to play.	
<b>GO TO</b>	Go to a specific chapter or track numbers. Use play button to begin playing.	
<b>ZOOM</b>	Press to adjust the aspect ratio (16:9 / 4:3 / Auto) during playing video from USB / TF / HDMI / VGA.	

## Install / Remove the remote control battery

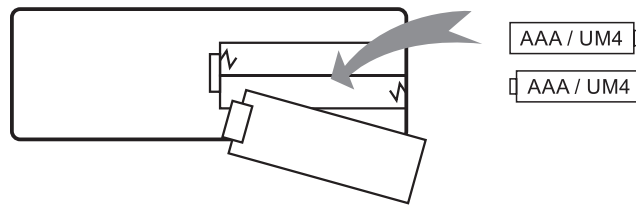


Remove the battery cover on the back of the remote control by gently pushing it open. The battery cover can then be raised. Insert the correct batteries (not included) according to the polarity markings. Finally, replace the cover.

### **Note:**

1. Batteries must not be exposed to excessive heat, such as sunshine / fire.
2. Make sure that the batteries are installed correctly.
3. Do not mix old and new batteries.
4. Only use the same or equivalent batteries as recommended.
5. Do not dispose of batteries in the fire, the battery could explode or leak.
6. Do not try to charge a battery.



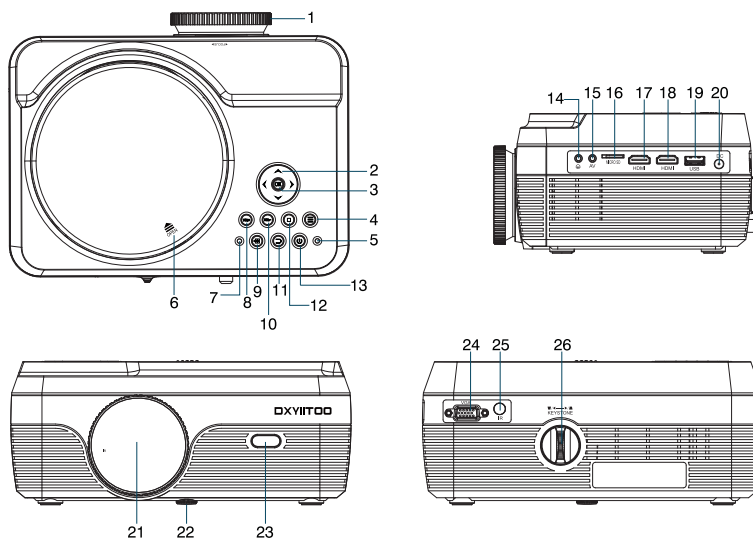




## Controls of the projector



1. FOCUS ADJ. Knob
2. NAVIGATOR Buttons
3. OK
4. MENU button
5. POWER ON Indicator
6. Open disc cover
7. POWER OFF Indicator
8. VOL+
9. SOURCE button
10. VOL-
11. RETURN button
12. STOP
13. POWER Button

14. EARPHONE jack.
15. AV jack
16. Micro SD card port
17. HDMI port 1
18. HDMI port 2
19. USB port(Media player)
20. DC IN jack
21. LENS
22. ANGEL ADJ. Knob
23. IR Window(Front Side)
24. VGA Port
25. IR Window (Rear Side)
26. TRAPEZOIDAL ADJ. Knob


## Main Operation

 POWER	Press the button to turn on the unit and press it again to turn it off.
 SOURCE	Press the button to select the input source.
 MENU	Press the button to enter the projector menu.
 	Press the buttons to select the screen element of the projector menu.
 RETURN	Press the button to return to the previous step.
VOL+ / VOL-	Press the buttons to select the correct sound.
 STOP	Press to stop the audio/video /photo playback.

## Install Power Adapter


Follow below picture to connect power adapter.

Connect small end of adapter FIRST. Plug the adapter body to power outlet.

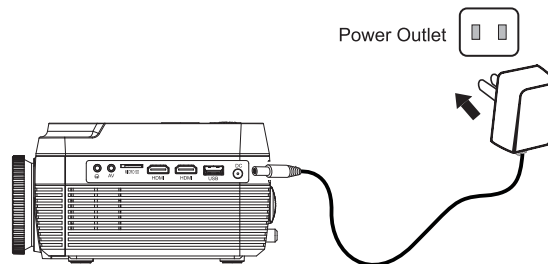

Note: If the plug is not fully inserted into the socket groove, the plug will loosen, and fail to connect to the power source.

## Menu option: Picture

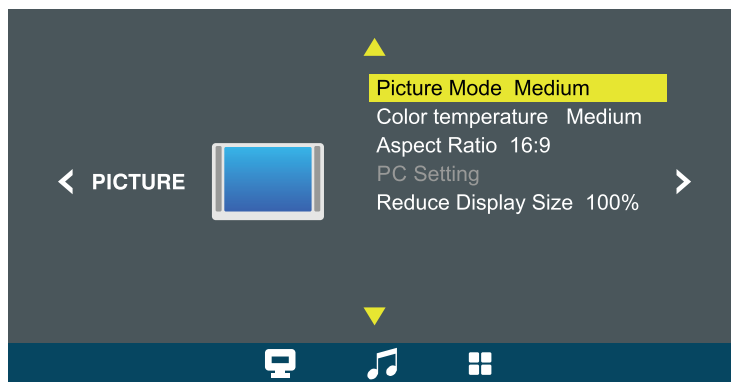

Parameter	Option
Picture Mode	Automatic / software / user / dynamic
Color temperature	Standard / warm tone / user / cool tone
Aspect Ratio	Auto / 4:3 / 16:9 / Zoom 1 / Zoom 2 / Panorama
PC Setting	
Reduce Display Size	100%-75%

※When adjusting "Contrast", "Brightness", etc., please set the image mode selection to "User".

- Screen display size (zoom) setting: In AV mode (Auto/4:3/16:9/Zoom1/Zoom2/Panorama)
- In HDMI mode (Auto/4:3/16:9/Zoom1/ Zoom 2/Just SCAN/Panorama/Point to Point)
- In VGA mode (Auto/Point to Point/4:3/16:9)
- In media player mode (Auto/4:3/16:9) <Zoom >Button operation function
- Only remote control operation is available \*\*Switch the "Zoom" button in DVD mode (2×/3×/4×/1/2/1/3/1/4)


### Note:

User: In this mode, some parameters become variable to manual setting (the font color will turn white). In other modes, the parameter becomes preset and cannot be set (the parameter font color is gray).

### Operating

Select: ▲ / ▼ Return to the previous menu:  Return to the desktop:  Adjust: ◀ / ▶

## Menu option: Sound

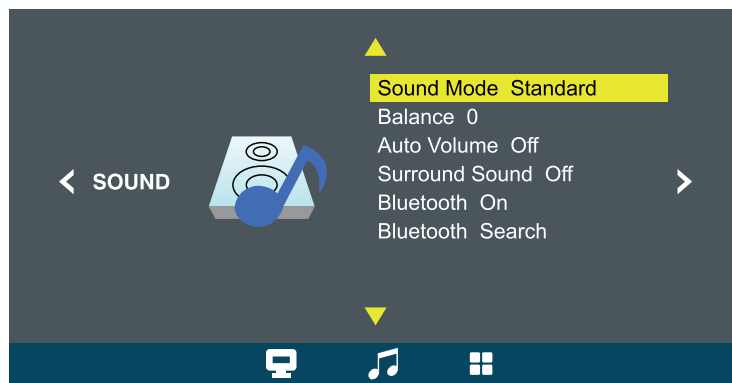

Parameter	Option
Sound Mode	Standard / Music / Movie / Sports / User
Balance	-50~0~+50
Auto Volume	Off / On
Surround Sound	Off / On
Bluetooth	Off / On
Bluetooth Search	

### Note:

User: In this mode, some parameters become variable to manual setting (the font color will turn white). In other modes, the parameter becomes preset and cannot be set (the parameter font color is gray).

### Operating

Select: ▲ / ▼ Return to the previous menu: Return to the desktop: Adjust: ◀ / ▶


### How do you know that the operation is in effect?

The selection takes effect based on the selected parameters.

Figure: → At this time, the Surround mode is off.



## Menu option: Option

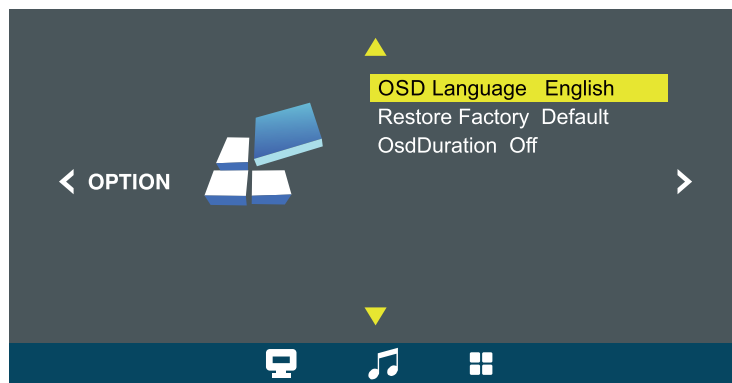

Parameter	Option
OSD Language	French / English / Italian / Portuguese / Espanol / Magyar / Deutsch / Janpanese / Nederlands / Norsk/polski
Restore Factory Default	
OsdDuration	Off / 5 seconds / 10 seconds / 15 seconds 20 seconds / 25 seconds / 30 seconds

### Note:

User: In this mode, some parameters become variable to manual setting (the font color will turn white). In other modes, the parameter becomes preset and cannot be set (the parameter font color is gray).

### Operating







Select: ▲ / ▼ Return to the previous menu: ☰ Return to the desktop: ↶ Adjust: ◀ / ▶

## Using Bluetooth Playback

Pairing is used when two Bluetooth devices are connected wirelessly for the first time.

This allows the devices to see each other and sets up a one-to-one communication channel between both devices.






### Bluetooth Connection:

1. Press the  button to turn on unit.
2. Press the  button to enter the menu screen.
3. Use the  button to select right side menu.
4. Use the  button to select Bluetooth column.
5. Press the  button to enter Bluetooth menu.
6. Use the  button to select "ON"
7. Turn on your External Bluetooth Speaker and select to Bluetooth pairingmode.
8. A few seconds, you hearing "do" sound that your unit and external Bluetooth speaker connected.
9. After connection completed, the unit sound to External Bluetooth speaker.

### Note:

- ① When the Bluetooth device can't connect to this projector automatically. Please enter to the Bluetooth setup menu and select. to the Bluetooth Reset to reset it, after that the BT device will be connected with this Projector automatically.
- ② Please make sure that Bluetooth is turned off when playing video from a PC via an HDMI cable. ( Source-Setting - Sound - Bluetooth-Bluetooth Off)

### Disconnect the Bluetooth



1. Press the  button to enter the menu screen.
2. Use the  button to select above menu.
3. Use the  button to select Bluetooth column.
4. Press the  button to enter Bluetooth menu.
5. Use the  button to select " OFF" that the Bluetooth disconnect.

### Tip:


Bluetooth can not connect to smart devices with Bluetooth function , such as smartphones, laptops, and tablets. Only Bluetooth sound playback devices can be connected.

## Connect HDMI

Follow below picture to connect HDMI cable and device.



1. Turn off the unit before connect HDMI cable.
2. After connect, press the  button to turn on unit and power indicator will light green.
3. Press the  /SOURCE button to HDMI mode and the video of HDMI device will show on projector screen. There are 2 HDMI input, HDMI1 interface corresponds to HDMI1 in SOURCE mode, and HDMI2 interface corresponds to HDMI2 in SOURCE mode.

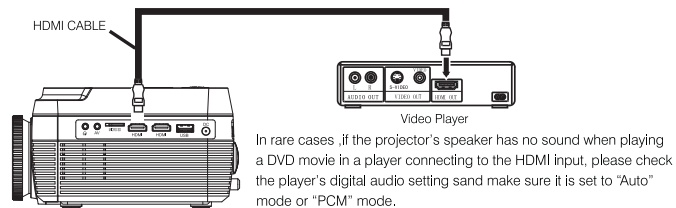
**HDMI HD signal input: this interface can be input with HD player HDMI output at the connection**



## Connect AV

Follow below picture to connect AV cable and device.

1. Turn off the unit before connect AV cable.
2. Connect the end of 3 heads for both Female AV cable and Male AV cable together first, and then connect the other ends of Female cable to the AV IN of projector. Similarly, connect the other ends of male AV cable to the AV OUT of the DVD player or other Electronic device which supported AV out.
3. After connect, press the  button to turn on unit and power indicator will light green.
4. Press the  /SOURCE button to AV mode and the video of AV device will show on projector screen.

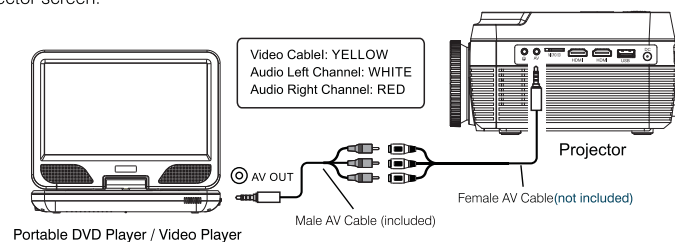


## Connected to the smartphone

To connect a tablet, Mac or smartphone, separate cables are required (Not in the package):

Apple iOS device: Lightning to HDMI adapter

Google Android device: Micro USB/Type C to HDMI adapter


You can use a 3 in 1 smartphone to HDMI cable Adapter to link the device, if you have any problems and need help, please contact our customer service. (3 in 1 smartphone to HDMI cable Adapter is not included)

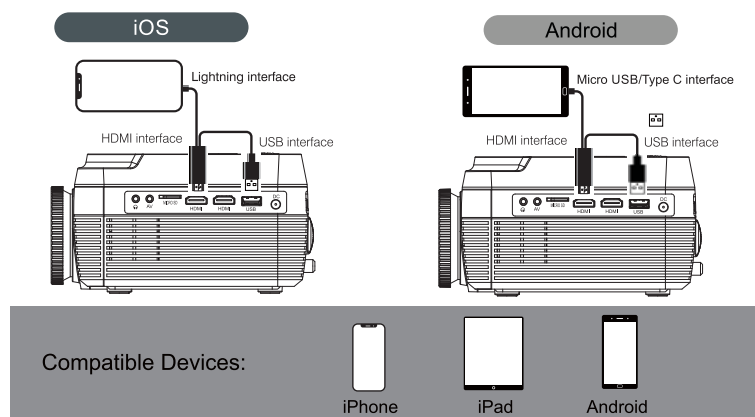

### The approximate steps to connect your smartphone.

Before connecting, please make sure that the projector is not connected to the power supply to avoid damage to the device.

- 1) The HDMI connector of the HDMI converter is plugged into the HDMI1/ HDMI2 interface of the projector, and the other end is inserted into the data transmission interface of the smartphone.
- 2) Turn on the projector (when the device is abnormal, you should disconnect the power in time), press the power button on the machine or the power button of the remote control.
- 3) Start to enter the machine initial screen, to enter the homepage, press the "Source" button on the remote control to select the HDMI source (if the projector has multiple HDMI interfaces, please select the corresponding HDMI interface serial number, such as "HDMI 1")
- 4) After selecting the corresponding HDMI source, the screen of the projector and Smartphone are synchronized ! The connection steps for the iPad are similar to connecting a smartphone.

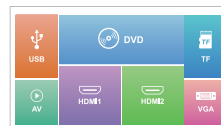


## Connect to Apple MacOS system computer


Connect to Apple MacOS system computer ,separate cables are required (Not in the package):

Mac Book Air: Mini Display Port to HDMI Adapter

 Mac Book & Mac Book Pro: Type C to HDMI Adapter




Mini Display Port to HDMI Adapter

 

Type C to HDMI Adapter

The approximate steps to connect your Apple MacOS system computer Before connecting, please make sure that the projector is not connected to the power supply to avoid damage to the device.

- 1) The HDMI interface of the converter is plugged into the interface of the HDMI 1/ HDMI 2 projector, and the other end is plugged into the Type C or Mini Display Port of the computer.
- 2) Turn on the projector (when the device is abnormal, disconnect the power supply in time), press the power button on the machine or the power button to remote control.
- 3) Start to enter the initial screen of the machine, enter the home page, press the "Source" button on the remote control to select the HDMI signal source (if the projector has multiple HDMI interfaces, please select the corresponding HDMI interface serial number, such as "HDMI 1")
- 4) After selecting the corresponding HDMI source, the projector and Computer's screen are synchronized!

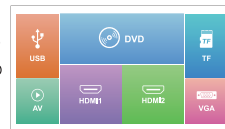

## Connect PC/TV Box via HDMI / VGA interface

The steps are similar to connecting a smartphone, except that no extra converters are needed.

Note: Please make sure that Bluetooth is turned off when playing video from a PC via an HDMI cable. ( Source-Setting - Sound - Bluetooth-Bluetooth Off)

## Problems when connecting smart devices




Dolby, AC3 and stereo sound can not be decoded via the USB and SD ports. We recommend using the HDMI input.


If you have no sound on the Fire TV Stick (APP: Netflix and Prime Video) due to HDCP, please turn off the Dolby output on the TV Stick.

If you have any questions, please contact our customer service.

## Connect VGA


Follow below picture to connect VGA cable and device


1. Turn off the unit before connect VGA cable.
2. Press the  button to turn off the power of your projector before connection.
3. After connect, press the  button to turn on unit and power indicator light GREEN,
4. Press the  /SOURCE button to VGA device and VGA device will show on projector screen.

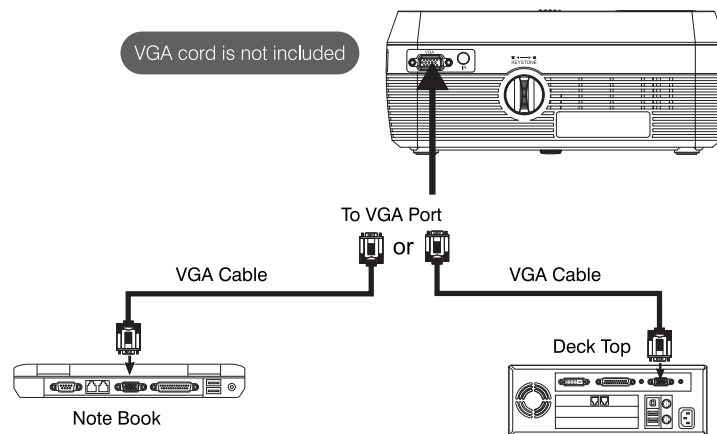

## Connect Audio Output (Aux Output / Line Out / Headphone)

Follow the picture below to connect the device.


1. Press the  button to turn off the power of your projector before connection.
2. Use audio cable to connect follow below figure.
3. After connect and turn on both units. Your projector sound from external device now.
4. After using, turn off both unit.

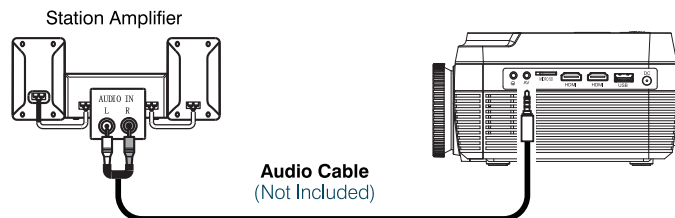




 
 

 

## Install USB Device and Micro SD Card


Make sure your USB flash disk / TF card storage is not more than 32GB.

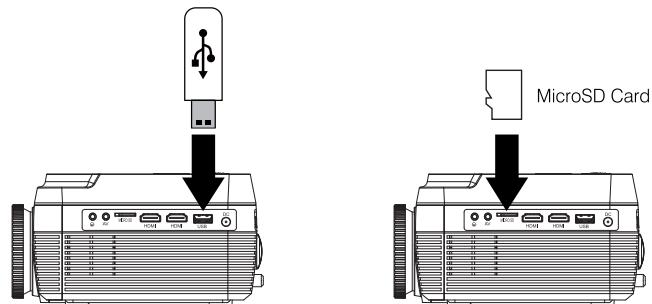Follow the picture below to the USB and TF card Turn off the unit before installing USB / TF card



## Using DVD playback

1. Press the  button to turn on unit and the power indicator light GREEN.
2. Press the /SOURCE button to enter and use  buttons to search the DVD mode.
3. Open the disc cover and insert a playable DVD or CD disc, make sure the label side is facing up, and then close disc cover.
4. The player will scan the disc, and then the playback will start automatically. If a disc menu appears on the screen, see "Using the disc menu" for details.
5. Press   button to fast search forward and rewind.
6. Press   button to search next or previous file.
7. During playback, press the  button to pause and press again to resume.

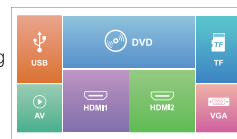

### Disc handling:

- Do not leave discs near heat sources, in direct sunlight, or in high humidity.
- Store discs in their cases when they are not being used.
- Stacking discs or standing them at an angle without putting them in the case can cause the disc to warp.
- Do not touch the disc surface when handling a disc; hold it by the edges.
- Fingerprints, dust, dirt or scratches on the disc can distort the picture or reduce sound quality. Always handle carefully and make sure discs are clean before use.
- Do not stick paper or tape onto the disc.
- Do not write on the disc with a marker ,etc. Clean discs using a soft cloth, lightly wiping from the center outwards.
- Do not use solvents such as benzene, commercially available cleaner snot intended for CDs or anti-static spray intended for vinyl lps, as these may damage your disc.



### You must pay attention to the following points:

1. Place the DVD on the projector before turning it on.
2. Do not place the projector upright, as it will damage the DVD.
3. Do not support Blu-ray DVD.



Note: This DVD player has the function of direct continuous playback. However, there are also situations where the playback stop reading, you can refer to the following question to troubleshoot. There are many reasons why they stop reading, mainly due to disc problems:

1. The disc is scratched, the disc is not burned well, and the disc is not flat, which may cause the disc to stop reading. It is necessary for you to try to replace other DVD discs to test whether the same situation occurs.
2. The error correction function of the DVD player is impaired. DVDs have an automatic error correction function, which can make the discs with slight scratches and unevenness automatically correct and play normally, but the discs with serious problems cannot be corrected. If there is a problem with the error correction function, there may also be a problem with reading the disc. The error correction function alone is less likely to have a problem, because it makes the function on the motherboard chip, if the motherboard has a problem, the whole machine may not be able to play at all.
3. The DVD is not placed steadily. After a period of operation, the internal parts are worn out and cannot be played normally.
4. The projector can only be connected to a Bluetooth speaker, not a smartphone.
5. Due to copyright issues, Netflix / Disney / Amazon prohibits playing movies directly from the projector. You can use a TV Stick to connect the projector to watch movies from Netflix, Hulu, and other similar services.
6. When using HDMI to connect a TV or laptop to a projector, you need to select the input source as HDMI in the projector. If you use an HDMI cable to connect to the projector's HDMI1 port, you need to select the corresponding HDMI1 source interface in the projector.
7. If there is no sound from the stereo audio output when playing media contents from a set top box, BD/DVD or streaming players connecting to the HDMI input, please check the set top box or the player's digital audio settings and make sure it is set to "PCM Stereo" mode.
8. Please take out the protection card inside before using the DVD.

## Specifications

Light Source Type	LED
HDMI Input Supported Video Resolution	1080P, 1080i, 720p, 576i, 480p, and 480i
Power Consumption	Operating 54W ; stand by 0.8W
Power Input Connect Included Adapter	100V 50-60Hz, DC12V 4.5A
Included Adapter Connect DC input of unit	Input : AC100-240V, 50/60HZ Output : DC12V, 4.5A
Display Color	7000-8000K
Signal Port	AV/VGA/HDMI/CD
USB Port	Support USB device up to 32GB Support format mpeg1,mpeg2,mpeg4,mp3.jpeg
MICRO SD Port	Support MICRO SD card up to 32GB Support format mpeg1,mpeg2,mpeg4,mp3.jpeg
Weight	1.33KG
Dimension	W235×D185×H100mm

## Warranty

We are committed to improving the quality of service. It would be highly appreciated if you could make suggestions for us about our products or our store, which will be a great encouragement for us.

If you have any questions about the assembly of the product, accessories, the quality of the product or etc, please contact us via email:

**[dxyiitoo@hotmail.com](mailto:dxyiitoo@hotmail.com)**

We will do our best to solve the problem. Thank you!



**DXYIITOO**

**MULTIMEDIA PROJECTOR**  
**Model: PD-201**

:

#### FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.