



Safe, Fun,  
Easy to use

**E-build**  
ELECTRONIC CO. LTD

for ages  
**3+**

## BATTERY INSTALLATION INSTRUCTIONS

Each Walkie Talkie requires 3 x "AAA" (R03) Batteries (Not Included)

### ADULT INSTALLATION REQUIRED

If performance diminishes after purchase, replace with fresh batteries.

1. Locate battery compartment.
2. Using a Philips Head screwdriver, remove the screw and the battery door.
3. Install new batteries.
4. Replace the battery cover and the screw.

## HOW TO OPERATE YOUR WALKIE TALKIE

1. Open battery cover and snap in 3 x AAA batteries (not included)
2. Turn the "ON/OFF" switch to "ON" position. Your transceiver is now ready to operate.
3. Press the "TALK BUTTON" switch for transmitting.
4. Release the "TALK BUTTON" switch for receiving.
5. When transmitting, speak clearly in a normal voice, holding the set about 3 inches from your mouth.
6. Best transmission and reception are obtained when the antenna is held in a vertical position.

## BATTERY SAFETY INFORMATION

### CONSUMER INFORMATION: SAFETY AND DISPOSAL

Do not dispose of Waste Electrical Electronic Equipment (WEEE), including batteries, in unsorted municipal waste; collect separately. Dispose of at WEEE collection sites per local regulation. WEEE contains chemicals that are hazardous to the environment and human health. The end-user's participation is critical to the success of WEEE collection.

- Do not burn batteries. Dispose of batteries in a safe and appropriate manner. • Non-rechargeable batteries are not to be recharged. • Rechargeable batteries are only to be charged under adult supervision. • Exhausted batteries are to be removed from the toy. • The supply terminals are not to be short circuited. • Different types of batteries or new and used/old batteries are not to be mixed • Rechargeable batteries are to be removed from the toy before being charged • Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Batteries are to be inserted with the correct polarity. • To prolong the life of this product, remove batteries when toy is in storage.



Do not dispose of WEEE in trash.

**REQUIRES :**  
**3 ALKALINE "AAA" BATTERIES (LR03)**  
**NOT INCLUDED**

**OUTDOOR: 1,000 FT ~ 2,000 FT**  
**INDOOR WITH DIFFERENT OBSTACLE: 250 FT ~ 1,000 FT**

**Note:** All controls, adjustments and switches that's instructed in the manual or follow-up instruction provided by the manufacturer that may be operated or adjusted without resulting in a violation of FCC rules

**WARNING:** Any adjustment that could result in a violation of FCC rules and it's recommended that could be performed only by or under the immediate supervision and responsibility of a person certified as technically qualified to perform transmitter maintenance and repair duties in this radio service by an

**CAUTION:** Changes or modifications i.e. replacing any transmitter component (crystal, semiconductor, etc.) not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

CAN ICES-3 (B)/NMB-3(B)

### ICES-003


This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Category II radiocommunication device complies with Industry Canada Standard RSS-310.

**IMPORTANT!** Always remember that you are using public frequencies when using these walkie talkies. You may find that this product will occasionally pick up transmissions from other transmitting devices using the same frequency.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

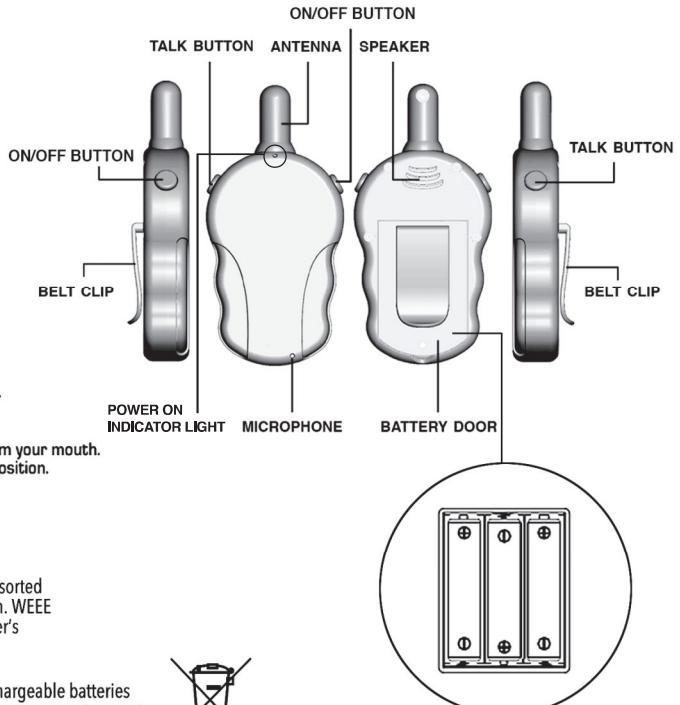

**REQUIRES :**  
**3 ALKALINE "AAA" BATTERIES (LR03)**  
**NOT INCLUDED**

**OUTDOOR: 1,000 FT ~ 2,000 FT**

**INDOOR WITH DIFFERENT OBSTACLE: 250 FT ~ 1,000 FT**

**• Please keep this instruction sheet for future reference, as it contains important information.**  
**• Adult assembly is required for battery installation.**  
**• Tool required for battery installation: Phillips screwdriver (not included).**  
**• Transmission carrier frequency is 462 MHz.**  
**• Walkie talkie range is up to 2,000 feet**  
**• Recommended use distance: minimum 6 feet.**  
**• Field strength: 9.45dBm at 3m.**  
**• If there is no play activity within a 15 minute time frame, the walkie-talkie has been programmed to automatically go into sleep mode. To reactivate simply press the talk button.**

### Care

- Wipe the toy with a clean cloth dampened with a mild soap and water solution.
- Do not immerse the toy.
- This product has no consumer serviceable parts. Do not take this product apart.



In the interest of better quality and value, we are constantly improving and updating our products. Consequently, colors and contents may vary from those shown on this package.



Please retain the packaging information for future reference.

### WARNING:

All rubber bands and wire ties, as well as tags, are not parts of this toy, and should be discarded for your child's safety.

**WARNING! NOT SUITABLE FOR CHILDREN UNDER THREE YEARS**

**! WARNING:**  
**CHOKING HAZARD-Small parts**  
**Not for Children Under 3 Years**