


# User Manual

## Waterproof Dusk to Dawn

## Wireless Remote Outlet

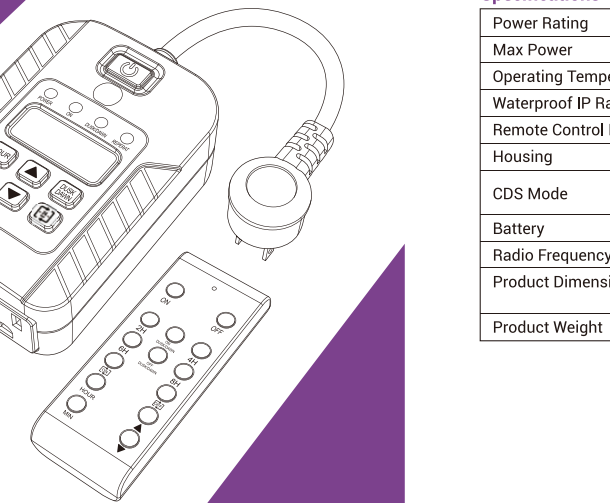

### Specifications

Power Rating	125VAC 60Hz
Max Power	15A 1875W Resistive/5A 1250W Tungsten/1/2 HP/TV-5
Operating Temperature Range	-25°C to 40°C (-13°F to 104°F)
Waterproof IP Rating	IP44
Remote Control Range	Up to 100 feet in line of sight
Housing	PC Resistance Burning (94V-0)
CDS Mode	ON at Dusk and OFF at Dawn Minimum 1 minute, maximum 23 hours 59 minutes
Battery	2 x AAA Batterys (for remote control)
Radio Frequency	433.89MHz
Product Dimensions	11.42 inches × 3.27 inches × 1.77 inches ( 29 cm × 8.3 cm × 4.5 cm)
Product Weight	0.67lbs(0.3kg)

### Control Panel Overview

1. Turns the Plug Outlet ON & OFF
2. Light Sensor:Automatically detects changes in ambient light levels.
3. Indicators for Input Power/Working Status/Dusk to Dawn and Repeat ON&OFF.
4. LCD Screen: Displays Timer,light sensor status(CDS ON/OFF),and repeat function status.
5. HOUR/MIN Button:Set the countdown time.Press HOUR and MIN,then press▲/▼to adjust time(1minute to 23 hours and 59 minutes)
6. ▲/▼: Manually adjust Hour and Minute: ▲ Increase Hour and Minute,▼Reduce Hour and Minute.
7. DUSK to DAWN(CDS)Button:Enables light sensor(CDS ON) for automatic control the light turn on at dusk turn off at dawn.Press again to disables(CDS OFF) for manual control.
8. Repeat Button:Enables daily countdown repetition(24 hours repetition only once a day). Press once again to disable daily countdown repetition.

### Remote Controller Overview

1. ON Button: Turns the Plug ON.
2. OFF Button: Turn the Plug OFF.
3. 2H/4H/6H/8H Button:Press to set a countdown time quickly,turn off the lights after 2,4,6, or 8 hours.
4. CDS ON Button:Enable light sensor(CDS ON)for automatic control the light turn on at dusk and turn off at dawn.(Note:The device allows customized your Wish Time from 1 minute up to 23 hours 59 minutes! So it allows you not have to ran the lights ON ALL NIGHT!)
5. CDS OFF Button:Press this button to disable Dusk to Dawn(CDS) OFF for manual control.
6. Repeat ON Button: Enables daily countdown repetition(24hrs repetition only once a day)
7. Repeat OFF Button: Press to disable daily countdown repetition.
8. HOUR Setting Button: Press ▲ to increase the hour and press ▼ to reduce the hour. Press HOUR to confirm the setting.MIN Setting Button: Press ▲ to increase the MIN and press ▼ to reduce the MIN.Press MIN to confirm the setting.
9. Press ▲ to Increase the number of Hours and minutes,▼ Reduce the number of Hours and minutes.

### Battery Information and Replacment

The remote controller requires 2 AAA batteries. To replace them

- 1.Slide off the battery compartment cover.
- 2.Insert 2 AAA batteries ensuring that their polarity markings (+ and-) match those in the compartment.
- 3.Slide the battery compartment cover back into place.
- 4.Test the remote control by pressing ON and OFF buttons to ensure that the LCD screen lights up.

### Installation Instructions

- 1.Locate an outdoor power outlet near the lights you wish to control.
- 2.Ensure the power outlet is compatible with theReceiver plug's specifications.
- 3.Plug the Receiverinto the power outlet, and make sure the Receiver at least 55 inches (1.4m) above the floor.
- 4.Connect your lights into Receiver.