

100.00 mm
100.00 mm
100.00 mm
100.00 mm

210.00 mm

1 Package list

2 Introduction about the Controller

- Power cord interface
- Shutter cable interface
- Display screen
- A Set key
- Start button
- B dot set key
- Selection key: Rotate the selection key to enter different function modes. Short press to enter the menu, long press to return to the previous menu.
- Direction bar: move the X-axis and Y-axis position of the slide rail.

3 Product assembly

- Please charge the battery before using this product.

2. Please install and use this product as shown.

- Loosen the four-foot screws, adjust the feet to level, and then tighten the four-foot screws. (As shown below)
- Push the ball head lock device forward by hand, and screw on the ball head. (As shown below)
- Install charged battery. (As shown below)
- Attach the camera and connect the shutter cable. (as shown below)

4 Feature operation

- Unlock the lever as picture ①, press down and move it toward the unlocking direction → turn on the power switch as picture ② → the camera slider will reset the calibration automatically, and the controller appears as picture ③ interface display → press to enter the main menu, the controller interface as picture ④.
- Choose a language: English is displayed by default when the machine is turned on, and there are two types of Chinese and English for selection.
 - Rotate 'SELECT KEY' to select 'SETTING', short press, select key' to enter this menu.
 - Switch to Chinese or English menu, long press, return to the previous menu level.
- Video shooting
 - Setting video shooting loop mode and speed parameters through menu selection.
 - Move the slider by 'directional lever', when the slider moves to the desired position and stops, press button A, the current position is key point A.
 - Repeat step ②, press key B to continue setting key point B.
 - After completing the key points and parameter settings, press the ► button to start the video shooting function; short press the ► button to switch between pause and resume operation, and long press the ► button to stop the video shooting function.
- Time Lapse
 - In the main menu, select the 'select key' to enter the 'time-lapse shooting' mode;
 - Move the slider by 'directional lever', when the slider moves to the desired position and stops, press button A, the current position is key point A.

- Repeat step ②, press key B to continue setting key point B.
- Rotate the 'select key' to select parameter items or set parameters. Short press to enter the selected item menu, long press to return to the previous menu.
 - Interval Time: Time between photo and photo
 - Output time: Time-lapse shooting function output video length time
 - Frame rate: The frame rate of the time-lapse video output
 - Delay time: start function, delay the start time after returning to the start point
 - Shutter time: the shutter exposure time for taking a photo
- After completing the key point and parameter settings, press ► to start the time-lapse function; press ► briefly to switch between pause and continue the operation, and press and hold ► to stop the time-lapse function.

5. Stop-motion animation

- In the main menu, use the select key to select and enter the stop motion animation' mode;
- Move the slider through the direction bar, when the slider moves to the desired position and stops, press Press button A to set the current position as key point A.
- Repeat step ②, press key B to continue setting key point B.
- Rotate the selection key to select parameter items or set parameters. Short press to enter the selected Item menu, long press to return to the previous menu.
 - Output time: stop motion animation function output video length time
 - Frame rate: the frame rate of the shooting video output
 - Delay time: start function, delay the start time after returning to the start point
- After completing the key points and parameter settings, press ► to start the stop motion animation function; press B Press the button to freeze the next frame of the image, press the A button to freeze the image of the previous frame; long-press the ► button to stop the stop-motion animation function.

GVM[®]
Great Video Maker

Huizhou City Latu Photographic Equipment Co., Ltd.
Web: www.gvmltd.com
B2B Email: bh@gvmltd.com
GVM Email: support@gvmltd.com
Amazon Email: amazon-support@gvmltd.com
Warehouse Add: 4301 N Delaware ave, unit D, PHILADELPHIA, PA19137, USA

6. Panoramic shoot

- In the main menu, use the 'select key' to select to enter the 'panoramic shooting' mode;
- Move the slider by 'directional lever', when the slider moves to the desired position and stops, press button A, the current position is key point A.
- Repeat step ② press key B to continue setting key point B.
- Rotate the 'Select Key' to select a parameter item or set a parameter. Short press to enter the selected item menu, long press to return to the previous menu level.
 - Interval time: the interval between photos and photos
 - Number of shots: number of photos taken
 - Delay: start function, delay the start time after returning to the start point
 - Buffer time: the buffer time before the next photo is taken
 - Shutter time: the shutter exposure time for taking a photo
- After completing the key points and parameter settings, press the ► button to start the panoramic shooting function; short press the ► button to switch between pause and resume operation, and long-press the ► button to stop the panoramic shooting function.

5 Intelligent APP control

Scan the QR code on the right with your mobile phone, download the GVM Slider APP and install it → open the APP and mobile phone Bluetooth → APP automatically searches for Bluetooth devices → find the Bluetooth name 'WS-2D-80' and click 'Connect' → APP control interface.

There are detailed operating instructions in the APP, click 'Help' to view.

DISCLAIMER

- Before using this product, please read the text carefully to ensure that the product has been operated correctly. Failure to follow and do not follow the instructions and warnings in this document may cause injury to you and the surrounding people, and even damage the product or other surrounding items.
- Once you use this product, you are deemed to have carefully read the disclaimer and warning, understand and acknowledge all the terms and contents of this statement, and promise to take full responsibility for the use of this product and the possible consequences.
- The design and specifications are subject to change without notice.

5 Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
--Consult the dealer or an experienced radio/TV technician for help

NOTE:
This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

RF Exposure Statement
To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance of 20cm the radiator your body.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

GVM[®]
Great Video Maker

WS-2D-80
MOTORIZED SLIDER