

WRS11 Remote Control Instructions


1. Product Overview

Product Name: Remote Control
Product Model No.: WRS11
FCC ID: 2BA76WRS11MNT015

2. Environment requirement

Operation temperature: +10°C~+40°C.
Storage temperature: -10°C~65°C.
Operating Humidity: 10%~80%RH, non-condensing.
Storage Humidity: 10%~85%RH, non-condensing.

3. Directions for Operation

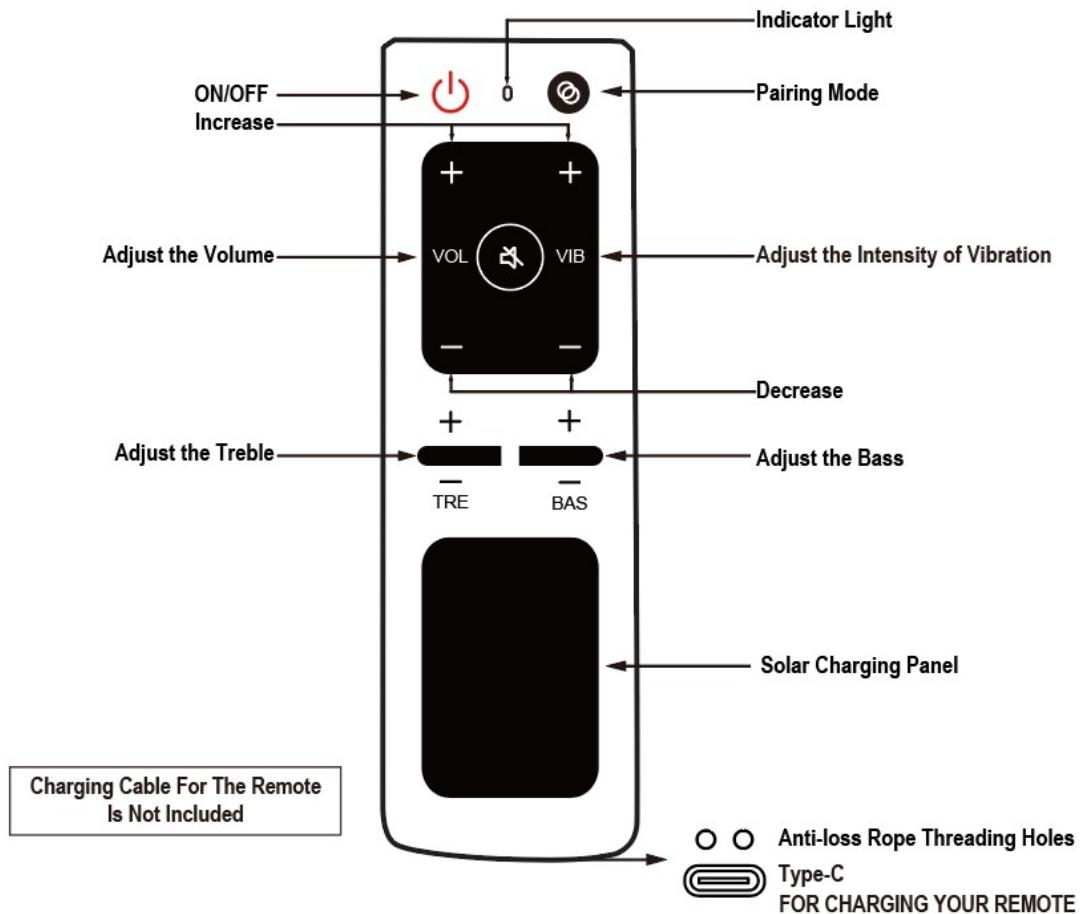

HOW TO PAIR THE RECLINER WITH THE REMOTE CONTROL

Turn off the power of the recliner first, and then press and hold the ON/OFF button of the RECL button on the remote control for 10 seconds at the same time, until the indicator light dims, indicating that the remote control has entered the pairing state, and then reconnect the power of the recliner, when the indicator light is on, it means that the recliner and the remote control are successfully paired.

HOW TO CONNECT WIRELESS

When using the sound system, first turn on the power of the recliner, press and hold the Pairing Mode button of the remote control for 3-5 seconds, when the blue signal light starts to flash, it means that the remote control has entered the pairing mode, and then use the mobile phone to search for the wireless connection named "MOTO Immersive Audio", click to pair, and the sound of "connected" will be emitted after connection; If you want to stop pairing, disconnect your phone or press and hold the MODE key again for 3-5 seconds, the blue signal light will stop flashing and disappear when pairing stops, and the voice prompt will be "Disconnected".

CONNECTING AND DISCONNECTING TO BROADCAST MODE

Double-click the MODE button to enter the broadcast mode, the recliner will send out a prompt sound of "broadcast mode", indicating that the broadcast mode has been entered, at this time, the blue signal light will turn red, if you enter the broadcast mode when connecting to the wireless connection, the signal light will turn pink; If you want to exit broadcast mode, double-click the MODE button again and hear the "Broadcast off" prompt.

HOW TO ADJUST THE VOLUME, TREBLE, BASS, VIBRATION AND MUTE

There are a total of 10 levels of adjustment of the Volume/Bass/Treble/Vibrator button, once you start using it, press to use the Volume and Vibrator button, push up to raise the Treble or the Bass, and push down to decrease. Pressing the mute button will make the volume change to 0, but the video or audio will continue to play. When in mute mode or with the volume set to 0, the voice announcements for powering on/off and switching the broadcast mode will still be played at 20% volume.

HOW TO CLOSE ALL

Press and hold for 3-5 seconds to OFF button, and the voice prompt "Power OFF".

HOW TO CHARGE THE REMOTE CONTROL

Located at the bottom of the remote control is a "C" USB port. This is used to charge the remote control. When you press any key, the light doesn't come on, which means your remote needs to be charged, use a suitable charger or USB port to charge the remote. When you connect the power supply to the remote, the indicator will start flashing blue, which indicates your remote is charging. When the remote is fully charged, the indicator will stop flashing but will remain solid until the power supply is removed. When the remote is completely depleted or fully charged, the estimated charging time is 3 hours. When the remote control is not in use, place it under the daily light, and the Solar Charging Panel can charge the remote control.

4. Matters needing attention:

- 4.1 The function will only work normally in proper working power conditions.
- 4.2 Remote Control needs DC 3.7-3.85V powered by li-ion batteries.
- 4.3 The control box is needed for proper control.
- 4.4 If problems are identified, they must be treated by professional personnel.

5. Additional attention for user:

5.1 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

5.2 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

5.3 For Intentional and unintentional radiators the manual shall caution the user and manufacturer that changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.