


User Manual

Egg Digital Clock Lamp (2nd generation)

Item	page	Item	page
1. Buttons introduce	3	10. Music / Bluetooth	11
2. Time setup	4	11. Touch switch	11
3. Alarm clock 1	5-6	12. Factory Reset	11
4. Alarm clock 2	7-8	13. Power supply	12
5. Sleep mode	9		
6. Color setting	10		
7. Brightness setting	10		
8. Sound selection	10		
9. Volume setting	10		

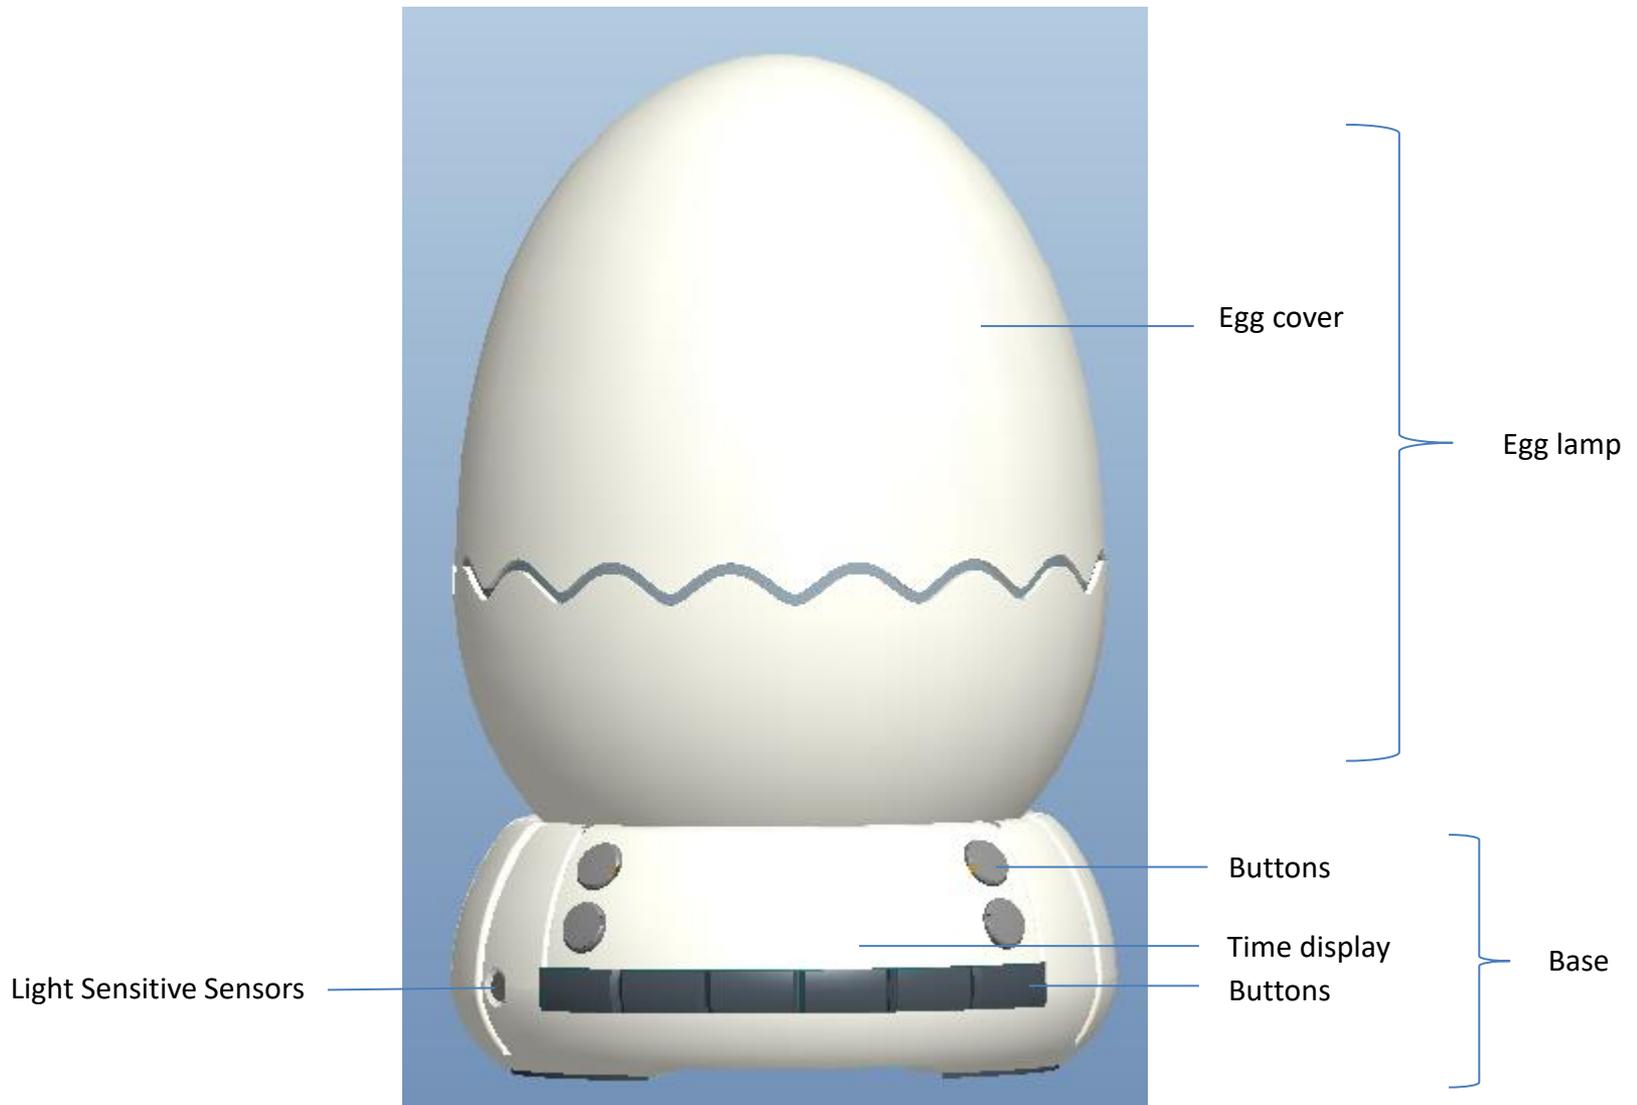

Buttons and function introduce

Turn on / off the function

Click the function buttons to turns on / off the related function.


Enter setup

Press and hold the below function buttons for 3 seconds to enter the corresponding setting mode.



During the setting process:

- Click the same function button again, it will exit the current setup mode, and save the previous settings.
- If no action is taken for 30 seconds, the setting mode will automatically exit, and the previous settings will be retained.

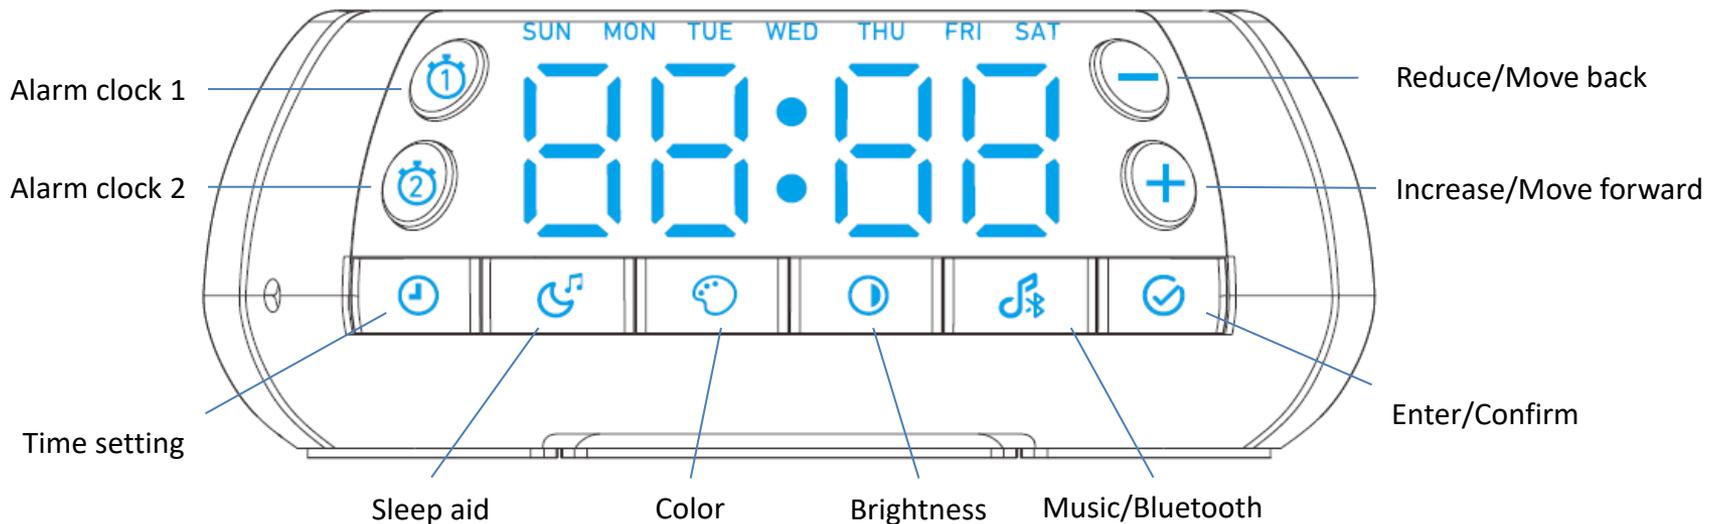

Time Setup

Manually setting time

Switch time display mode

Cycle click the time button  to switch time display between 12H mode / 24H mode / Turn off time display.

Enter time setup

Press and hold the time button for 3 seconds.

Manual time setup steps

steps	Operation	Used buttons
Step 1. Enter setting mode	Press and hold time button 3 seconds	
Step 2. Hour setting	Click +/- to adjust the hour → Click Enter	  
Step 3. Minute setting	Click +/- to adjust the minutes → Click Enter	  
Step 4. Date setting	Click +/- to adjust the date → Click Enter to save and exit	  

Automatic setting time

Connect the alarm clock to the user's phone via Bluetooth, and the phone time will be automatically synchronized to the device.

Alarm 1

Turn on or off Alarm clock 1

Click the Alarm 1 button. 

Enter setup Alarm clock 1

Press and hold alarm clock 1 button  for 3 seconds to enter the alarm setting mode.

The setting process:

hour > minute > song > set up user working date.

During the setting mode, click the Alarm 1 button again to save and exit the alarm clock 1 setting mode.

(Please refer to the detailed steps for setting alarm clock 1 on the next page)

Detail steps of setup alarm clock 1

Steps	Operation		Used button
Step 1. Enter setting mode	Press and hold alarm clock 1 button 3 seconds		
Step 2. Hour setting	Click + or - to adjust the hour → Click enter		  
Step 3. Minute setting	Click + or - to adjust the minutes → Click enter		  
Step 4. Sound setting	Click + or - to select the sound → Click enter		  
Step 5. Lighting color setting	Click + or - to select the color → Click enter		  
Step 6. Working date setting(choose 1 of 2)	1. Select default working date(MON, TUE, WED, THU, FRI)	Press and hold Enter for 3 seconds, save and exit	
	2. Setting user defined working date	Click + or - button to move the date cursor	 

(Please continue with the following steps to set user-defined working days)

Steps	Operation	Used button
Step 1. Set the 1st date	Click + or - to move the date → Click Enter button to select or cancel the date	  
Step 2. Set the 2nd date	Click + or - to move the date → Click Enter button to select or cancel the date	  
Step 3. Set the others date	... <i>(With the same method to complete the date setting)</i>	  
Step 4. Save and exit setting mode	Click alarm clock 1, or press and hold enter button 3 seconds to save and exit	 

Alarm 2

Turn on or off Alarm clock 2

Click the Alarm 2 button. 

Enter setup Alarm clock 2

Press and hold alarm clock 2 button  for 3 seconds to enter the alarm setting mode.

During the setting mode, click the Alarm 2 button again to save and exit the alarm clock 2 setting mode.
The setting process is similar to Alarm 1.

(Please refer to the detailed steps for setting alarm clock 2 on the next page)

Detail steps of setup alarm clock 2

Steps	Operation		Used button
Step 1. Enter setting mode	Press and hold alarm clock 2 button 3 seconds		
Step 2. Hour setting	Click + or - to adjust the hour → Click enter		  
Step 3. Minute setting	Click + or - to adjust the minutes → Click enter		  
Step 4. Sound setting	Click + or - to select the sound → Click enter		  
Step 5. Lighting color setting	Click + or - to select the color → Click enter		  
Step 6. Working date setting(choose 1 of 2)	1. Select default working date(SUN, MON, TUE, WED, THU, FRI, SAT)	Press and hold Enter for 3 seconds, save and exit	
	2. Setting user defined working date	Click + or - button to move the date cursor	 

(Please continue with the following steps to set user-defined working days)

Steps	Operation	Used button
Step 1. Set the 1st date	Click + or - to move the date → Click Enter button to select or cancel the date	  
Step 2. Set the 2nd date	Click + or - to move the date → Click Enter button to select or cancel the date	  
Step 3. Set the others date	... <i>(With the same method to complete the date setting)</i>	  
Step 4. Save and exit setting mode	Click alarm clock 2, or press and hold enter button 3 seconds to save and exit	 

Sleep Mode

Turn on Sleep mode

Click the Sleep Mode button  to cycle select working times of 10min, 20min, 30min, and Off. Then it will start working after 3 seconds.

Turn off Sleep mode

Click the button  again to turn off the sleep mode.

Setup sleep mode

Press and hold the button  for 3 seconds to enter the setting mode.
The setting order: song -> max volume -> light color.

Steps of setup sleep mode

Steps	Operation	Button
Step 1. Enter setting mode	Press and hold Sleep mode button 3 seconds	
Step 2. Song setting	Click + or - to select the sound → Click Enter	  
Step 3. Volume setting	Click + or - to adjust the volume → Click Enter	  
Step 4. Color setting	Click + or - to select the color → Click enter button to save and exit	  

The second setting method

When the sleep mode is working (*not setup mode*), users can use the + or - buttons   to select songs, adjust the max volume, and use the Color button  to select the color.

Color Setting

Change colors

click the Color button  to turn on the light and switch 8 colors and 3 color-changing modes. then color and + / - button status lights will blink, users can click the + or - buttons   to select the color.

Turn off light

Press and hold 3 seconds this button. 

Brightness Setting

Adjust brightness

Click the Brightness button  to turn on the light and cycle through 5 brightness levels and off. The brightness and + / - button status lights will blink, users can click the + or - buttons   to select the brightness level.

Note: The color number 9-11th, it's flash mode, the brightness could not be adjusted.

Turn off light

Press and hold 3 seconds this button. 

Sound Selection

Skip to the next song

Click the + button. 

Back to the previous song

Click the - button. 

Volume Setting

Increase volume

Press and hold the + button  for 1 second. Continuous press and hold will keep increasing until it reaches the maximum.

Decrease the volume

Press and hold the - button  for 1 second. Continuous press and hold will keep decreasing until it reaches the minimum.

Music / Bluetooth

Turn on music

Click the music button  to turn the built-in music on / off.

Turn on Bluetooth

Press and hold button  2 seconds to turn Bluetooth on or off. Find 'egg light-2' on your phone's Bluetooth connection and select the connection.

Touch switch


The touch switch is next to the charging metal ring at the bottom of the egg lamp.

Change color

Gently touch this position with finger to change the color. Continuously touching this switch to cycle through 8 colors and 3 color changing modes.

Turn on or off light

Press and hold for 3 seconds to turn off the lights; Touch it again to turn on the light.

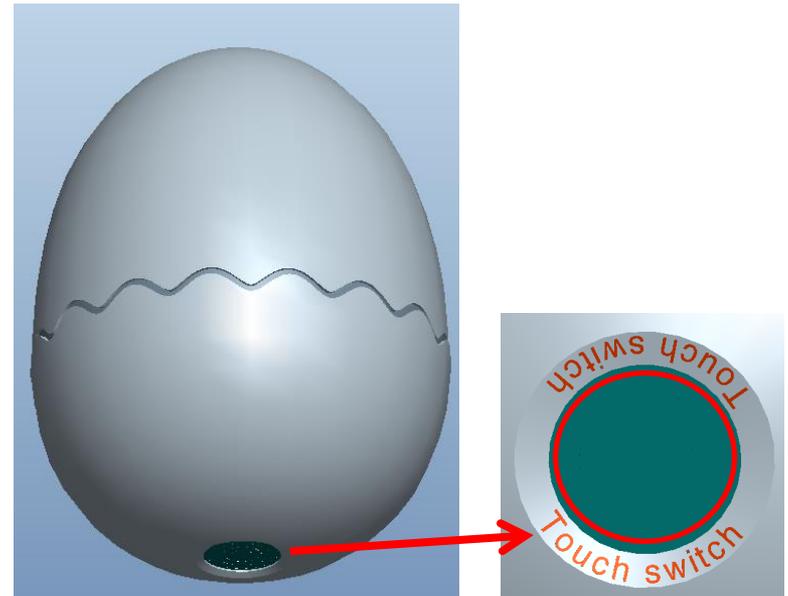

Touch switch

Factory Reset

Press and hold the Time buttons  and Confirm buttons  simultaneously for 5 seconds to restore factory settings.

Power supply

DC 5V power supply

Type-C port

The mobile phone adapter which out put DC 5V voltage and type-c port is available.

Charging lamp

The six metal pins at the center of the base are power supply interfaces. The egg lamp is equipped with a rechargeable lithium battery inside. Please place the egg lamp on the base and ensure good contact. Then, the egg lamp can be charged.

Note:

Keep the pins and the metal circle clean for good conductivity.

Do not use metal objects to short-circuit each metal pins.



Memory battery

A button battery, model CR2032, is equipped in the base. which is used to remember the setting status.

If the machine displays garbled text or cannot remember user settings, please unscrew the screws on the bottom battery cover, remove the cover, and replace the battery with a new one.

★ For prevent children from accidentally swallowing button batteries, keep away the children under 3 years old to contact with button battery.

Bottom side

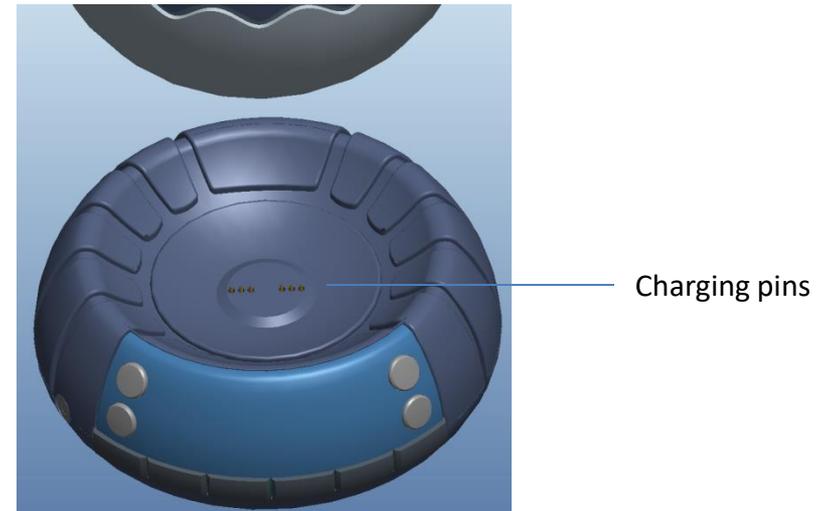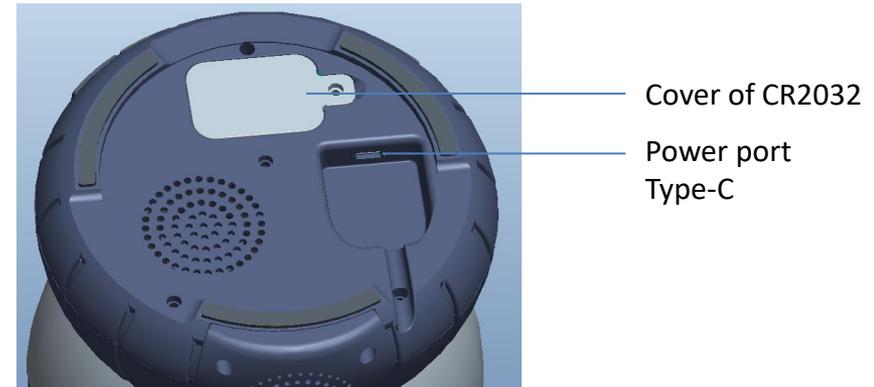

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.