

## Specification

Product	5mart Cordle55 Electric Mop
Model	835326
Rated Voltage	11.1V
Battery Capacity	2000mAh
Rated Power	50W
Adapter Input	100-240V-50/60Hz 0.5A
Adapter Output	13.2 1000mA

※ The specifications and design of this product are subject to change without notice.

## Maintenance


The product body cannot be rinsed in water, otherwise the internal parts of the product will be damaged

※ Please tell the product name and model when inquiring.

MR-A3

# SMART CORDLESS ELECTRIC MOP

## Instruction Manual

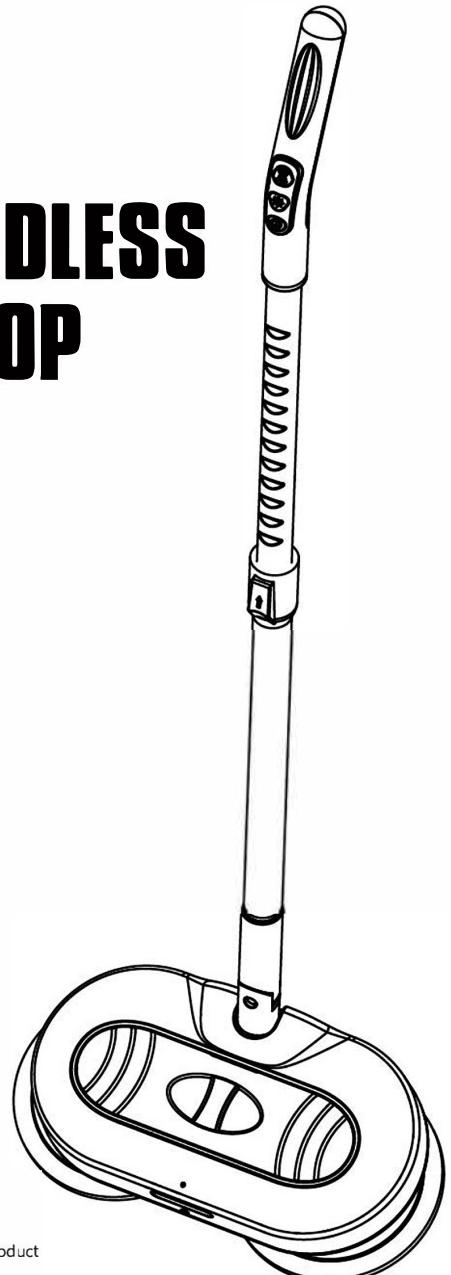

- Thank you for purchasing this product.
- Please read the manual carefully before using this product and operate in accordance with the manual.
- Please also keep the manual properly for future reference.

## SAFETY PRECAUTIONS Please read this manual carefully

● In order to prevent injury and property damage, please read this manual carefully and avoid misuse.

If you use the product in an incorrect way or ignore the contents of this manual, it may cause serious damage and injury. Please pay attention to the following instructions.

**⚠ WARNING** This symbol means that if the content or action is not followed, it may cause serious injury.

**⚠ ATTENTION** This symbol means that if the content or action is not followed, it may cause property damage or other injuries.

### ● Please abide by the following pictures and text.

  Indicating prohibition, please refer to the manual for details.

  It is strongly recommended to do so, please refer to the manual for details.

**When the product leaves the factory, 10-50% of the power is generally reserved. It is recommended to charge the product firstly to ensure the use effect. It takes about 2.5-3 hours to fully charge at room temperature. The actual charging time varies according to the environment.**

## ⚠ ATTENTION

 Do not use this product outdoors.

 Disabled persons (persons with impairments in physical, perception and thinking abilities) and children must be accompanied by a guardian when using it.

 When the power plug or power cord fails, please stop using it.

 When disconnecting the power, you should pull the plug by hand, do not pull the power cord directly.

 When adding water to the water tank, do not add other chemical solvents such as detergents, perfumes, essential oils, etc., to avoid damage to parts.

 During the cleaning process of the product, please do not turn it upside down or lift it, to avoid water tank leakage and causing short circuit.

 Please keep the water outlet unobstructed. When it is blocked, please do not disassemble it privately, and contact a professional for handling.

 Do not leave the remaining water in the water tank during product cleaning or after using it.

 When cleaning the product, do not use alcohol, benzene, or thinner to clean the surface of the product, so as not to damage the appearance of the product.

 Do not stand or sit on the machine to avoid damage to the machine or personal injury.

## ⚠ ATTENTION

**!** Please use the original accessories provided by the manufacturer.

**!** When the product is not being used or before maintenance, please cut off the power to avoid danger.

**!** Be careful of squeezing in the door gap or friction with sharp objects, keep away from heat sources.

**!** Before using this product to clean, please tidy up the debris in the area to be cleaned.

**!** Before cleaning, please make sure that the cleaning cloth is installed correctly.

**!** Please be more careful when using the product to clean the corridor.

**!** Before removing the cleaning cloth, please cut off the power supply and wait for the product to stop before operating.

**!** When cleaning and maintaining the product, please disconnect the power first, and then clean it with a dry/wet cloth.

**!** Unplug the power plug after use and during maintenance.

**!** Please remove the wet cleaning cloth before storing the product.

**!** Please store the product in a dry and ventilated room.

**!** If the water hardness in the living area is high, it is recommended to add pure water when adding water.

**!** In order to avoid danger, when the product fails, it must be repaired or replaced by professionals from the distributor, its repair department or similar departments.

**!** When you need to use a detergent, please choose a neutral detergent and dilute with water.

## ⚠ WARNING


 The product is strictly prohibited from being immersed in water or other solutions to avoid dangers such as fire, electric shock, etc.

 Do not touch the plug or the product body with wet hands, and do not use the product when you are barefoot.

 Please avoid clothing or any part of the body (such as hair, fingers, etc.) from getting caught in the rotating wheels of the body, otherwise it may cause personal injury.

 Do not try to disassemble or repair the product by yourself. Incorrect assembly and maintenance can easily damage the motor and cause potential safety hazards in use.

## PARTS OF THE PRODUCT


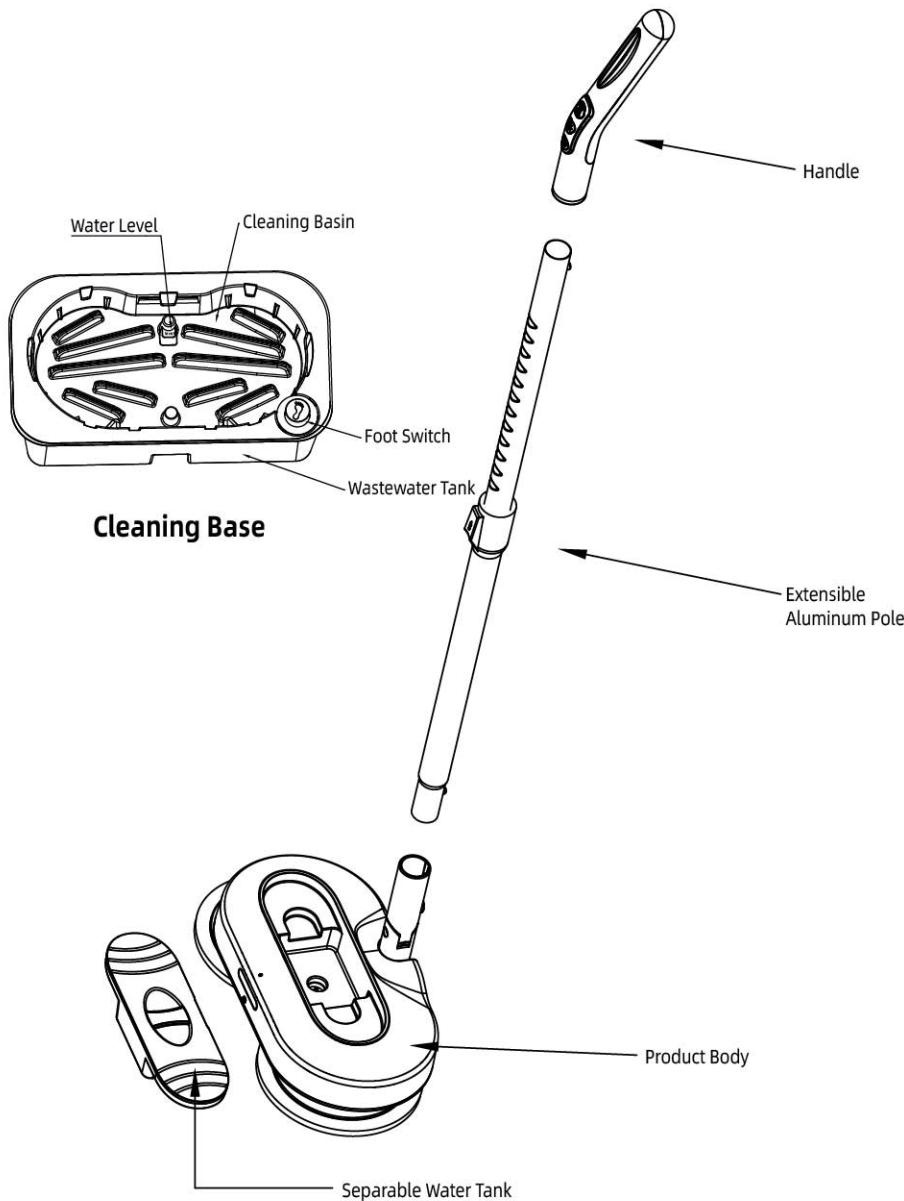


## HOW TO USE


### Guidance

#### 1. Filling water:

Take out the water tank, open the silicone cover, fill it with clean water, and close the silicone cover.

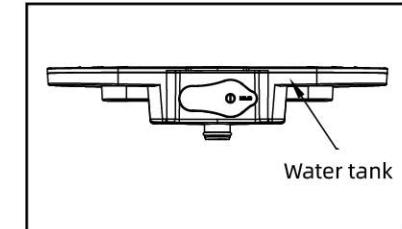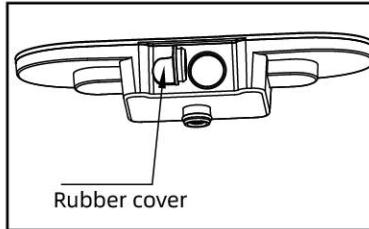


#### 2. Put the water tank back into the mop body, and press it to be parallel to the mop body as the below picture shows.

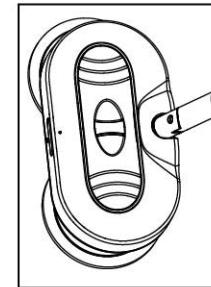


### Turn on/off

1. When you put down the pole by the handle, you will hear a click to activate the product: short press the power button on the handle to turn it on, the product will start working as the below picture shows.
2. After the power is turned off, please restore the pole to an upright state, and a click will be heard when it is upright.
3. When the pole is lying flat or not upright, if there is no operation for 30 minutes, the product will go into sleep state. To start the working, the pole needs to be upright first, then put down to activate, and short press the power button to turn on. If the mop product is not using, the mop pole should be in an upright state to keep well.

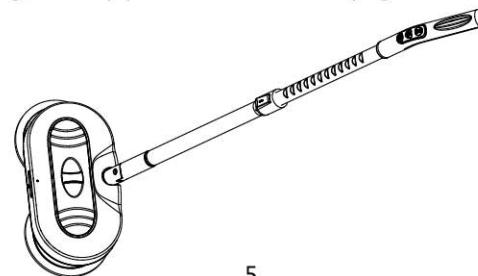


## MAIN FUNCTION

### 1 Water Spray Function

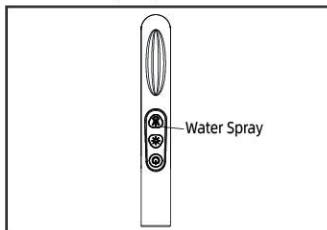


If you need to wet the ground, press the water spray button, and the water outlet will spray water mist to wet the ground.

### 2 Illuminating Function

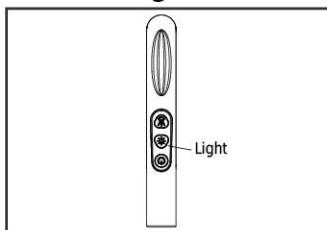


Short press the light button to turn on the light, and then short press to turn off the light.

### 3 Remote Control Battery Changing

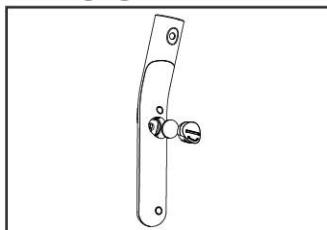


When the remote control is out of power, disassemble the back battery cover by turning it counterclockwise with one coin or something similar, and then replace with a new CR2032 button battery. The battery cover can be locked clockwise.

### 4 Charging

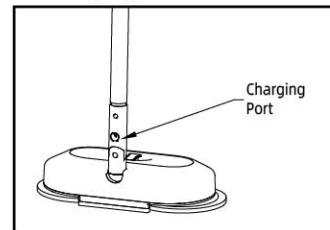


When charging, the indicator shows a red light, and a green light shows when the battery is full.  
Working time: about 60 minutes. The actual use time varies depending on the environment.  
Charging time: 2.5-3 hours.

### 5 Cleaning Mode

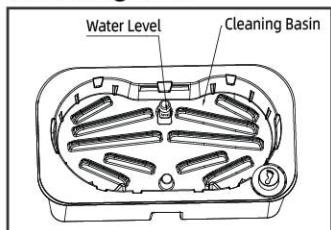

Add water to the height of the word "level" in the basin as the picture shows, and the water will come out from the designed holes if the water exceeds the level.

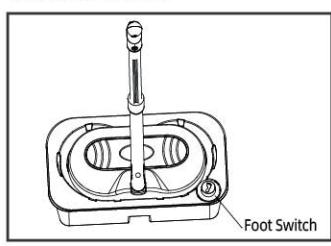

Put the pole upright, press the power button for 3 seconds, the wheels will start to rotate, enter the cleaning mode for about 3-5 minutes, and then step on the foot switch once, the water in the cleaning basin will flow into the wastewater tank and then the product enters the drying mode. After about 3-5 minutes, you can short press the power button to stop, then the two pieces of round cleaning cloth is cleaned, and the triangular cloth in the middle can be get off and cleaned if needed.

## TROUBLESHOOTING

● Something goes wrong? Before you want to fix it, try the following methods to solve it.

Circumstance Occurs	Measures
The handle buttons do not respond	Check if the product is activated and turned on normally.
	Check if the product has power.
	The handle is a Bluetooth device, check whether it can be used normally after restarting the product.
Can't spray water	Check if there is water in the water tank.
	Check whether the water outlet is blocked. If it is not used for a long time, it may be blocked by scale. Try to use citric acid soak for 24 hours before using.
No response from indicator light	Check if the charging port is loose, plug in the adapter again.
	Check if there is water in the charging port, if there is, please contact after-sales customer service.
	Check if the adapter indicator is on, if not, please contact after-sales customer service.
Water stains/stains remain on the floor after use	There are much dust and debris in the cleaning area, use a vacuum cleaner/broom to clean up before use.
	The cleaning cloth may be too dirty or too wet, disconnect the power and replace the cleaning cloth.
	The cleaning cloth may be washed with washing powder, and may be not thoroughly washed. The washing powder remains on the cleaning cloth. Please use liquid detergent to clean the cleaning cloth again.
	If the cleaned area has not been cleaned for a long time or is a place with thick grease deposits such as a kitchen, please use detergent to clean the stained area once, and then do the mop cleaning.
	It may be the residue on the floor after cleaning with the detergent used before, and it needs to be cleaned several times with the product.
Product is difficult to push	Check if it needs to be charged (red light flashes slowly/flashes fast).
	Try to push the product lightly.

If the above problems still cannot be solved, please contact a professional to deal with it, do not disassemble by yourself.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.