


PLEASE READ THROUGH THIS INSTRUCTION MANUAL COMPLETELY BEFORE USE. AND KEEP IT WELL FOR FUTURE ASSISTANCE WHENEVER REQUIRED.

PACKAGE CONTENT

- 1 X MINI HDMI CONSOLE
- 2 X WIRELESS CONTROLLERS
- MICRO-SD CARD (According to your choice)
- 1 X USB CABLE
- 1 X MANUAL

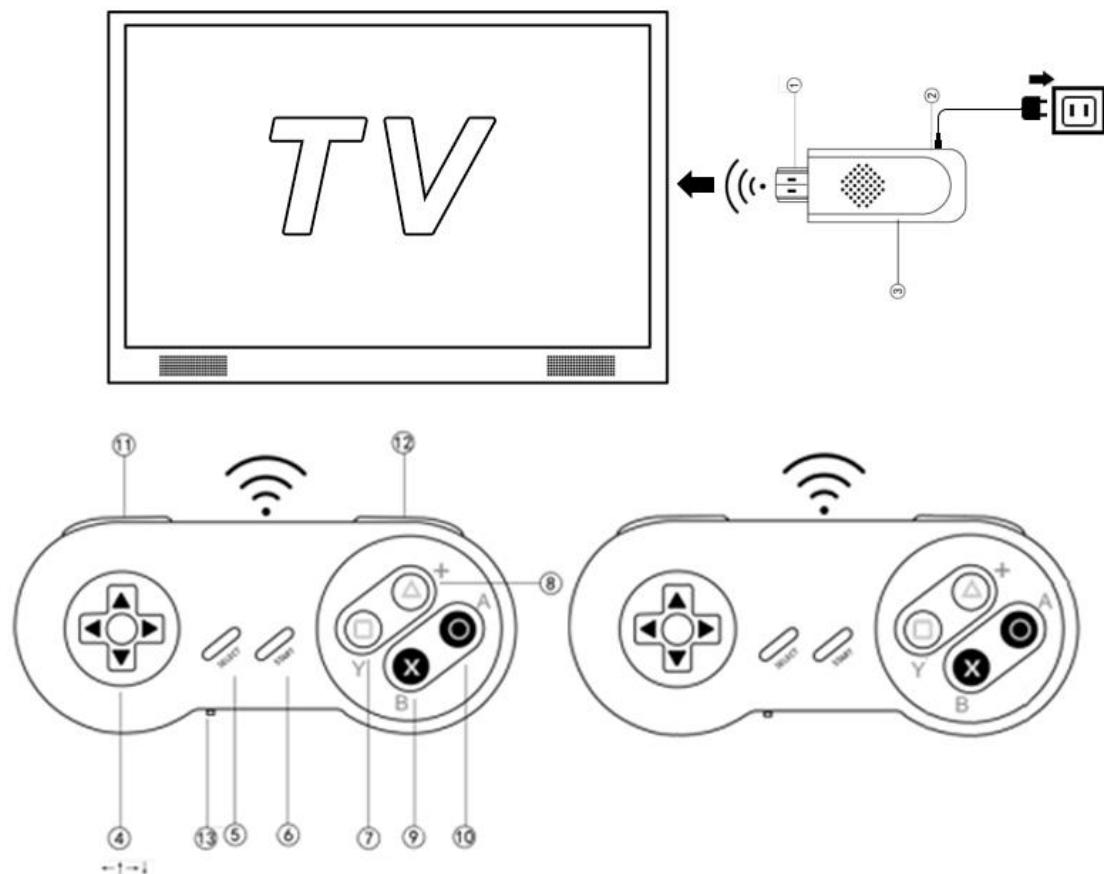

NAME AND FUNCTIONS OF EACH PART AND INSTALLATION

- ① HDMI PLUG
Insert to HDMI INPUT of TV set directly.
- ② DC-IN (Micro-USB) \Best to use 5V 1A input power
Connect to power supply
- ③ MicroSD SLOT
To insert a MicroSD memory card with games.
- ④ DIRECTIONAL JOYSTICK
Move to steer 8 directions as follows:

←, ↗, ↑, ↘, →, ↙, ↓, ↛

⑤ SELECT(ADD COINS)

Press to select playing mode or to add coins under arcade games.

⑥ START

Press to start game play.

NOTE: Press “SELECT + START” buttons on the controller simultaneously to call out a pop-up menu asking for options such as “SAVE, SETTINGS, EXIT or CONTINUE”.

⑦ Y BUTTON: function may vary under different game.

⑧ X BUTTON: function may vary under different game.

⑨ B BUTTON: function may vary under different game.

⑩ A BUTTON: function may vary under different game.

⑪ L BUTTON: function may vary under different game.

⑫ R BUTTON: function may vary under different game.

⑬ P1 / P2 SWITCH: Toggle to define the controller as P1 or as P2

(NOTE: it's NOT a ON/OFF power switch, In the game menu of the main interface, only P1 can operate it. After entering the game and selecting a two-player game, P2 can operate it, but P2 cannot operate the main menu.)

BATTERY INSTALLATION

- Use a screwdriver to open the battery covers of two wireless controllers.
- Insert AAA batteries for each controller correctly by following the polarity indicated inside the battery compartment.
- Close and screw up the battery cover firmly.

WARNINGS! Please remove the AAA batteries out of the controller if they will not be used for a long period and store them in a cool dry place.

START TO USE

Please follow below steps to start game play.

- 1) Insert the mini HDMI console directly to HDMI input of TV set. Or connect it to TV via a HDMI extension cable.
- 2) Connect one end(Micro-USB plug) of USB cable to the mini HDMI console and the other end of USB cable to any 5V electric power source such as USB port on TV set, mobile phone charger, power bank or electrical outlet with USB……etc.
- 3) Turn on TV set and switch the TV source to be HDMI input. (If the TV has more than one HDMI input, please remember to switch the source corresponding to the HDMI input with mini console connected.)
- 4) Install batteries of each controller following the BATTERY INSTALLATION guide above.
- 5) Press any key on the controller to activate as it has auto power sleep function.
- 6) Scroll the directional joystick on controller P1 to select the desired game and press “START” or “A” sometimes to enter the game and enjoy your playing.

- 7) Press “SELECT + START” buttons on the controller simultaneously to call out a pop-up menu asking for options such as “SAVE, SETTINGS, EXIT or CONTINUE”.

WARNINGS & PRECAUTIONS

1. Please do NOT disassemble or try to fix the product and its related parts & components at your own discretion.
2. Avoid liquid splash over the product and its related parts & components.
3. Avoid hitting roughly or dropping the product and its accessories.
4. Please do NOT store the product in an area of wetness, dust and dirt.
5. Please remove the AAA batteries out of the controller if they will not be used for a long period and store them in a cool dry place.
6. Always use the product in a well-ventilated and well-lit area ONLY.
7. Use the product in a less signal interference area as the product adopts 2.4G wireless technology and the best distance is below 5 meters recommended.
8. Make sure that the controllers have enough battery capacity. Insufficient energy could lead to mal-function or poor connection.
9. Please do NOT use the product for a long period continuously. It's recommended to take a 10-15-minute rest every hour of playing.
10. Please keep an appropriate distance from the TV while playing games.
11. When feeling drowsy, weak, weary or tired, please IMMEDIATELY stop using the product and take a rest. Or please consult the doctor when your eyes are uncomfortable.
12. Keep the product and all other accessories out of reach of children under 6 years to avoid any accident.
13. It's recommended to use the product under supervision or watch of adults.
14. Recommended age of use: 6 years up.

Frequently Asked Questions and Answers

➤ **If the gamepad control is abnormal, such as clicking a button, it will keep moving. This is mainly because the signal is unstable.**

1. It may be that the voltage or power of the gamepad is insufficient, causing the signal to be unstable and the buttons to be inflexible. It can be solved by replacing it with a new battery of 1.5V or more.
2. It may also be that the input voltage of the game console is plugged into the TV, and the output voltage of some TVs is insufficient, resulting in unstable wireless reception signals. Replace it with a 5V1A mobile phone charger to charge the game stick.
3. The distance between the handle and the game console is too far, such as more than 3 meters. Or there is an obstacle between the handle and the game console. If the signal is affected, find a way to reduce the impact of obstacles.

➤ **If you find that the handle does not work at all**

1. Check the bottom of the handle to see if it has slipped to P2. P2 is the secondary handle. If it is slid to P2, the menu and main interface cannot be operated. It must be P1 to operate the main interface. P2 needs to enter the game, and select in the game Only a two-player game

can work.

2. Check if the battery is inserted backwards

➤ **Can all the games or downloaded games in the game console be played normally?**

Due to the development of the simulator for SFC at several generations, many different versions of games appear on the Internet. Due to the existing technology, it is still not possible to make one simulator adapt to all games. We currently have 95% game compatibility of our game consoles, but there are still about 5% of games that may not be perfectly compatible, may not be able to open, or there is a game console that does not support you, or it is very stuck after opening. These are all normal phenomena. Generally, you can download other versions of the game. Hope to understand.

➤ **Where do I get more games**

You can download some SNES games here: https://www.freeroms.com/snes_roms_A.htm

After unzipping, store it in the ROMS folder

➤ **How to reset the contents of a game console**

You need to contact customer service first, download the complete content, and then unzip it and put it in the TF card

ELECTRICAL SPECIFICATIONS:

POWER SUPPLY OF MINI HDMI CONSOLE: 5V, 500 Ma

POWER SUPPLY OF EACH CONTROLLER: 1.5V (AAA BATTERIES OF 1.5V)

FCC Compliance Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction