 





BLUETOOTH® PORTABLE KARAOKE  
WITH WIRELESS MICROPHONE

AGES  
3+


CONTENTS

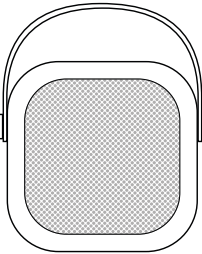

 1 Karaoke Machine



1 Wireless Microphone

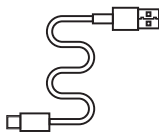 

1 USB-A to USB-C Charging Cable

SAFETY WARNINGS

- Adult supervision required.
- Karaoke machine, microphone and cable are not water resistant. Do not expose to liquids other than to a damp cloth.
- Do not ingest any items included in this set.
- Use this product only for its intended purpose. Do not use attachments of any kind.
- Inspect before every use. If product appears damaged in any manner, discontinue use and discard immediately.
- Put this product into its package when not in use and store in a cool, dry location protected from direct sunlight.

BATTERY WARNINGS

- This product contains batteries that are non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult supervision is required while charging the battery.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.
- Keep these instructions for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Model No.: 1018888

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Computers, tablets, Smart Phones, and music players must have built-in BLUETOOTH® wireless technology to connect. This product is not affiliated with or endorsed by any of the above mentioned, referenced or pictured trademarks, companies or devices.



FAO® and FAO Schwarz® names and logos are trademarks or registered trademarks. [www.fao.com](http://www.fao.com)  
Distributed by and © 2024 MerchSource, LLC. Irvine, CA 92618. All rights reserved. For customer support, please call 1-888-987-6533.  
Printed in China.

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.  
Due to continuous product improvements, the illustrations in this manual may differ slightly from the actual product.



**WARNING:**

**CHOKING HAZARD – Small Parts.**  
**Not for children under 3 years of age.**



BLUETOOTH® PORTABLE KARAOKE  
WITH WIRELESS MICROPHONE

AGES  
3+

**Previous/Volume Decrease**  
Press to change to previous song.  
Press-and-hold to lower music volume.

**Mode**  
Press to change music input.

**Next/Volume Increase**  
Press to change to next song.  
Press-and-hold to increase music volume.

**LED**  
Press to turn on/off LEDs.

**Power/Play/Pause**  
Press to play/pause music.  
Press-and-hold to power on/off.

**Vocal Filter**  
Press to filter out vocals from music.

**AUX Audio Input**  
Connect a device by AUX cable to play music.

**USB-A Audio Input**  
Connect a USB-A drive to play music.

**TF Card Audio Input**  
Connect a TF card to play music.

**USB-C Charging Input**  
Connect the included USB-C cable to charge.

**LED Charging Indicator**  
Blue: On  
Red: Charging

**Power/Mute**  
Press-and-hold to turn on/off.  
Press to mute/unmute microphone.

 
**Mic Volume Up/Down**  
Press to increase/decrease mic volume.

**Voice Effects**  
Press to change between 8 voice effect settings.


**LED Indicator**  
Blue: On  
Red: Charging

**USB-C Charging Input**  
Connect the included USB-C cable to charge.


GETTING STARTED

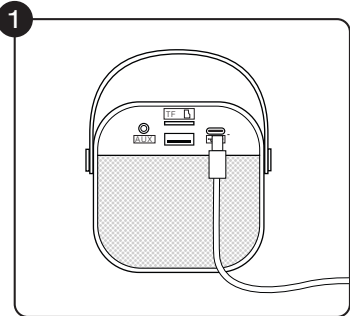

 
Charge the karaoke machine and microphone by connecting the USB-C side of the included cable into the karaoke machine or microphone and the USB-A side into a power source.

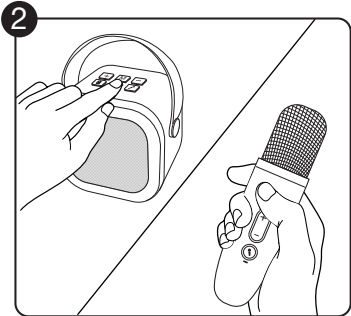

 
Disconnect the charging cable and turn the karaoke machine and microphone on.

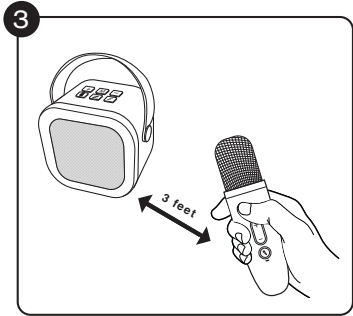

 
Use the microphone while it is at least 3 feet away from the karaoke machine.

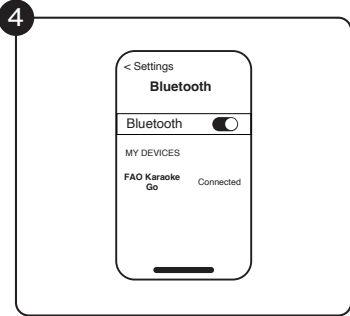

 Connect a device to the karaoke machine to play music. The karaoke machine will default to Bluetooth mode. Open the Bluetooth menu on your device and select "FAO Karaoke Go" from the available devices

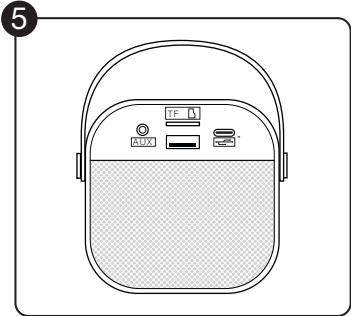

 To play music by AUX, TF card or USB, connect your device using the ports on the back of the karaoke machine.

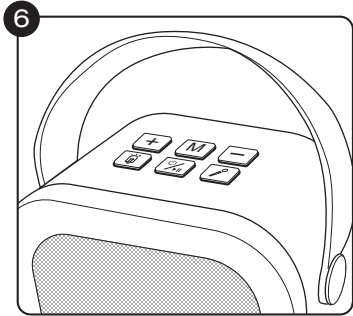

Control the music using your device or the controls on the karaoke machine.