


SERIES 3

FLiteScooter

User Guide

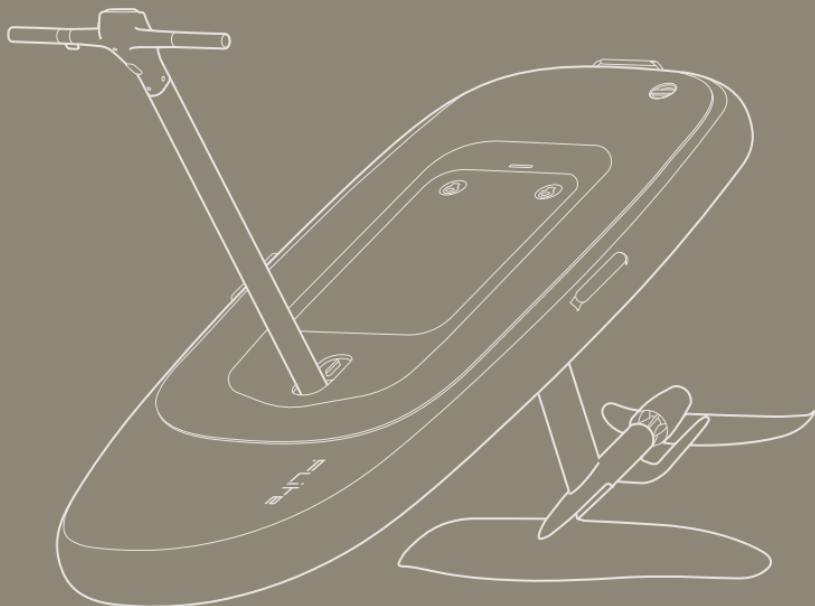



## Important

IN ORDER TO OPERATE THE PRODUCT CORRECTLY AND MINIMISE THE CHANCES OF DAMAGE, SERIOUS INJURY OR DEATH, IT IS ESSENTIAL TO READ AND FOLLOW ALL OF THE INSTRUCTIONS AND WARNINGS IN THE USER GUIDE PRIOR TO ASSEMBLY, SETUP OR USE. BY USING A FLITESCOOTER YOU AGREE THAT YOU DO SO AT YOUR OWN RISK.

CAUTION: THIS PRODUCT HAS BEEN KNOWN TO DRAMATICALLY IMPROVE YOUR LIFE AND HAPPINESS LEVELS.



For the latest version and translations of this guide visit

[fliteboard.com/support](https://fliteboard.com/support)



Watch our video tutorials at

[fliteboard.com/video](https://fliteboard.com/video)



Authorised Flite Service, Resellers and Fliteschools

[fliteboard.com/locations](https://fliteboard.com/locations)



Download the Flite App

[fliteboard.com/app](https://fliteboard.com/app)



Flitescooter support

[fliteboard.com/support](https://fliteboard.com/support)



Flitescooter contact

[fliteboard.com/contact](https://fliteboard.com/contact)



Material Safety Data Sheets

[fliteboard.com/MSDS](https://fliteboard.com/MSDS)



Ready to fly post storage checklist

[fliteboard.com/readytoflychecklist](https://fliteboard.com/readytoflychecklist)



6 Month Flitecell Checklist

[fliteboard.com/flitecellchecklist](https://fliteboard.com/flitecellchecklist)

## Flitescooter User Guide

<b>6 Safety and Disclaimer</b>	27 Download Flite App and update
6 Warning	28 Flite Controller overview
6 Intended use	30 Connecting Flite App to Flitescooter
7 Propulsion system	31 Connecting Flite App to Flite Controller
7 Hydrofoil safety	31 Capturing sessions
7 Learning to Flitescooter	32 Flite Controller pairing procedure
8 Important rider safety	34 Flite Controller screen guide
10 Flitecell	38 Turning on Flitecell
<b>11 Warranty and Compliance</b>	39 Connect the handlebars to Flitescooter
11 Warranty	40 Flitescooter safety
11 Repairs	40 Select a suitable riding location
11 Shipping compliance	41 Arming the motor
<b>12 What's in the box</b>	<b>42 Riding Flitescooter for the first time</b>
12 Box 1 Flitescooter and wings	44 Flitescooter common mistakes
13 Box 2 Flitecell + Box 3 Charger	45 Flitescooter pro tips
14 Box 4 Flitescooter eFoil	45 Foiling through turns
15 Box 4 Accessories pouch	<b>46 Maintenance and storage</b>
<b>16 Getting started</b>	47 Flitescooter
17 Charging Flite Controller	48 eFoil system
18 Flitecell charging procedure	48 Flite Controller overview
18 Flitecell Indicator Guide	48 Handlebars overview
19 Charging Flitecell	49 Flitecell
20 Flitescooter assembly	<b>50 Troubleshooting</b>
22 Connect the eFoil to Flitescooter	52 Technical specifications
23 Installing Flite Jet	56 Warranty registration / Details of purchase
24 Connect the fuselage tail	57 Maintenance schedule
25 Connect the stabiliser wing	
26 Connect Flitecell to Flitescooter	

## Safety and Disclaimer

All safety and disclaimer information is subject to change at the sole discretion of Flite. For up-to-date product information visit [fliteboard.com/support](http://fliteboard.com/support)

## Warning

Failure to operate this product in a safe and responsible manner could result in injury or death to yourself or others and/or damage to the Flitescooter or other's property.

**THIS PRODUCT MUST BE OPERATED WITH CAUTION AND COMMON SENSE AND REQUIRES SOME BASIC MECHANICAL ABILITY.**

**FLITESCOOTER IS FOR OPERATION BY ONE PERSON ONLY, SUBJECT TO LOCAL LAWS AND REGULATIONS.**

**DO NOT USE WITH INCOMPATIBLE COMPONENTS OR ALTER THIS PRODUCT IN ANY WAY OUTSIDE OF THE DOCUMENTS PROVIDED BY FLITE.**

**FLITESCOOTER IS NOT A TOY. EXERCISE CAUTION. ACT RESPONSIBLY WHILE OPERATING.**

**CONSIDER THE SAFETY OF YOUR ENVIRONMENT BEFORE OPERATING FLITESCOOTER. DO NOT RIDE IN SHALLOW WATER (LESS THAN 1M IN DEPTH), ROCKY AREAS OR IN SEVERE WEATHER CONDITIONS.**

**IT MAY BE NECESSARY TO OBTAIN A LICENCE OR PERMIT TO USE A FLITESCOOTER IN CERTAIN STATES OR COUNTRIES.**

## Intended use

Flitescooter is for operation by one person only. It is not designed for passengers or towing. Please check your local regulations for age and legal requirements. We recommend adult supervision. Licence regulations vary from state to state and country to country. For example, in Australia, Fliteboard is exempt from registration in some states, and in others it must be registered as a vessel. It is the responsibility of riders to be aware of and comply with regulations in their specific location.

Flitescooter must travel at a safe speed so that Flitescooter can be stopped in time to avoid any danger which may suddenly arise. When judging a safe speed, you must consider a number of factors - visibility, other vessels, navigation hazards, wind, waves and currents, waterway width and the manoeuvrability of your vessel.

For your safety and that of others, please ensure that you obtain proper training or practice before operating Flitescooter yourself.

This User Guide does not provide boating safety or seamanship advice. Please consult local laws and guidelines for boating safety.

If you have any questions about the operation or maintenance of Flitescooter, please consult Flitescooter technical support or an Authorised Service Partner.

This User Guide should be considered a permanent part of Flitescooter and should remain with it even if it is subsequently sold.

## Propulsion system

The Flitescooter propulsion system includes a powerful jet.

**KEEP BODY, FINGERS AND TOES AWAY FROM FLITESCOOTER'S IMPELLER. CONTACT WITH THE IMPELLER CAN CAUSE SERIOUS INJURY OR DEATH.**

**NEVER TOUCH THE IMPELLER IN OR OUTSIDE OF THE WATER.**

**NEVER HANDLE THE IMPELLER WHILE THE FLITECELL IS CONNECTED.**

**ALWAYS USE THE FLITESCOOTER A SAFE DISTANCE FROM OTHER WATERCRAFT, SWIMMERS, SURFERS, DIVERS AND WILDLIFE.**

**NEVER USE FLITESCOOTER IN WATER SHALLOWER THAN 1M OR 3.3FT. HITTING THE BOTTOM AT SPEED CAN CAUSE INJURY AND/OR DAMAGE TO FLITESCOOTER.**

## Hydrofoil safety

The Flitescooter hydrofoil system comprises a mast (or strut), a main wing and stabiliser wing. These components include sharp trailing edges and wing tips. Take care not to kick or hit the sharp edges when in the water.

**FALLING ON THE HYDROFOIL CAN CAUSE SERIOUS INJURY OR DEATH.**

**WE ALWAYS RECOMMEND YOU WEAR APPROPRIATE SAFETY GEAR WHEN FLITESCOOTERING, INCLUDING AN APPROVED IMPACT VEST / PFD AND HELMET. CHECK YOUR LOCAL REGULATIONS TO CONFIRM IMPACT VEST / PFD AND HELMET REQUIREMENTS. REFER TO THE MANUFACTURER'S DOCUMENTATION ON SAFETY, CARE AND MAINTENANCE GUIDELINES FOR YOUR IMPACT VEST / PFD AND HELMET.**

**TAKE CARE TO LEARN STEP BY STEP, FOLLOWING THE INSTRUCTIONS IN THIS GUIDE AND THE FLITESCOOTER VIDEO TUTORIALS AT [fliteboard.com/video](http://fliteboard.com/video)**

## Learning to Flitescooter

We recommend learning to Flitescooter with an instructor at an authorised Fliteschool. Fliteschool locations can be found at [fliteboard.com/locations](http://fliteboard.com/locations)

**PLEASE VIEW OUR HOW TO FLITESCOOTER VIDEO AT [fliteboard.com/video](http://fliteboard.com/video) TO LEARN THE PROPER TECHNIQUE AND REVIEW RIDING SAFETY INFORMATION.**

**FLITESCOOTER IS DESIGNED FOR USE IN CALM WATER ONLY. IT IS NOT SUITABLE FOR RIDING BREAKING WAVES IN THE SURF ZONE. RIDERS DO SO AT THEIR OWN RISK. FLITESCOOTER SHOULD NEVER BE RIDDEN NEAR OTHER WATER USERS (INCLUDING SWIMMERS AND SURFERS) OR OFFSHORE FROM SWIMMERS AND SURFERS (IN CASE FLITESCOOTER IS PUSHED TOWARDS SHORE IN A WAVE).**

**FLITESCOOTERING CAN BE EASY WHEN PROPER TECHNIQUE IS APPLIED. INCORRECT TECHNIQUE CAN RESULT IN INJURY OR DAMAGE.**

## Important rider safety

### 1 Read the User Guide and watch the How to Flitescooter video

Before attempting to Flitescooter for the first time, read this User Guide and pay special attention to the warnings and disclaimers. Most injuries can be avoided by using proper technique when learning. Watch the How to Flitescooter video at [fliteboard.com/video](http://fliteboard.com/video)



### 2 Wear a helmet and Impact Vest / PFD

Wear an approved and certified helmet and impact vest / PFD (Personal Flotation Device) at all times.



There may be specific rules and legal requirements in your location that also apply.

### 3 Avoid contact with the wings and Flite Jet

Avoid contact with the wings, mast and Flite Jet, which all have sharp edges. Take care to not kick the wings when climbing on to the board.



### 4 Keep distance

Keep well clear of other water users at all times. Check regulations for vessel operating distance rules in your area. Always be on the lookout for swimmers, divers, other vessels or obstacles when riding; they may be obscured by waves or glare.



### 5 Release the throttle

Release the throttle trigger immediately on committing yourself to a fall. This will stop the motor and reduce the forces which could otherwise lead to a more extreme crash. Practice this skill when learning with the goal of stopping the motor before you hit the water in a fall.



### 6 Wireless safety key

**Model:** WSK

**Battery:** CR2032 coin battery, 220mAh, 3.0V

**Operating temperature range:** -20 to +60 °C

**FCC warning:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



#### WARNING

THE WIRELESS SAFETY KEY CONTAINS A LITHIUM BUTTON / COIN CELL BATTERY

Button/coin cell batteries are hazardous and must be kept out of reach of children at all times, whether the battery is new or used. These batteries can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body.

If it is suspected a button/coin cell battery has been swallowed or placed inside any part of the body, seek immediate medical attention or contact your local Poisons Information Centre.

Dispose of used button/coin cell batteries immediately. Place sticky tape around both sides of the battery and dispose in an outside bin, out of reach of children, or recycle safely.

## Flitecell

Flitecell is a carefully engineered water resistant marine battery. If the Flitecell is damaged (for example during transportation or handling) the seal may become compromised. A damaged Flitecell that comes into contact with water may result in internal damage including corrosion which could result in a fire and/or explosion.

USE FLITECELL AT YOUR OWN RISK.

SIGNS OF A COMPROMISED FLITECELL:

- SIGHT GLASS LABEL HAS TURNED RED, INDICATING WATER INGRESS
- LOOSE SCREWS/RIVETS
- CONNECTOR COMING LOOSE
- CRACK IN HOUSING/CASE
- DEFORMATION
- UNUSUAL SMELL
- HIGH TEMPERATURE DURING CHARGING (60°C OR MORE)

CAREFULLY INSPECT FLITECELL BEFORE EACH USE.

IF A FLITECELL CASING HAS VISIBLE DAMAGE AND THE FLITECELL FALLS INTO WATER, TAKE IT OUT IMMEDIATELY AND PUT IT IN A SAFE AND OPEN AREA. MAINTAIN A SAFE DISTANCE FROM FLITECELL UNTIL IT IS COMPLETELY DRY. DO NOT USE FLITECELL AGAIN AND DISPOSE OF FLITECELL PROPERLY.

FLITECELL MUST BE USED IN TEMPERATURES FROM 0°C TO 40°C. USE OF FLITECELL IN ENVIRONMENTS ABOVE 40°C MAY LEAD TO AN OVERHEATED BATTERY. USE OR CHARGING OF FLITECELL BELOW 0°C CAN LEAD TO PERMANENT FLITECELL DAMAGE.

ALWAYS KEEP FLITECELL DRY. IF FLITECELL HAS BEEN EXPOSED TO WATER, PLACE IN A COOL DRY PLACE.

DO NOT DROP OR STRIKE FLITECELL.

DO NOT PLACE HEAVY OBJECTS ON FLITECELL OR THE CHARGER.

DO NOT CHARGE OR USE A DAMAGED FLITECELL. IF YOUR FLITECELL IS COMPROMISED, CONTACT FLITE OR AN AUTHORISED SERVICE PARTNER FOR FURTHER ASSISTANCE.

DO NOT USE FLITECELL IF IT WAS INVOLVED IN A SEVERE CRASH OR HEAVY IMPACT.

DO NOT USE A NON FLITECELL BATTERY. ANY DAMAGE CAUSED BY A NON-OFFICIAL BATTERY WILL NOT BE COVERED BY WARRANTY.

DO NOT DISASSEMBLE FLITECELL. DOING SO COULD CAUSE AN INJURY OR LEAD TO A WATER LEAK OR FIRE. TAMPERING WITH THE FLITECELL BATTERY WILL VOID THE WARRANTY.

DO NOT HEAT FLITECELL. KEEP AWAY FROM HEATING SOURCES AND OUT OF DIRECT SUNLIGHT.

DO NOT PUT FLITECELL IN A MICROWAVE OVEN, FREEZER OR IN A PRESSURISED CONTAINER.

DO NOT OPEN FLITESCOOTER LID UNDER ANY CIRCUMSTANCES WHILST IN WATER OR WITH WET HANDS.

IN CASE OF A FLITESCOOTER OR FLITECELL FIRE, EXTINGUISH WITH COLD WATER WITHOUT ADDITIVE.

FOR FURTHER INFORMATION ABOUT INCIDENT RESPONSE AND DISPOSAL, PLEASE REFER TO THE MATERIAL SAFETY DATA SHEET (MSDS).

DISPOSE OF THE FLITECELL IN SPECIFIC RECYCLING BOXES ONLY AFTER A COMPLETE DISCHARGE. DO NOT PLACE FLITECELL IN REGULAR TRASH CONTAINERS. STRICTLY FOLLOW YOUR LOCAL REGULATIONS REGARDING THE DISPOSAL AND RECYCLING OF BATTERIES.

DO NOT USE FLITECELL TO OPERATE ANY DEVICE OTHER THAN FLITESCOOTER OR FLITEBOARD.

## Warranty

Flitescooter comes with a Limited Warranty which covers defects in materials or workmanship of the product and aligns to relevant consumer laws of the location of purchase. Further details about the Flitescooter Limited Warranty are set out in your Purchase Agreement.

For our Australian customers: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Please ensure that you complete the Warranty Registration/Details of Purchase card at the end of this User Guide.

### Initial 100 hrs / 1 year service

This is to check seals, oil, overall inspection of the eFoil system, Flitecell health and Flite Controller.

Carefully pack the eFoil and Flite Controller in the original eFoil Travel Bag including foam inserts. Send to an Authorised Service Partner or Flite HQ (whichever is closest). Flitecell, wings, chargers or other accessories are not required and should not be included.

Please refer to our 'Packing your Flitescooter' video and help documentation via [fliteboard.com/support](http://fliteboard.com/support)

**The Flitescooter Limited Warranty is void if your Flitescooter has missed the required service schedule.**

## Repairs

If subjected to damage the Flitescooter core may be repaired by a surfboard repair specialist.

## Shipping compliance

Shipping batteries can be illegal and dangerous if not done in accordance with dangerous goods shipping regulations. Always consult an appropriate specialist before shipping your Flitecell. Refer to the included MSDS regarding shipping your Flitecell by sea.

In order to maintain the above warranty, **a mandatory initial 100 hrs / 1 year service of the eFoil is required.**

Only an Authorised Service Partner or Flite HQ can carry out the mandatory initial service, any ongoing yearly / 100 hrs service, warranty repairs and non-warranty repairs. To find your nearest Service Partner, visit [fliteboard.com/locations](http://fliteboard.com/locations)


Flitescooter has been extensively tested with riders weighing up to 120kg / 265lbs. Our specified limit for warranty is 120kg / 265lbs.

## What's in the box


You will receive your Flitescooter in four separate shipment packages.

### Box 1 Flitescooter and wings


Within the board bag you will find the Flitescooter core, bladder, pump and hose, handlebars, Cruiser 1800 wing and Flite 500 stabiliser wing. Cruiser 1800 wing comes with a cover, Tef-Gel, Hex Key M6 and associated bolts and Fuselage cover. Flite 500 stabiliser comes with a cover and the required shims can be found in the accessories pouch.

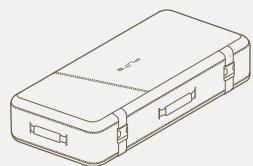

Flitescooter travel bag

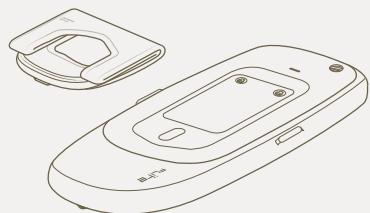


Flitescooter bladder

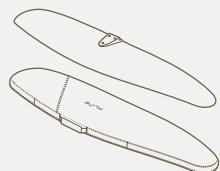

Cruiser 1800  
Fuselage cover 1  
1 x M6 x 40mm  
2 x M6 x 35mm




Flitescooter core

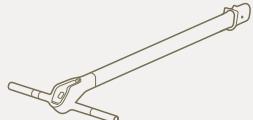

Flitescooter handlebars



 Flite 500  
2 x M6 x 25mm




Flitescooter pump  
and hose

### Box 2 Flitecell


Within the included padded Flitecell bag you will find either Flitecell Explore or Flitecell Sport, depending on your choice.



Flitecell travel bag

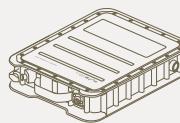


Flitecell Explore

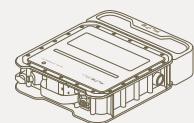


Flitecell Sport  
+ spacer

### Box 3 Flitecell Charger


Within the included Flitecell Charger travel bag, you will find either Flitecell Fast Charger or Flitecell Charger, depending on your choice.

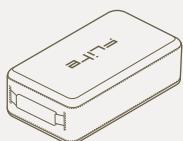

Flitecell Charger travel bag

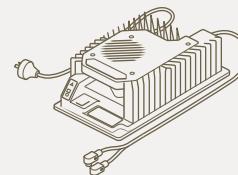

Flitecell Fast Charger

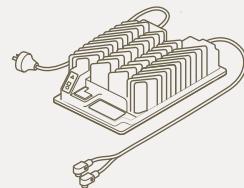


Flitecell Charger

#### Box 4 Flitescooter eFoil

Within the included travel case you will find the eFoil system.



eFoil travel bag  
eFoil system  
Fuselage tail + O-Ring  
Ring Nut tool  
Shoulder strap  
Accessories pouch

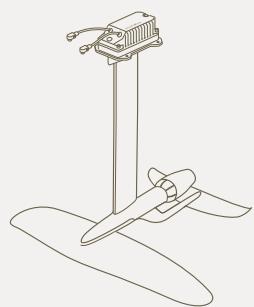

eFoil System Flite Jet  
60cm / 24"

#### Box 4 Accessories pouch

Within the included accessories pouch you will find the following components:



Accessories pouch




Tef-Gel + Brush




Mast Flange  
Seal + spare



Flite Controller

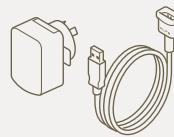

 Flite Controller  
USB wall charger  
and charging cable



Stabiliser wing shims  
6 x styles (0-5)



User Guide



eFoil Flange bolts



Tail piece bolt



Hex Key M6



Magnetic Clip



Wireless Safety Key

## Getting started


The best way to learn to Flitescooter is to find a Fliteschool in your area. Locate your nearest Fliteschool at [fliteboard.com/fliteschool](http://fliteboard.com/fliteschool)

Watch the Flitescooter video guides at [fliteboard.com/video](http://fliteboard.com/video)

In order to operate the product correctly, avoiding damage or serious injury, it is essential to read and follow all instructions and warnings in the User Guide prior to assembly, setup or use.


FLITESCOOTER IS INTENDED FOR USE WITH THE SUPPLIED FLITE JET, EFOIL AND WINGS ONLY. FLITESCOOTER IS INTENDED FOR USE WITH THE SERIES 2.2 AND LATER FLITE CONTROLLER ONLY.

THE FLITESCOOTER EFOIL IS SET TO SCOOTER MODE AT FACTORY.

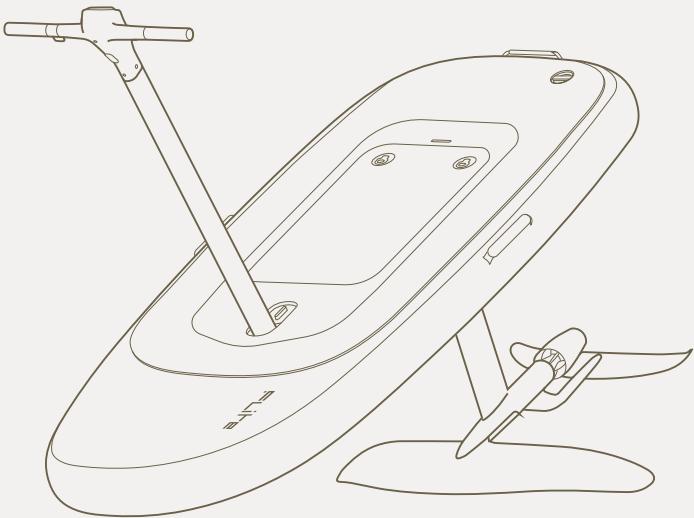

## Charging Flite Controller

- 1 Remove Flite Controller from the accessories pouch or Flitescooter handlebar.
- 2 Remove Flite Controller USB Wall Charger and Charging Cable from the accessories pouch.
- 3 Carefully peel out the rubber cover on the underside of Flite Controller. Attach the magnetic charging plug, ensuring the charging pins are connected.
- 4 Plug in the USB Wall Charger and turn on. When the Flite Controller is charging correctly, the screen will show a charging message. Be careful not to disconnect the magnetic charging plug whilst charging. Always check to ensure the Flite Controller is at least 50% charged before each use.

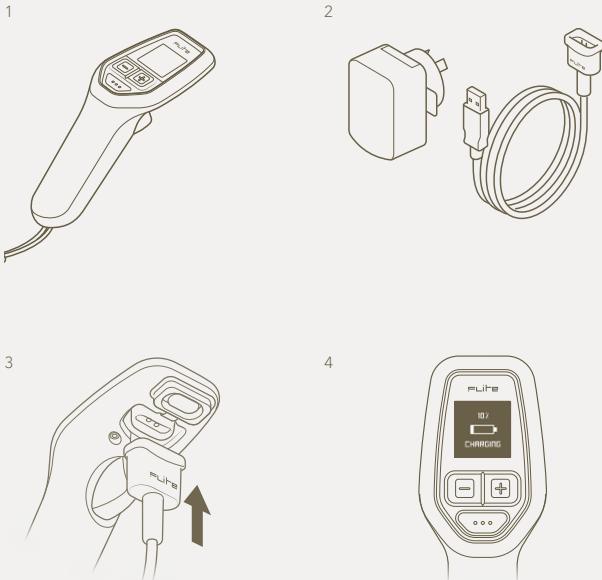

## Flitecell charging procedure


DO NOT COVER THE CHARGER OR INTAKE DURING CHARGING. THE CHARGER SHOULD BE PLACED OUT OF THE REACH OF CHILDREN. CHARGE IN AN INDOOR AREA WITH GOOD VENTILATION AND HEAT DISSIPATION.

DO NOT CHARGE IN HUMID, HIGH TEMPERATURE CONDITIONS. DO NOT CHARGE NEAR FLAMMABLES OR EXPLOSIVES. DO NOT DISASSEMBLE THE CHARGER: THERE IS A DANGER OF HIGH VOLTAGE IN THE CHARGER CASE.

FLITE DOES NOT BEAR ANY RESPONSIBILITY FOR INCORRECT USE OF THE CHARGER. USERS MUST OPERATE THE CHARGER ACCORDING TO THE USER GUIDE.

ALWAYS KEEP THE RED TERMINAL CAPS ON THE FLITECELL WHEN NOT CONNECTED TO THE BOARD/CHARGER.

## Flitecell Fast Charger

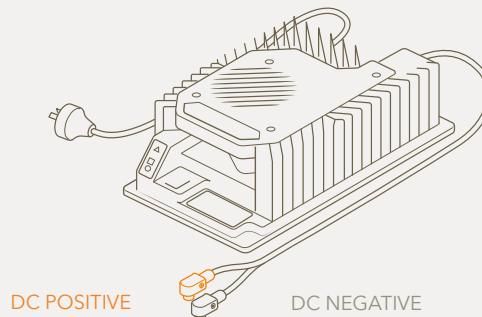

## Flitecell Indicator Guide

	Power on	
	Flashing green	Charging
	Solid red	Charger fault See charger manual
	Flashing amber	External error See charger manual
	Flashing green Solid green	USB port active Safe to remove USB flash drive


## Charging Flitecell

- 1 Remove Flitecell from its travel bag.
- 2 Place Flitecell in a cool dry location away from flammable or hot items. Safe charging temperatures are 0 - 40°C and optimal charging temperatures are 10 - 30°C.
- 3 Connect Flitecell charger plugs to Flitecell terminals ensuring to connect the orange (positive) connector to the orange terminal first and the black (negative) connector to the black terminal.
- 4 Check that connections have been made correctly. Plug the charger in the wall socket. Place the supplied magnet on the Flitecell for 5 - 10 seconds, as shown by arrow, to activate charging. If the magnet has been misplaced, you can use the base of Flite Controller to initiate charging.
- 5 The charger will automatically turn off when the charging process is complete.

FLITECELL IS A POWERFUL BATTERY CONTAINING A SIGNIFICANT AMOUNT OF ENERGY. CHARGING A DAMAGED FLITECELL CAN RESULT IN A FIRE OR EXPLOSION. ALWAYS INSPECT THE FLITECELL BEFORE CHARGING. CHARGE THE FLITECELL UNDER SUPERVISION, IN A SAFE LOCATION, AWAY FROM DIRECT SUNLIGHT, MOISTURE AND AWAY FROM FLAMMABLE OBJECTS AND SURFACES.

THE BATTERY MANAGEMENT SYSTEM (BMS) BALANCES AND OPTIMISES FLITECELL DURING EACH CHARGE CYCLE.

IT IS RECOMMENDED TO DISCONNECT THE FLITECELL AFTER A FULL CHARGING CYCLE.

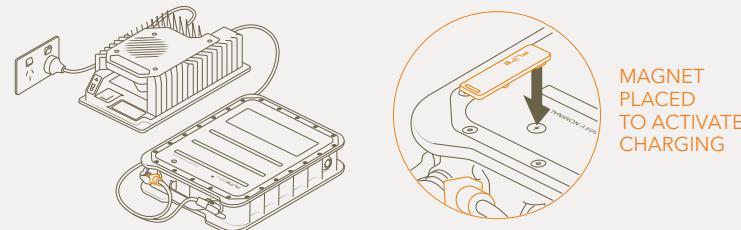


## Flitecell light

Light meaning		
	Red light flashes	Capacity 0% - 10%
	Red light on	Capacity 10% - 20%
	Green light on	Capacity is 20% - 35%
	Green light flashing	Capacity 20% - 35% + charging
	Two green lights on	Capacity 35% - 65%
	One on + one flashes	Capacity 35% - 65% + charging
	Three green lights on	Capacity 65% - 100%
	Two on + one flashes	Capacity 65% - 100% + charging

## Flitescooter assembly


Fitting the Flitescooter bladder to the core requires proper technique as the fitment between the two are tight for maximum strength. We recommend doing this process with two people, at least the first few times.

- 1 Place the rigid core (Flitebox cavity side up) on a flat, smooth surface to avoid scratching the carbon finish on the core.
- 2 Unroll Flitescooter bladder face down.
- 3 Slide bladder onto core from front end first, maintaining the bladder flap above the core.

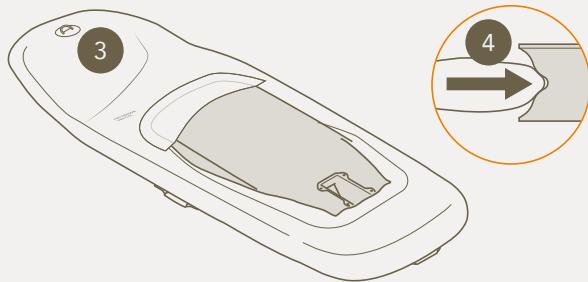

- 4 Ensure bladder is well tucked into the recess along the front edge of the core.
- 5 Carefully stretch bladder over one rear corner first.

NOTE THAT THE REAR UNDERSIDE EDGES OF THE CORE ARE DELIBERATELY SHORTER THAN THE TOP FACE TO MAKE FITMENT OF THE BLADDER EASIER. WARM MILD SOAPY WATER SOLUTION MAY BE APPLIED TO THE FLITESCOOTER BLADDER TO ASSIST WITH FITMENT AND EASE OF ALIGNMENT. RINSE OFF SOAP SOLUTION WITH FRESH WATER AFTER FITMENT IS COMPLETE.

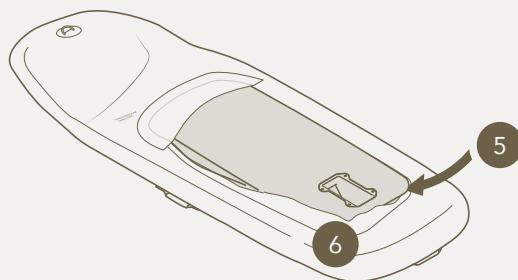


- 6 To stretch bladder over the other rear corner, you will likely need two people. While one person pulls on the bladder, the other person can tap the bladder down with the palm of their hand to get it over the core and into place. If you don't have a second person to assist with fitting the bladder, you could carefully place your foot in the Flitebox cavity to get leverage for stretching it over the final rear corner.
- 7 Be careful that the bladder is positioned evenly and not creased or caught. Check bladder is seated correctly around the core before carefully flipping the Flitescooter over.


DO NOT USE ANY OBJECTS TO GET LEVERAGE FOR FITTING THE FINAL REAR CORNER AS IT COULD DAMAGE THE CORE. PLACE ON A SMOOTH, SOFT SURFACE TO AVOID SCRATCHING THE CARBON FINISH ON THE CORE.

## Inflating Flitescooter


- 1 Twist the valve cap anti-clockwise to remove.
- 2 To inflate, push the central valve down.
- 3 Twist anti-clockwise to release.
- 4 The valve will pop up. This ensures the bladder will not deflate when you remove the hose after inflation.

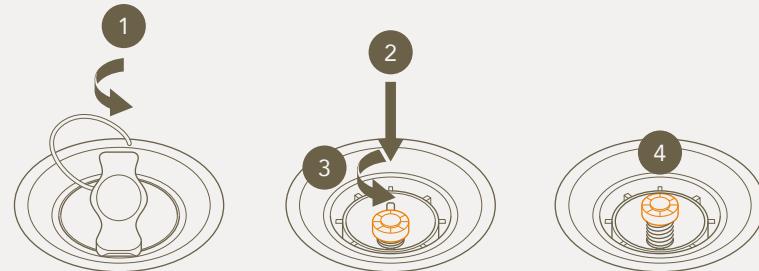

- 5 Connect pump hose to valve and inflate bladder to 15 - 16 PSI.  
THIS IS IMPORTANT FOR OPTIMUM PERFORMANCE AND SAFETY.

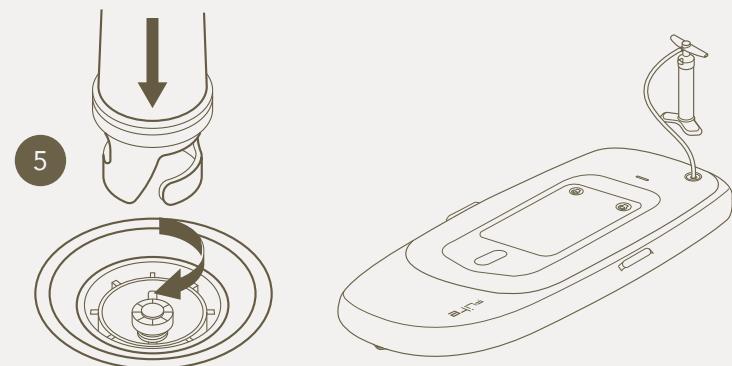


- 6 Once inflated to 15 - 16 PSI, twist the pump hose anti-clockwise to remove and re-fit the valve cover cap. When disconnecting the pump hose, no air should escape from the valve. If the bladder deflates you must release the central valve (see step 2) and re-inflate. Flitescooter is now inflated.

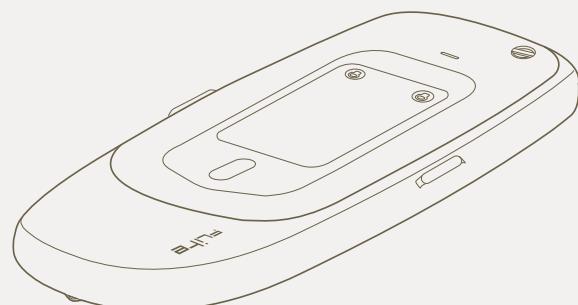

## Connect the eFoil to Flitescooter

- 1 Place the inflated Flitescooter upside down on a clear surface. Locate the Flitebox cavity on the bottom of the board and ensure the 4 retaining screws are removed.
- 2 Check to ensure the orange o-ring is inserted, properly seated in the Flitebox cavity o-ring groove, clean and free of sand, grit or water.
- 3 Carefully lift the eFoil from its bag and place the Flitebox into the cavity. While doing this ensure the power cables feed through into the Flitescooter cavity.
- 4 Ensure the Flitebox is properly seated in the cavity and flush with the board surface.
- 5 Add a thin layer of Tef-Gel to the 4 x 20mm stainless steel hex fasteners. Tighten them in a cross pattern, first using your fingers to ensure the threads are properly engaged, and then using the supplied hex key. Medium force (a torque of 6 Nm) needs to be applied when using the long arm of the hex key to ensure the fasteners are tight.
- 6 When properly tightened, the eFoil should be secured and the o-ring compressed. Failure to properly tighten the fasteners or fit the o-ring will result in a board leak.
- 7 Be careful not to over-tighten the fasteners as this could result in stripped threads or damaged fasteners.

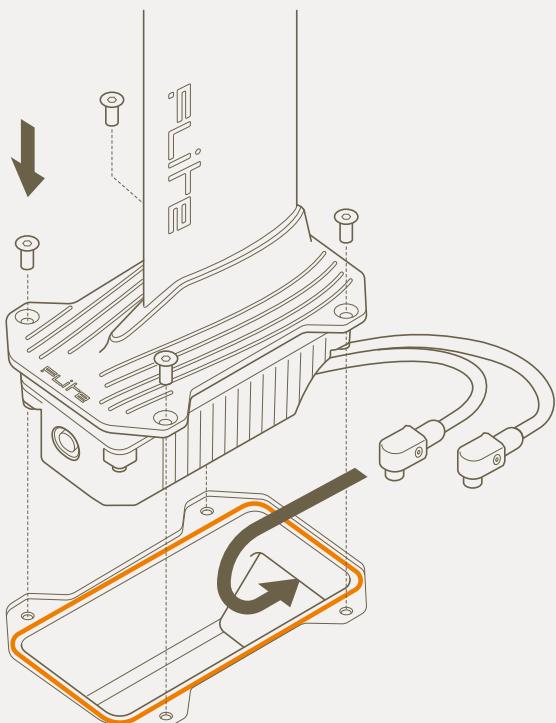


## Installing Flite Jet

Your Flitescooter is supplied with Flite Jet, the recommended propulsion unit for safety and stability. We recommend connecting the eFoil to the Flitescooter first for safer and easier installation of Flite Jet.

- 1 Connect the eFoil to the Flitescooter.
- 2 Check the fuselage thread is clean and free of sand, grit or water.
- 3 Check the Flite Jet thread is clean and free of sand, grit or water. Wipe clean if necessary.
- 4 Apply a small amount of Tef-Gel to the thread of Flite Jet.
- 5 The Dual Drive system uses a reverse thread. Install Flite Jet by rotating ANTI-CLOCKWISE until there is no gap between the jet and fuselage. This should be just finger tight.
- 6 If there is any resistance during installation, remove the Flite Jet completely to check for sand and grit. Try again without using excessive force. Rotate until the gap is closed.
- 7 Pair the Flite Controller and check that 'Jet' is displayed on the Speed / Gear screen. Jet mode adjusts the virtual gears for a better experience when using Flitescooter.


Add a thin layer of Tef-Gel periodically to the threads of the Flite Jet module. For troubleshooting tips, you can visit the Support page on our website.

Fliteboard's Dual Drive system allows you to swap between Flite Jet and the Flite Propeller module with a Pro Tail Cover quickly, without using tools. Please be aware that swapping to Flite Propeller has inherent risks and may be prohibited by local regulations. Where permitted, we recommend that Flite Propeller always be used with the Prop Guard.

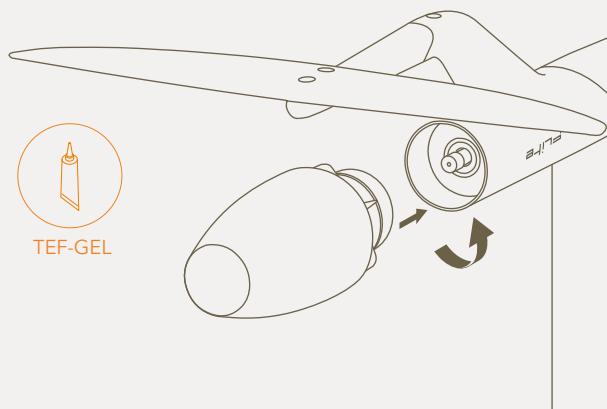


## Connect the fuselage tail

- 1 Place the board upside down with the eFoil connected. Take the fuselage tail from the travel bag, add a light cover of Tef-Gel to the tail connection and install the tail into the fuselage.
- 2 Add a thin layer of Tef-Gel from the tube supplied to the thread of the supplied 16mm fastener bolt and carefully tighten using the hex key using torque of 6 Nm. You may need to push on the tail (compresses the o-ring) for the screw to find the thread. Misalignment may cause damage to the thread.

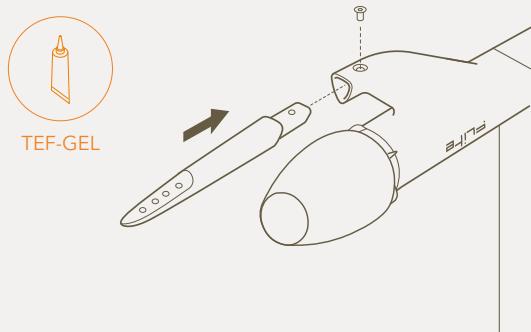

## Connect the wing


- 1 Remove your Cruiser 1800 wing from the travel bag and from its wing cover.
- 2 Place the wing in position as shown. Ensure you have the correct fuselage 1 cover that was provided with your wing (refer to page 12).
- 3 Insert the 3 fasteners taking care to ensure the correct set is being used for the particular wing model you are fitting. ALWAYS add Tef-Gel to the fasteners first. The fasteners should extend by approximately 6-8mm through the wing when placed in the countersunk holes.
- 4 Tighten the fasteners with the supplied hex key, ensuring the fasteners are tight enough that the wing cannot move or wobble significantly during use. Use a torque of 6 Nm to tighten the fasteners.

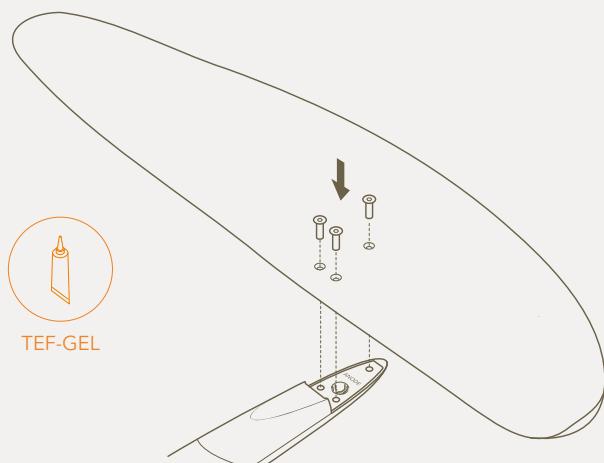

## Connect the stabiliser wing

- 1 Take the Flite 500 stabiliser from the travel bag and remove the wing cover. Make sure to use the provided Flite 500 shims.
- 2 Take the correct stabiliser wing shim and fit between the stabiliser wing and the fuselage tail.
- 3 To ensure correct mounting, direction and placement, the wing when installed correctly should have the rounded, curved leading edge facing the front wing.

ALWAYS ADD TEF-GEL TO THE STAINLESS STEEL FASTENERS THAT ARE BEING INSERTED INTO THE ALUMINIUM. IF LEAVING WINGS ATTACHED FOR EXTENDED PERIODS, ENSURE THAT YOU LOOSEN FASTENERS AND RE-APPLY TEF-GEL EVERY FEW WEEKS. FAILURE TO DO SO MAY RESULT IN CORROSION AND DAMAGE TO YOUR EFOIL FASTENER INSERTS.

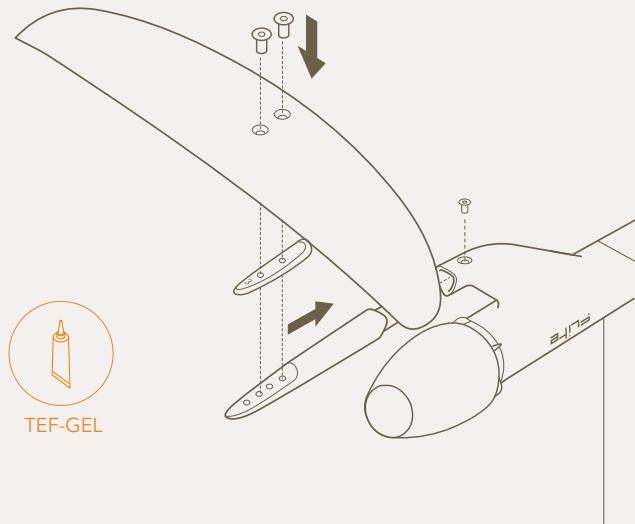


**PRO TIP** We have supplied 0, 1, 2, 3, 4 and 5 degree shims so you can customise your ride. Changing shims alters the amount of stabilising downforce provided by the tail, and also impacts the balance point of the foil and responsiveness. Higher shim numbers can generate earlier takeoff. Based on extensive testing, we recommend using the 3 or 4 shim on Flitescooter.

## Connect Flitecell to Flitescooter


With the eFoil, fuselage tail and wings attached, it's time to carefully turn your board over so it stands on BOTH the front wing and nose of the board.

- 1 Twist the lid latches and open the board lid.

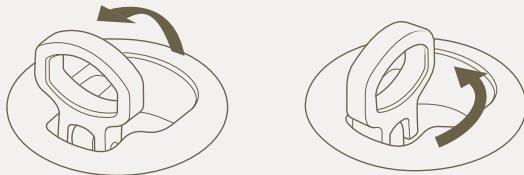

DO NOT OPEN LID WHILST IN THE WATER UNDER ANY CIRCUMSTANCES.

- 2 Take Flitecell by the handle and carefully lower it into the board cavity, ensuring to move cables out of the way first. The warning label should be facing up.

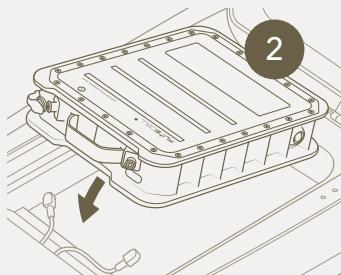


BE CAREFUL NOT TO DAMAGE THE BOARD SEAL WHEN FITTING FLITECELL. ANY KNICKS, CUTS OR DAMAGE TO THE SEAL MAY RESULT IN LEAKS.

BE CAREFUL NOT TO RECONNECT FLITECELL POWER CABLES WITHIN 10 SECONDS OF DISCONNECTION TO AVOID A POSSIBLE ARC.

- 3 If using Flitecell Sport, place the spacer in the board cavity first.
- 4 Connect the orange power cable to the orange power in Flitecell. You will feel a secure click when properly engaged. **Note: Depress the button on the side of the connector when removing the connector.**
- 5 Connect the black power cable to the black power in Flitecell.

**Flitecell is now connected.**

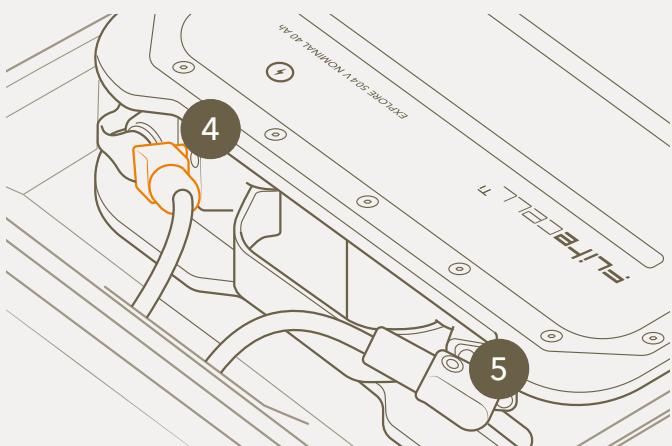

## Download Flite App and update

Flite App is available to download in the Apple App Store™ and Google Play Store™. We recommend using Flite App to ensure your board and Flite Controller always have the latest software to deliver the best performance.

In addition to enhancing your experience on the water, Flite App connects you to a global community of Fliteboard and Flitescooter riders. Share your sessions, compete and discover new places to ride.



Download  
Flite App

[fliteboard.com/app](http://fliteboard.com/app)


Watch our Flite App  
video at

[fliteboard.com/video](http://fliteboard.com/video)

## Flite Controller overview




## Handlebars overview

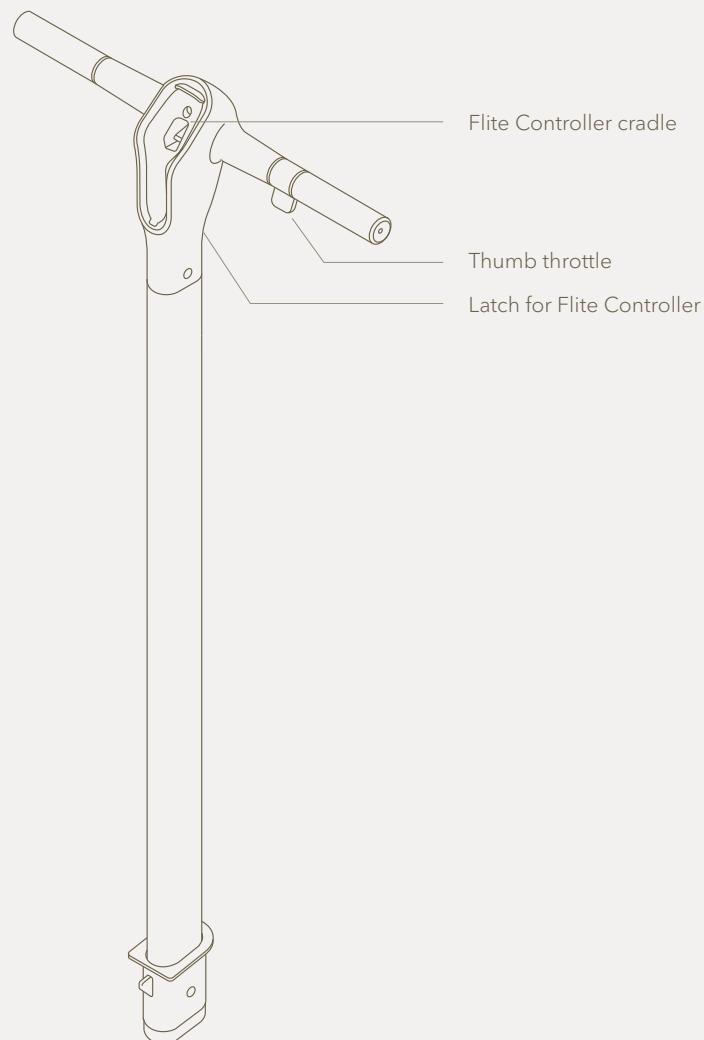

## Turn on Flite Controller

- 1 Turn on Flite Controller by holding down the + button AND Mode (bottom) button together for 3 seconds.
- 2 After a 3 second press of both buttons, the Flite logo will appear with the software version number, and the Controller will move to the home screen with lock icon.

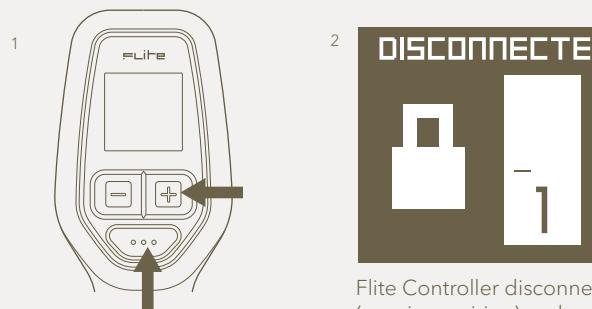

Flite Controller disconnected (requires pairing) and motor locked (requires arming). Gear 1.

Hold + button for 7 seconds to put into pairing mode.

IF THE LED STATUS LIGHT HAS A BLUE SOLID LIGHT (NOT BLINKING) YOUR FLITE CONTROLLER IS CONNECTED. IF THE FLITEBOX LIGHT IS FLASHING YOUR CONTROLLER AND FLITESCOOTER NEED TO BE PAIRED.

## Connecting Flite App to Flitescooter

- 1 Turn off Flite Controller.
- 2 Ensure Flitescooter has power and the lid is closed.
- 3 Select '**Flitescooter**' from the '**Devices**' menu. When connected, the board Flitebox LED will turn purple. When performing some updates it will display green.
- 4 You will now be able to see the software version of Flitescooter.
- 5 Once connected you can perform updates and sync session rides.
- 6 Connecting to Flitescooter will transfer settings from the app (e.g. knots and miles per hour).

WHEN NEW SOFTWARE UPDATES ARE AVAILABLE, YOU'LL SEE AN ORANGE UPDATE ICON.

BEFORE YOU UPDATE SOFTWARE MAKE SURE THE PHONE, FLITECELL AND FLITE CONTROLLER HAVE AT LEAST 20% CHARGE.

KEEP THE PHONE CLOSE AND IN LINE OF SIGHT WITH A STRONG WIFI/CELLULAR NETWORK. DON'T USE THE PHONE FOR ANYTHING ELSE SUCH AS CALLS, TEXTS, OR OTHER APPS.

MAKE SURE THE FLITESCOOTER LID REMAINS CLOSED DURING THE UPDATE PROCESS.

ENSURE FLITE CONTROLLER IS TURNED OFF AS THE APP CAN ONLY CONNECT TO ONE DEVICE AT A TIME.

## Connecting Flite App to Flite Controller

- 1 Turn off Flitescooter.
- 2 Turn on Flite Controller by holding down the + button AND Mode (bottom) button together for 3 seconds.
- 3 Ensure Flite Controller has power and is within range of the phone.
- 4 Select '**Flite Controller**' from the '**Devices**' list. When selected and connected, the current state of charge will be displayed.
- 5 You will now be able to see the software version of the Flite Controller and perform any updates here.

WHEN NEW SOFTWARE UPDATES ARE AVAILABLE, YOU'LL SEE AN ORANGE UPDATE ICON. WHEN UPDATING, DON'T USE THE PHONE FOR ANYTHING ELSE SUCH AS CALLS, TEXTS OR OTHER APPS.

## Capturing sessions

- 1 Flitescooter will automatically capture sessions to its onboard computer.
- 2 Connect to the Flitescooter and then tap '**Sync**' to view and download any new sessions.
- 3 Clicking a ride in the '**Sessions**' list will then take you to ride detail screen. Here you can play back your ride in various speeds, over an aerial map.