

Welcome Guide



GEMINI

Feature Pro Controller

Light

Change Colors

Press the **Light** button **once** to change the color successively in: Single Color Breathing Mode & Single Color Breathing Mode

Colors: symmetric rainbow - rainbow - pink - red - orange - yellow - green - blue - cyan - purple

Vibrating Lights

The lights will quickly transition from the current brightness to the brightest level when the vibration occurs in: Single Color Breathing Mode & Automatic Single Color Breathing Mode

Change Modes


Double press the **light** button to switch light modes. (Controller will vibrate)

Mode 1: Single Color Breathing
Mode 2: Automatic Single Color Breathing
Mode 3: Single Color Solid
Mode 4: Lights Off

Brightness Adjustment

Press and hold the **light** button for **1s** to start adjusting the brightness: 40%-70%-100% (Controller will vibrate)

Layout

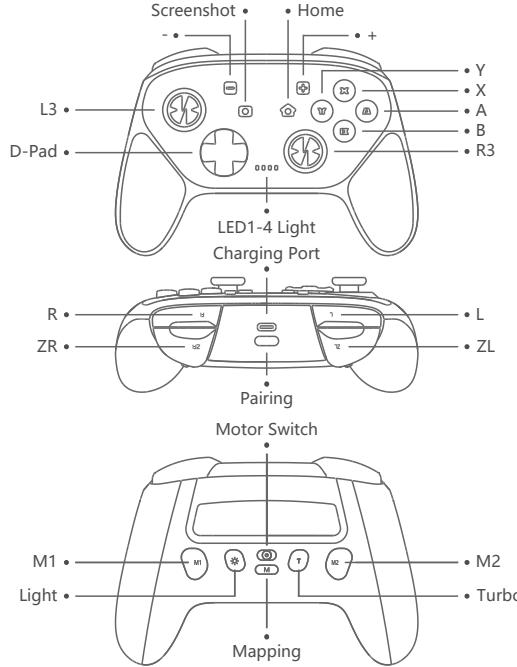


Specifications

Working voltage: DC3.7-4.2V
Input voltage/current: DC5V/1A
Charging time: about 3 hours
Continuous running time: >10 hours
5. Battery capacity: 1000mAh

Wired Pairing

- ① Please make sure that the Switch has turned on the wired connection mode.
(Setting - Controllers and Sensors - Pro Controller Wired Communication)
- ② Connect the controller to the dock of switch with a USB cable.
- ③ After the wired connection is successful, unplug the USB cable, and the controller will automatically connect wirelessly.

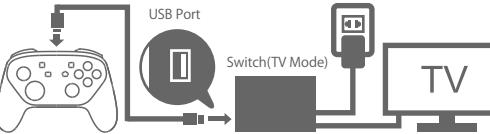

Wireless Pairing

- ① Press the power button of **Switch** to start the host and enter the "Controller Settings - Change Grip / Order" page.
- ② While the controller is in the powered-off state, press and hold the **Pairing** button for **1.5s** or hold the **Home** button for **5s** til the **LED1-4 Light** flash quickly.
- ③ After successfully connected, the **LED1-4 Light** indicate the corresponding game player. (Controller will vibrate)

Reconnection

- ① Short press the **Home** button, the controller will turn on and automatically reconnect to the **Switch**.
- ② After successfully connected, the **LED1-4 Light** indicate the corresponding game player. (Controller will vibrate)

Status

Wake Up

After the first successful connection, press the **Home** button to wake up the switch and reconnect (other buttons can not wake up).

Power Off

To power off the controller, press and hold the **Pairing** button for **0.5s** or hold the **Home** button for **5 seconds**.

Low Battery

When the battery power is low, the **LED1-4 Light** lights flash quickly at the same time.

Charge

Disconnected State:
The **LED1-4 Light** will display the charging progress and flash slowly. When the battery is fully charged, the **LED1-4 Light** will turn off.

Connected State:
The corresponding **LED Light** will flash slowly. When the battery is fully charged, The **LED Light** light will stay solid.

Binbok Marketing

@BINBOKOfficial

Official Homepage : binbok.com
(Register on this web to activate aftersales)

support@binbok.com

Business Contact: contact@binbok.com

DISCORD



Join our community