

#19311 WALKIE TALKIES

FRONT

6" x 9"

BACK

AGES 6+

Battery
Operated

Uses 8 LR44
(1.5V) Batteries
(Included)

Small
BUT
MIGHTY


PUSH TO
TALK!

- 1 CHANNEL
- FLEXIBLE ANTENNAS

WARNING:

CHOKING HAZARD—Small parts.
Not for children under 3 years.

Walkie Talkies

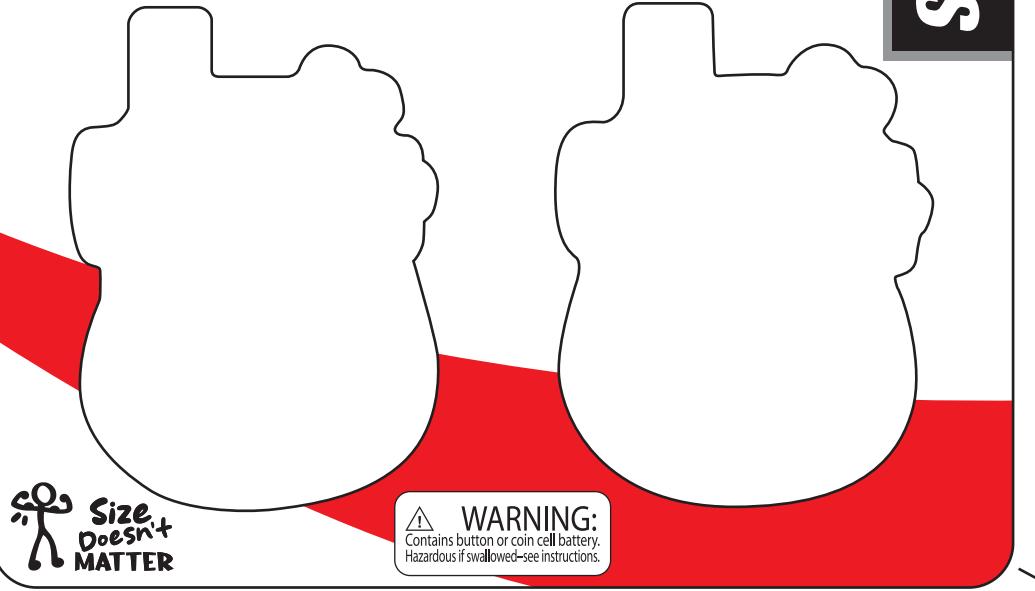

DIECUT/CLAMSHELL SHAPE SHOWN BY BLACK LINE.
DO NOT PRINT BLACK LINE.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING:

This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

CAUTION:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not use rechargeable batteries.

Non-rechargeable batteries are not to be recharged. Use only batteries of the same or equivalent type as recommended. Insert batteries so that polarity is correct. Remove exhausted batteries from toy.

BATTERY DISPOSAL:

Do not dispose of this product in fire, batteries inside may explode or leak. Do not bury or burn.

The installed batteries may become weak or discharged prior to purchase and the purchaser may need to replace them with fresh batteries to ensure proper operation.



ITEM # 19311

MADE IN CHINA/FABRIQUÉ EN CHINE

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


7 20120 19311 5

Walkie
Talkies

BATTERY REPLACEMENT

REMOVE SCREW
TO OPEN
BATTERY
COMPARTMENT

USES
4 LR44 (1.5V)
BATTERIES
(INCLUDED)

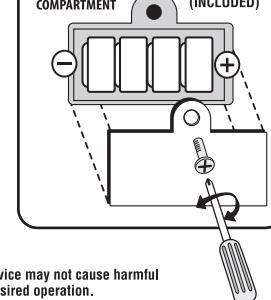

CONFORMS TO THE SAFETY
REQUIREMENTS OF ASTM F963

FCC ID: 2BBVX19311