

3. The portable devices select the bluetooth speaker and match it, If matching successfully, you will hear “beep” sound from speaker.
4. You can enjoy portable device music by speaker via bluetooth function freely Pls attention: The portable device bluetooth distance is 10m-15m without wall and so on the intermediate barrier.

Battery charge instructions:

1. The voltage of unit is AC 220-240V 50-60HZ to adaptor DC 15V
2. Please full charge(need about 8hours) the unit in first time use, and charge it no matter if it's full or not after use.
3. Please make sure to charge the unit 1 time per month.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

User Manual

Please read this manual before operating your device, and keep it for future reference.

IMPORTANT SAFETY MEASURES

Before using this machine, please read all the safety and operating instructions, meanwhile, please observe all the indications about safe operating. These safety and operating instructions should be kept in condition of consultation.



- 1. Protection of electric power supply line:** Be aware that the electric power supply line is not tramped, pressed by heavy objects. Pay special attention to the plug of power supply line and outlet on the machine. DO NOT lengthen the electric shock, DO NOT pull or drag or the power supply line.
 - 2. Ventilation:** This set must be put in ventilated place. DO NOT put disk on it or cloth to cover it. The distance away from the wall should not be less than 10 centimeters. DO NOT put this set on the bed, sofa, carpet or other objects with similar surface in case of good ventilation.
 - 3. Casing Dismantling:** DO NOT dismantle the case. If one touches the inner components, he will probably get serious electric shock.
 - 4. Unusual smell:** When you discover unusual smell and smoke, cut power supplies immediately and pulls out the plus from the outlet on the wall. Contact the sell shop or nearest repairing center.
- Attention:** This set applies to AC 220V~240V/50Hz~60Hz power supply. Use standard power supply.
Do not use power supply of small output and unsteady voltage.

Panel Function Instruction

- | | |
|---|--|
| 1. LED screen | 14. Previous song/channel |
| 2. Signal receiver for remote | 15. Next song/channel |
| 3. Power ON/OFF switch | 16. Mic. Priority/
long-press REC. |
| 4. USB slot | 17. Extral DC 12V battery |
| 5. TF slot | 18. Adaptor DC 15V input |
| 6. 6.5mm Mic. input jack | 19. Master Vol. |
| 7. 3.5mm stereo input jack | 20. Antenna |
| 8. Mic. Vol. knob | 21. EQ/Long-press
delete REC. files |
| 9. Echo Vol. knob | |
| 10. Bass knob | |
| 11. Treble knob | |
| 12. Master Vol. knob | |
| 13. Stop/Pause/
Long-press play REC. | |

REMOTE CONTROL OPERATION INSTRUCTION

- ⏻ : Press STANDBY key to turn off system, press this key again to turn on system.
- MUTE: press MUTE to turn ON/OFF mute mode.
- MODE (INPUT): press INPUT key to select AUX/USB/FM audio signal input mode.
- VOL-/VOL+: press VOL- / VOL+ key to adjust master volume.
- ⏸ : Press "⏸" to PLAY/PAUSE USB device.
- ⏮ ⏭ : Press "⏮ ⏭" to select MP3 song previous or next one by one..
- SCAN: In FM mode, Press SCAN key to search and memory FM station automatically.
- CH-/CH+: In FM mode, press CH-/CH+ to select FM station previous or next one by one;

- EQ: Press "EQ" to select different sound effect for MP3 song, EQ function only use for USB mode;
- REPEAT: Press REPEAT 1 time into repeat single song mode;
Press REPEAT 2 times into repeat all song mode;
- 0, 1, 2, 3, 4, 5, 6, 7, 8, 9 number keys: Press "0, 1, 2, 3...9" to select MP3 song directly; This system support intelligent select song, For example, you press number key 2 + 6 to select No.26 song.
- File-/File+ : Press FILE-/FILE+ to select MP3 song folder previous or next one by one;
- : This is STOP function key, Press "■" to stop play USB/SD device;
- U/SD: USB device and SD card input selection key

USE INSTRUCTION

*PLAY USB/SD CARD

- Insert USB device or SD card to USB or SD card reader socket on speaker panel;
- Insert electric source cable, turn on power switch.
- Press INPUT (or MODE) key to select USB input mode;
- Adjust function keys to your satisfied best sound effect.
- USB/SD card function operation as following.
- Press ▶|| to PLAY/PAUSE USB device;
- Press ◀▶ to select MP3 song previous or next one by one;
- Press 0, 1, 2, 3...9 to select MP3 song directly; This system support intelligent select song, for example, you press number key 2 + 6 to select No.26 song.
- Press EQ to select different sound effect for MP3 song one by one;
- Press REPEAT 1 time into repeat 1 song mode; Press REPEAT 2 times into repeat all song mode.

*PLAY FM RADIO

- Plug power adaptor, or turn on power switch on speaker back panel
- Press INPUT (or MODE) key to select FM input mode;
- Press SCAN key to search and memory FM station automatically from 87.5MHz-108MHz.
- press CH-/CH+ to select FM station previous or next one by one;
- Adjust function keys to your satisfied best sound effect.
- If FM signal is not good in the room and you can not search FM station, You can connect metal cable on the FM antenna, and put another terminal of metal cable at outdoor, it can help you search FM station. But you should take care and avoid in lightning strike area.

*CONNECT TO DVD/VCD/CD/MP3/TAPE/MP3 PLAYER, PLAY AUDIO/VIDEO

- DVD/VCD/CD/MP3/TAPE/MP3 Player AUDIO OUT L/R audio output socket connect to speaker Aux audio input jack by RCA cable correctly.
- Insert electric source cable of DVD player, speaker, turn on the power switch.
- Press INPUT (or MODE) key to select AUX input mode;
- Adjust function keys to your satisfied best sound effect.

*KARAOKE AND MICROPHONE FUNCTION OPERATION INSTRUCTION (ONLY FOR HAVE KARAOKE FUNCTION SPEAKER MODELS)

- Insert microphone into MIC1/MIC2 socket on the panel, and turn on microphone, and adjust echo and microphone volume properly, and you can sing and speak freely by microphone ;
- ECHO : press ECHO key to adjust microphone ECHO volume;
- MIC.VOL. : press MIC.VOL. key to adjust MICROPHONE volume;
- Donot use microphone toward speaker or near speaker, avoid to squeal sound and damage speaker.
- Turn off microphone and take out microphone from MIC socket, when you do not use microphone.

*BLUETOOTH FUNCTION OPERATION INSTRUCTION (ONLY FOR HAVE BLUETOOTH FUNCTION SPEAKER MODELS)

- Press INPUT to select bluetooth input mode.
- Open the Bluetooth function on the mobile phone, LAPTOP, I-PAD etc... portable device, and search bluetooth speaker. (the speaker's bluetooth name MEHFIL MH-20 connection password 0000).