



instructions
(1-4)



ANCÖBER

INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY

Getting Started

Unbox the unit first.
Remove any packing from the product.
Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

Package Contents

Speaker
USB rechargeable cable
3.5mm AUX plug cable
Instruction manual

Features


- 1.Wireless Bluetooth connectivity to iPad, iPod Touch, Android, Windows Phone, Blackberry, smartphones, tablets, computers and more.
- 2.Multi-Color Lights jive to the beat of music.
- 3.Play music through Bluetooth and Auxiliary.
- 4.Microphone to receive Call
- 5.Rechargeable built-in battery

IMPORTANT SAFETY INFORMATION

- 1.Read all instructions before using this product.
- 2.Do not leave this product unattended while connected to the power supply.
- 3.Do not immerse in water or any other liquids.
- 4.Do not use if unit has been dropped or damaged in any way.
- 5.Improper repairs may place user at serious risk.
- 6.Repairs to electrical equipment should only be performed by qualified personnel.
- 7.Place unit on sound, even surface, free of vibrations and away from sources of heat.

- 10.Do not put objects into openings.
- 11.Do not use this unit for anything other than its intended use.
- 12.Keep this product out of reach of children.
- 13.This product is not a toy.
- 14.Do not play music at excessive levels especially near children, as damage to hearing may occur.

Description of Parts:

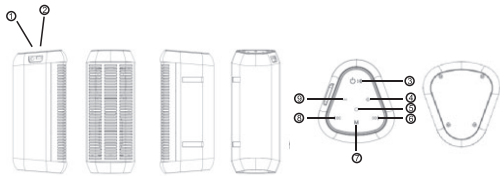

UK REP
EVATOST CONSULTING LTD
Suite 11, First Floor, Moy Road Business
Centre, Taffs Well, Cardiff, Wales, CF15 7QR
contact@evatmaster.com +442921680945

EC REP
eVatmaster Consulting GmbH
Bettinastr. 30,
60325 Frankfurt am Main, Germany
contact@evatmaster.com +496995179070

1.To our valued customers: Should there be any quality issues, we are offering a 30-day free return and a year free repair.
Please contact Ancoberservice@gmail.com

Item	Function	Operation
①	3.5mm AUX slot(line in)	AUX (line in) mode of operation through audio device.
②	DC Charging Port	To charge the speaker (Charging cord included).
③	Power ON/OFF switch	Turn ON/OFF the speaker
④	(+) button	Long press will increase the volume level.
⑤	LED light indicator	Indicates the Charging or status of operation (Bluetooth/AUX)
⑥	(⏮) button	Short press will skip to the next track
⑦	(M) button	Short press will change LED lights dancing mode, 7 dancing mode there and turn on/off the light.
⑧	(⏭) button	Short press will return to the previous track
⑨	(-) button	Long press will decrease the volume level.

(Note: Some of above function only can be used in Bluetooth mode only. In Aux mode, you may need to control through your source device.)

INSTRUCTIONS FOR USE

Charging the speaker
For best results, fully charge the speaker before its first use.

- 1.Connect the USB charging cord (included) to the DC 5V charging port of the speaker and insert the other end into a port on your computer or similar power source.
- 2.The Red LED turns on indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It will take around 4 hours to fully charge the battery.

Note: In order to have better battery life, please do not charge for over 4 hours.

Turn the speaker to Bluetooth pairing mode -

- 1.Press Power ON/OFF about 3 seconds, the light and speaker both on.
 - 2.You would hear two short music notice message; first one means power on. Second one the speaker is now in pairing mode.
- (Note: Speaker automatically pairs with the previously paired devices)

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.