 
 


2



3



4



Smart Karaoke Machine

Shell S3



For more information see the extended manual online:
ikarao.commaxxgroup.com/en/support/home

Intended use

This product is intended as a karaoke speaker for singing along with music from your device via USB or AUX.

This product is intended to be used in household and similar applications such as kitchen areas.

This product is not intended for professional use.

The power delivered by the charger must be between min 5 Watts required by the radio equipment, and max 65 Watts in order to achieve the maximum charging speed.

This product works with USB PD fast charging.

Any modification of the product may have consequences for safety, warranty and proper functioning.

Safety instructions

WARNING

- Ensure you have fully read and understood the instructions in this document before you install or use the product. Keep the packaging and this document for future reference.

- Only use the product as described in this document.
- Do not let children play with the packaging material. Always keep the packaging material out of the reach of children.
- Do not drop the product and avoid bumping.
- Do not use the product if a part is damaged or defective. Replace a damaged or defective product immediately.
- Do not open the product, there are no user serviceable parts inside.
- This product may only be serviced by a qualified technician for maintenance to reduce the risk of electric shock.
- Always use the correct charger when charging the product. Please refer to the information in this manual for the recommended charger type.
- The product is delivered with a partially charged battery. For optimal battery life, fully charge the battery before first use.
- Do not leave the product on prolonged charge when not in use.
- Do not dismantle, open or shred cells or batteries.
- Do not expose cells or batteries to heat or fire. Avoid storage in direct sunlight.
- Always keep the battery clean and dry. Clean the battery with a clean, dry cloth when the battery becomes dirty.
- In the event of a battery leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- Disconnect the product from the power source before cleaning.
- Do not expose the product to water, rain, moisture, or high humidity.
- Do not immerse the product in water or other liquids.
- Do not use aggressive chemical cleaning agents when cleaning the product.

Maintenance

Clean the product regularly with a soft, clean, dry cloth. Avoid abrasives that can damage the surface.

Warranty

Any changes and/or modifications to the product will invalidate the warranty. We accept no liability for damage caused by improper use of the product.