

# AeroGuard

QUICK  
START  
MANUAL

PLYMVENT®







Before Using the AeroGuard, you must read and understand the Use & Safety Guide




## What's in the Box?

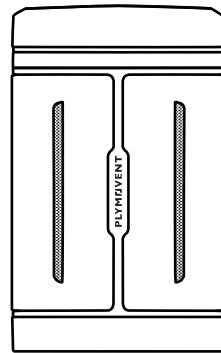


AeroGuard

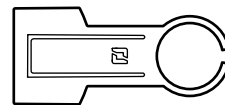


Wall Mount Connector

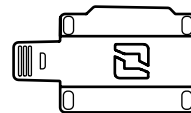

AeroGuard Dust Sensor

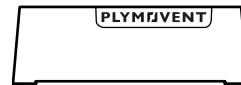


Wall Mount Base

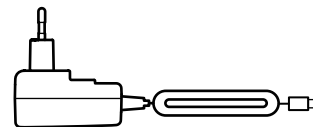

Regional Power Adapter




## Product Overview

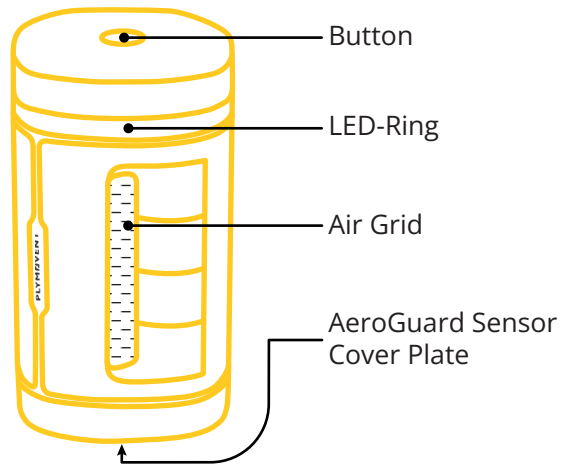



1

## Install the AeroGuard Dust Sensor


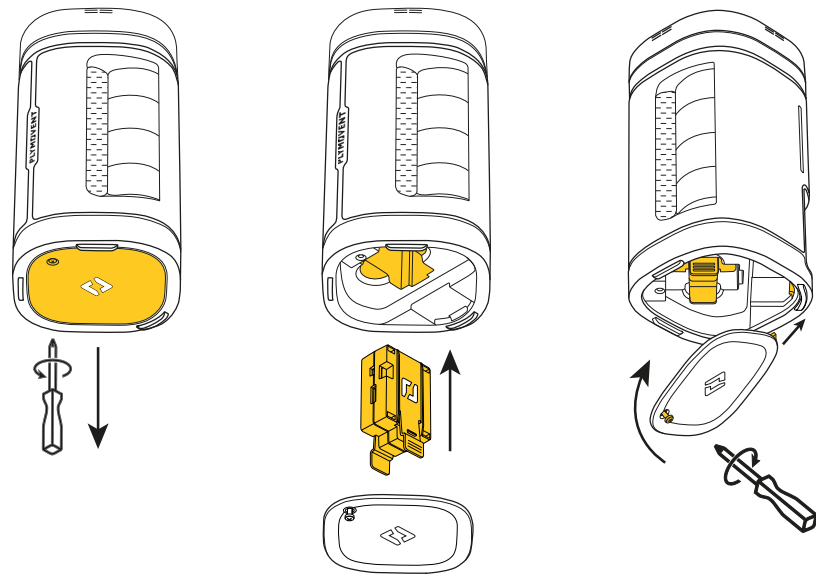




## Mounting Options

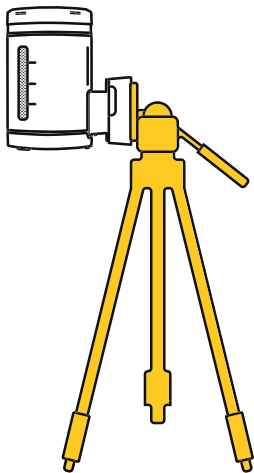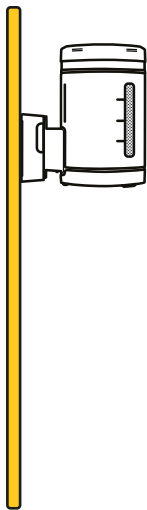


## Optional: Wall Mount

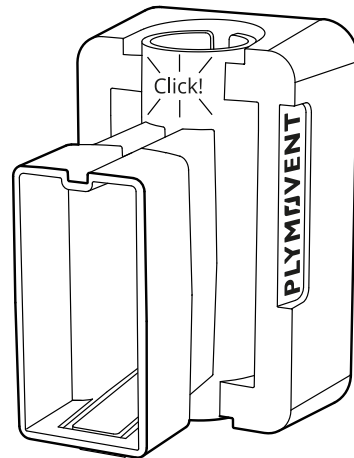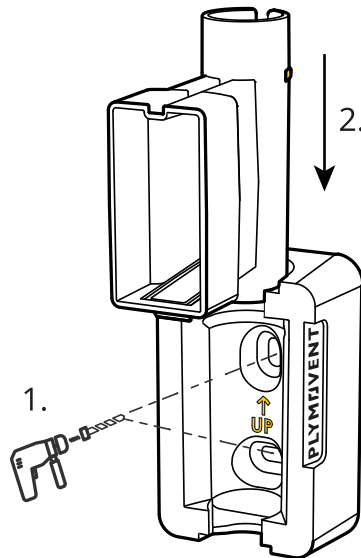

②


## Plug in the Power Adapter

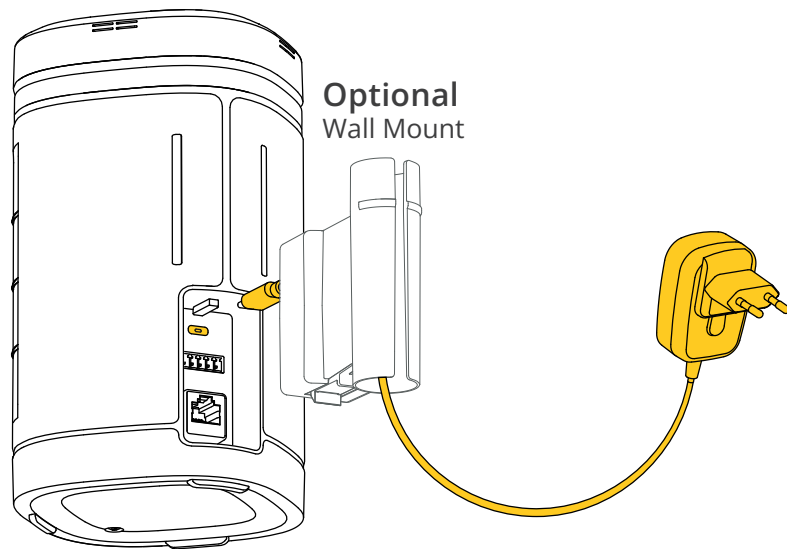

③

## Connect to the Internet

Setup with App  
(recommended)

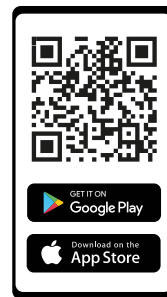

Follow the setup instructions  
in the AeroGuard App



Portal Only

[www.MyPlymovent.com](http://www.MyPlymovent.com)

Only available with Portal  
subscription plan



Follow the setup instructions  
in the MyPlymovent.com Portal




## LED-Ring

Setup



White

Device Starting up

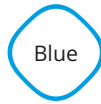

Blue

Ready to pair/configure

Use



Green

Good



Yellow

Fair



Red

Poor

LED-Indicates PM<sub>2.5</sub> by default

Customize

The LED-Ring shows the primary sensor readings.  
Change the primary sensors in the App & Portal.



## Sensor Measurements



**Dust Sensor**

Particulate matter  
PM<sub>1</sub> PM<sub>2.5</sub> PM<sub>4</sub> & PM<sub>10</sub>



**Temperature**

Temperature  
in °C and °F



**VOC**

Total Volatile Organic  
Compounds in mg/m<sup>3</sup>



**Sound**

Sound levels  
L<sub>Aeq</sub> in dB



**Humidity**

Relative humidity  
in %RH



**Atmospheric Pressure**

Atmospheric pressure  
in hPa



**IAQ Index**

Indoor Air Quality index  
with UBA standard



**Carbon Dioxide**

CO<sub>2</sub> levels  
in ppm

4

## Relay Outputs


### Custom Settings

The LED-Ring shows the measurements of one sensor. Change which sensor data is shown on the LED-Ring in the App & Portal.

Customize relay settings with the Portal subscription plan.


### Default Settings

	PM <sub>2.5</sub> (µg/m³)	Good <1000	Fair 1000 - 2000	Poor >2000
Relay 1		Off	On	On
Relay 2		Off	Off	On

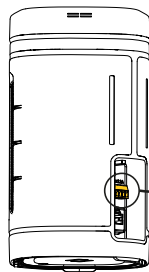

Relay 1    Relay 2

NO COM NC    NO COM NC

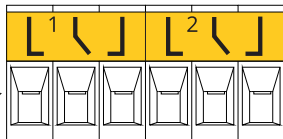

Max. 30 V (AC/DC), 2 A

Wire an external application to COM (common) in combination with NO (normally open) or NC (normally closed).

5

## Calibration

To get the most accurate readings for your use, review and change the calibrations options in the App or Portal.

### Particulate Matter (Dust) Sensor Options



#### Default Calibration

General dust calibration (factory settings) for home and office.



#### General Exhaust Fumes

Calibrated to best reflect dust particles in exhaust emissions.



#### General Welding Fumes

Calibrated to best reflect dust particles in welding bays.



#### Custom Calibration

Create your own dust calibration. (Portal subscription only)

### Other Calibration Options



#### Carbon Dioxide

Automatic (default) or custom settings available.



#### Relative Humidity

Offset in %RH available.




#### Temperature


Offset in °C and °F available.




## Spare Parts & Accessories

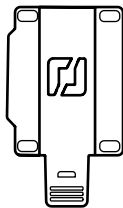


A

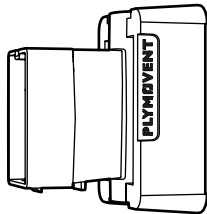

B

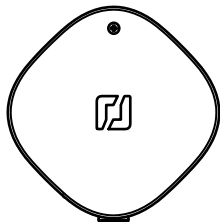

C

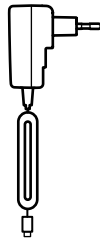

D

A	AeroGuard Dust Sensor	0000304925
B	AeroGuard Wall Mount	0000305091
C	AeroGuard Sensor Cover Plate	0000305092
D	AeroGuard Global Power Adapter	0000304991



