



Wireless Gamepad For P4

STK-4007L

 
User Manual

Before use

Carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference.
Always update your system to the latest version of system software.

Precautions

Safety

- Avoid prolonged use of this product. Take a 15-minute break during each hour of play.
- Stop using this product immediately if you begin to feel tired or if you experience discomfort or pain in your hands or arms during use. If the condition persists, consult a doctor.
- If you experience any of the following health problems, discontinue use of the system immediately.
If symptoms persist, consult a doctor.
-Dizziness, nausea, fatigue or symptoms similar to motion sickness.
-Discomfort or pain in a part of the body, such as eyes, ears, hands or arms.
- The product is intended for use with the hands only. Do not bring it into close contact with your head, face or bonds of any other parts of the body.
- The vibration function of this product can aggravate injuries. Do not use the vibration function if you have any ailment or injury to the bones, joints, or muscles of your hands or arms. You can turn on or turn off the vibration function from  (setting) on the function screen.
- Permanent hearing loss may occur if the headset or headphones are used at high volume. Set the volume to a safe level. Over time, increasingly loud audio may start to sound normal but can actually be damaging your hearing. If you experience ringing or any discomfort in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the sooner your hearing could be affected. To protect your hearing:
-Limited the amount of time you use the headset or headphones at high volume.
-Avoid raising the volume to block out noisy surroundings.
-Lower the volume if you can't hear people speaking near you.
- Avoid looking into the light bar of the controller when it is flashing. Stop using the controller immediately if you experience any discomfort or pain in any body parts.
- Keep the product out of the reach of small children. Young children might damage the product causing it to malfunction, swallow small parts, wrap the cables around themselves or accidentally injure themselves or others.

Use and handling

When using the controller, be aware of the following points.

- Before use, make sure that there is plenty of space around you.
- Firmly grip your controller to prevent it from slipping out of your grasp and causing damage or injury.
- When using your controller with a USB cable, ensure that the cable cannot hit a person or any object and do not pull the cable out of the PlayStation4 system while playing.
- Do not allow liquid or small particles to get into the product.
- Do not allow touch the product with wet hands.
- Do not throw or drop the product or subject it to strong physical shock.
- Do not put heavy objects on the product.
- Do not touch the inside of the USB connector or insert foreign objects.
- Never disassemble or modify the product.

Exterior protection

 
- Follow the instructions below to help prevent the product exterior from deteriorating or becoming discolored
- Do not place any rubber or vinyl materials on the product exterior for an extended period of time.
 - Use a soft, dry cloth to clean the product. Do not use solvents or other chemicals. Do not wipe with a chemically - treated cleaning cloth.

Storage conditions

- Do not expose the product to high temperatures, high humidity or direct sunlight.
- Do not expose the product to dust, smoke or steam.

Pair your controller

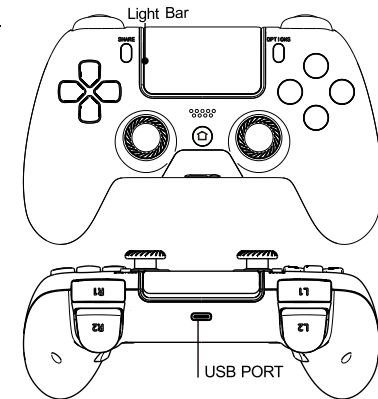

You'll need to pair your controller when you use it for the first time and when you use it with another PS4 system. Turn on the P4 system and connect the controller with the USB cable to complete device pairing.



To USB Port

To the P4 System

Hint

When you press the  HOME button, the controller turns on and the light bar glows in your assigned color. The color that is assigned depends on the order in which each use presses the  HOME button. The first controller to connect is blue, with subsequent controllers glowing red, green, and pink.

For details on using the controller, refer to the user's guide of the P4 system.

Charging your controller

With the PS4 system turned on or in rest mode, connect your controller using the USB cable.

Hint

You can also charge your controller by connecting the USB cable to a computer to another USB device. Use a USB cable that complies with the USB standard. You might not be able to charge the controller on some devices.

Charging your controller

Caution-using the built-in battery:

-This product contains lithium-ion rechargeable battery
Before using this product, read all instructions for handling and charging the battery and follow them carefully

- Take extra care when handling the battery. Misuse can cause fire and burns
 - Never attempt to open, crush, heat or set fire to the battery
 - Do not leave the battery charging for a prolonged period of time when the product is not in use
 - Always dispose of used batteries in accordance with local laws or requirements.
 - Do not handle the damaged or leaking battery
- If the internal battery fluid leaks, stop using the product immediately and contact technical support for assistance

If the fluid gets on to your clothes, skin or into your eyes, immediately rinse the affected area with clean water and consult your doctor. The battery fluid can cause blindness.

Battery life and duration:

The battery has a limited life span. Battery charge duration gradually decreases with repeated usage and age.

Battery life also varies depending on the storage method, usage state, environment and other factors.

Charge in an environment where the temperature range is between 10°C to 30°C, charging may not be as effective when performed in other environments.

 
Battery duration may vary depending on the usage condition and environmental factors.

When not in use:

When the controller is not used for an extended period of time, it is recommended that you fully charge it at least once a year in order to maintain its functionality.

 
Switch the RGB lighting

Press the button on the back to switch the RGB lighting.

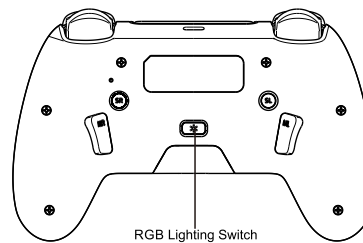

RGB Lighting Switch

Macro Function Set

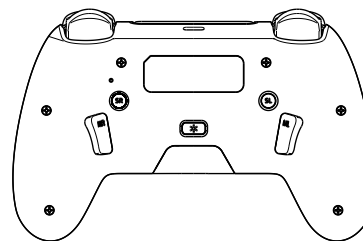

* Press the ML+SL back button for 3 seconds, and the channel indicator will change blue, red and green. Release the button and enter the programming mode. Press the ML key to save the programming; Click ML to trigger the programming function, and long press ML to trigger the loop function

* Press the back button of MR+SR for 3 seconds, and the channel indicator will change blue, red and green. Release the button and enter the programming mode. Press the MR Key to save the programming; Click the MR Trigger programming function and hold down the MR Trigger loop function

* Programming start record time 30 seconds, 30 seconds after the automatic save record. It can record 16 key functions

◆ At the same time, hold down SL+SR key, channel indicator blue red green change, long press for 3 seconds, clear programming function

Specifications

Input power rating	DC 5V,1000Ma
Battery type	Built-in rechargeable Lithium-ion battery
Voltage	DC 3.7 V
Battery capacity	800mAh
Operation temperature	0°C-45°C
Mass	Approx. 210g
Country of Production	China

Design and specifications are subject to change without notice.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.