



ANDROID TABLET QUICK START GUIDE

Contents

Customer Services & Technical Support.....	01
Maintenances.....	02
Operational Guidance.....	03-10
Troubleshooting.....	11-12
Specific Absorption Rate (SAR) information...	13
FCC Statement.....	14-15

More Languages Please Visit:



*Google, Android, Google Play and other marks are trademarks of Google LLC.

Customer Services & Technical Support

Thank you for purchasing the XGODY product! Please believe in our perfect after-sales service. If there is any product problem, please contact us in time.

- > **Item NOT As Describe?**
- > **Item Damage or Defective?**
- > **Missing Items or accessories?**
- > **Problem with installation?**
- > **Any issues what so ever.....**

Contact us before returning or bad review the item we will help you solve any issues.

Email us: support@xgody.com

 
Maintenances

- Please keep Device dry. Do not let equipment, battery charger contact water and vapor, or use wet hand to operate equipment or charger, Lest cause short-circuit, corrosion caused by equipment failure, and personnel.
- Don' t make equipment, battery and charger strongly impact or vibration. Lest cause equipment, battery and charger fault, fire or explosion.
- Don' t put this equipment, battery and charger in the too high or too low temperature region. Otherwise you may cause equipment, battery and charger fault, fire or explosion.
- Don' t hit, throw, acupuncture the Device, and avoid drop, extrusion, bending Device.
- Don' t unauthorized equipment and accessories, otherwise the equipment and accessories will not in the company' s warranty scope.


Operational Guidance


Charge the tablet

Please use a 5V/2A charge to charge the tablet.

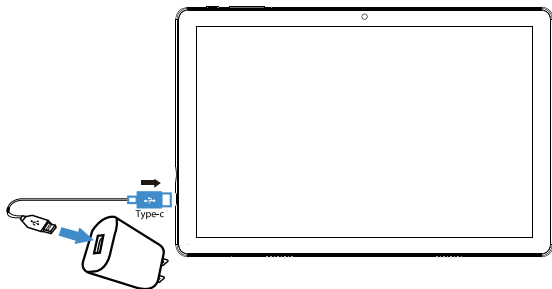


Description

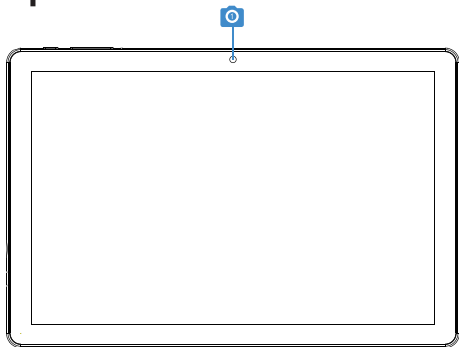 


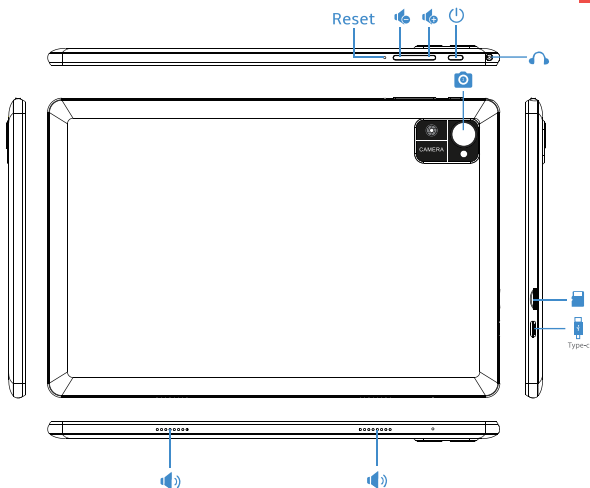 


Power on and boot into Android

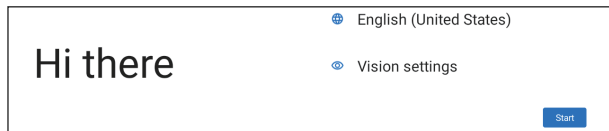 



Choose your language

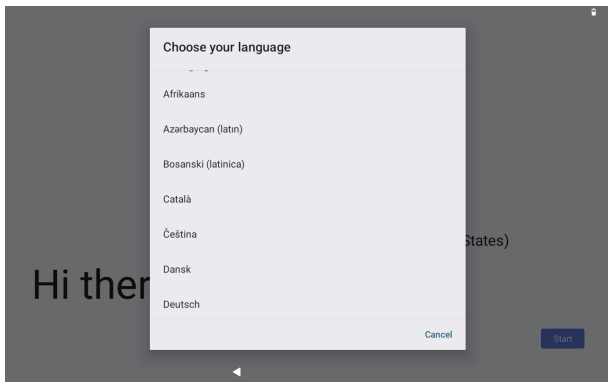 


 Quickly enter the Home Screen (skip settings)

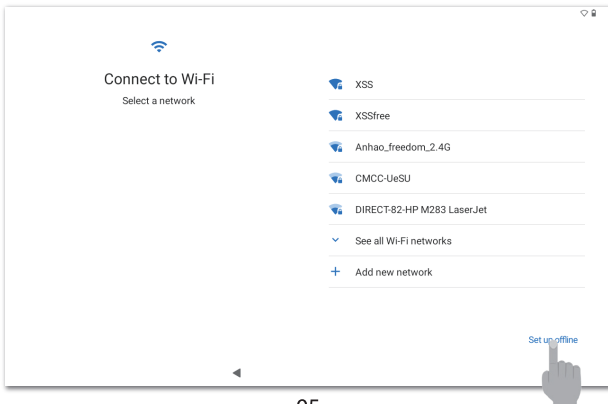

   
Quickly enter the Home Screen (skip settings)

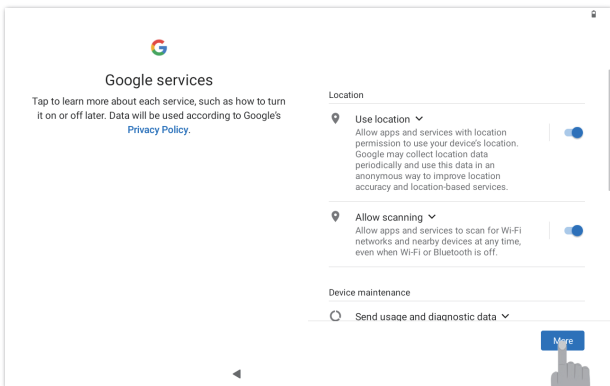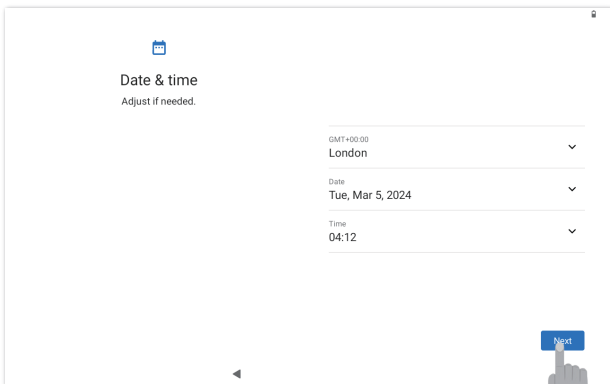

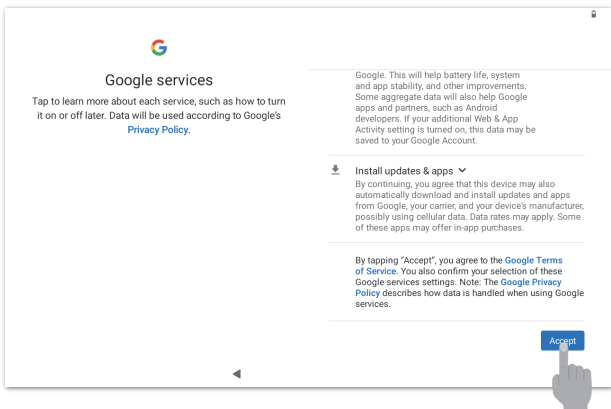


Setting the Display Language and Input Method

 1. On your Android device, tap Settings.
2. Tap System → Languages & input → Languages.
3. Tap Add a language and choose the language that you want to use.
4. Drag your language to the top of the list.

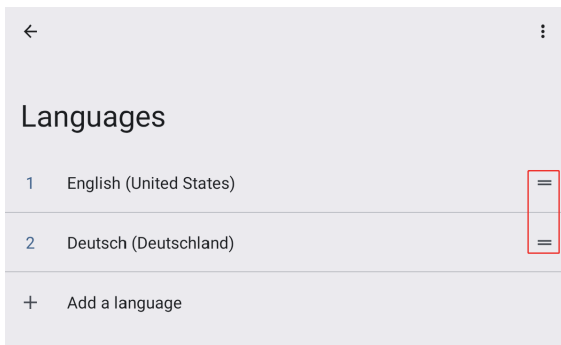

Micro SD Card Tray Installation

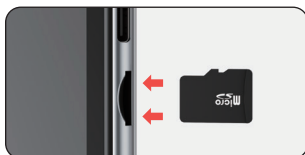 


1. Place the Micro SD card with the metal pointer side down and the tablet screen facing up. Then align the card slot and gently press the Micro SD card into the slot from left to right to fix it.
2. Use your fingernail to press slightly firmly along the edge of the Micro SD card and the Micro SD card will pop out.
3. After the Micro SD card is ejected, the Micro SD card can be pulled out along the edge of the micro SD card.

Connection with PC

USB Connect

 Use USB cable to connect device to PC, device will pop up the USB connection window, click Turn on USB storage to connect to PC.

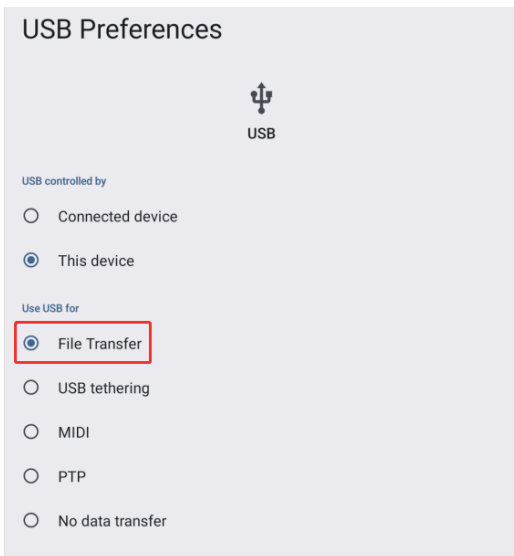

Into the load mode, you can copy, delete the file on the device and the file on the memory card.

OTG Use

- Support FAT32 format mobile memory devices, such as USB disk.
- The way for Plug and play.
- Use OTG cable to connect MID USB OTG PORT with other devices.

Troubleshooting

Q1. The tablet doesn't power on.

- ▲ Reboot your tablet after charging for 30 minutes;
- ▲ Press the power button to check if the tablet is in the Sleep Mode;
- ▲ Press and hold the power button for 5s to turn off the tablet, then reboot it;
- ▲ Press the Reset button with a pin to reboot the tablet.

Q2. The tablet doesn't charge.

- ▲ Make sure the USB cable is properly plugged into the charging port;
- ▲ Try another compatible USB cable and adapter.

Q3. Error message occurs during the operation.

- ▲ Uninstall the App with the error message, then download and install again;
- ▲ Press the Reset button with a pin to reboot the tablet,

Q4. The tablet cannot be detected by the computer.

- ▲ Make sure the tablet is powered on;
- ▲ Try another USB cable;
- ▲ Try another USB port on the computer;

Troubleshooting

▲ Instead of Charge this device, choose Transfer files or Transfer photos (PTP) when connecting the tablet to the computer.

Q5. The tablet cannot connect to the Wi-Fi.

▲ Make sure the Wi-Fi in your tablet is ON;

▲ Make sure you input the correct password when connecting the Wi-Fi;

▲ Restart the router

▲ Make sure there is no filter setting or device connection limitation in the setting of the router

▲ Forget the current Wi-Fi, reset the router and connect the Wi-Fi again.

Q6. The storage space of the tablet is not enough.

▲ Delete the Apps you don't use;

▲ Clear the cache of the Apps regularly;"Install an Micro SD card to expand the storage.

FCC Statement

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and

used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The device has been tested and complies with FCC SAR limits.

 The symbol indicates DC voltage


 RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/

EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization. This product can be used across EU member states.

EU Compliance Statement: SHEN ZHEN XIN SHENG SHANGTECHNOLOGY CO.,LTD hereby declares that this device is in compliance with the essential requirements and other relevant provisions of the Directive 2014/53/EU.

A copy of the EU Declaration of Conformity is available online at <https://xgody.com/pages/doc>

NOTES:



- 1.High Sound Pressure
- 2.Hearing Damage Risk
- 3.Do not listen at high volume levels for long periods.



BE	BG	CZ	DK	DE	EE	IE	EL
ES	FR	HR	IT	CY	LV	LT	LU
HU	MT	NL	AT	PL	PT	RO	SI
SK	FI	SE	NO	IS	LI	CH	TR

In all EU member states, operation of 5150-5250 MHz is restricted to indoor use only.



Manufacturer/Exporter: SHEN ZHEN XIN SHENG SHANG
TECHNOLOGY CO.,LTD.
Production Site: Room 303, Building 9, No. 54-6, Guanlan
Avenue, Xinxhe Community, Fucheng
Street, Longhua District, Shenzhen City,
Guangdong Province, China
Zip Code: 518000
Phone: +86 13048907387
E-mail: support@xgody.com
Official Website: www.xgody.com
Facebook ID: @xgodyofficial



www.xgody.com



XGODY-Youtube



Company : APEX CE SPECIALISTS LIMITED
Address: 6F East Union Street, Manchester,
England, M16 9AE
Contact: Wells
Tel : +441616371080
E-Mail: Info@apex-ce.com



Company : Apex CE Specialists GmbH
Address: Grafenberger Allee 277, 40237
Düsseldorf, DE
Contact: Wells Yan
Tel : +4921312066043
E-Mail: Info@apex-ce.com



MADE IN CHINA