

① 充电全指示灯
充电红灯闪烁，
充满红灯长亮

② 充电接口

③ 喇叭出声孔

④ 触摸按键位

2. 蓝牙配对

1. 打开充电仓，L/R 耳机自动进入蓝牙配对模式，等待连接。
2. 打开手机上的蓝牙，搜索设备名 V12，点击进入连接。
(语音提示:L/R 耳机连接提示音)

1. 用一只手按住耳朵，把耳机挂在耳朵上。
2. 旋转调整耳机喇叭位置，上下移动直到耳机完全贴合耳朵的轮廓。
3. 注意区分 L/R 的佩戴位置，如果拿反则佩戴不上去。

语音指令名称	功能名称及功能描述	功能名称及功能描述	功能名称及功能描述
语音指令名称	功能名称及功能描述	功能名称及功能描述	功能名称及功能描述
耳机连接 Connect	耳机连接或断开耳机。当蓝牙耳机设备连接手机时，第二次连接，手机会自动连接蓝牙耳机。	蓝牙耳机连接	蓝牙耳机连接
接听电话 hang up the phone	接听电话 接听来电上蓝牙耳机	接听电话	接听电话
拒接电话 Reject Call	来电电话静音 上蓝牙耳机拒接电话	拒接电话	拒接电话
来电接听 Answer Call	接听电话 接听来电上蓝牙耳机	接听电话	接听电话
加音量	长按左耳机	加音量	长按左耳机
减音量	长按左耳机	减音量	长按左耳机
下一曲 Next Song	双击左耳机或进入下一曲	下一曲	下一曲
上一曲 Previous Song	双击左耳机或进入上一曲	上一曲	上一曲
暂停播放/暂停 Play/Pause	单击任何一只耳机	暂停播放/暂停	暂停播放/暂停
电量显示 show	长按耳机或长按语音按钮 10秒，手机显示部分电量或电量显示提示	电量显示	电量显示
关机 Power Off	长按右耳机上显示关机，手机关机或长按语音按钮 15 秒输入关机设备关机提示。 2、耳机充电设备断电时过短，耳机进入充电模式时，会启动关机设备提示，关机。 3、耳机充电电量不足提示 15、关机提示	关机	关机
开机 Power On	打开充电盒盖 5 秒后开机。	开机	开机
语音助手 Voice Assistant	三击右耳机或开机	语音助手	语音助手

以上事项如未遵照执行，可能会导致人身伤害、财产损失、火灾或设备损坏。请仔细阅读并遵守以下安全警告：

1. 请勿在雷雨天气使用本产品。雷雨天气时，请勿使用本产品，以免遭受雷击。
2. 请勿在易燃易爆场所使用本产品。本产品在使用过程中可能会产生火花，因此在易燃易爆场所使用可能会导致火灾或爆炸。
3. 请勿在潮湿或导电表面使用本产品。潮湿或导电表面可能会导致电击或短路。
4. 请勿将本产品靠近热源或火源。高温可能会导致设备过热或损坏。
5. 请勿将本产品靠近儿童。儿童可能会误操作设备，导致受伤或损坏。
6. 请勿将本产品靠近易燃液体或气体。易燃液体或气体可能会导致火灾或爆炸。
7. 请勿将本产品靠近高压电源。高压电源可能会导致电击或短路。
8. 请勿将本产品靠近强磁场。强磁场可能会导致设备故障或损坏。
9. 请勿将本产品靠近强辐射源。强辐射源可能会导致设备故障或损坏。
10. 请勿将本产品靠近强震动源。强震动可能会导致设备故障或损坏。

警告：以上事项如未遵照执行，可能会导致人身伤害、财产损失、火灾或设备损坏。请仔细阅读并遵守以下安全警告：

1. 请勿在雷雨天气使用本产品。雷雨天气时，请勿使用本产品，以免遭受雷击。

2. 请勿在易燃易爆场所使用本产品。本产品在使用过程中可能会产生火花，因此在易燃易爆场所使用可能会导致火灾或爆炸。

3. 请勿在潮湿或导电表面使用本产品。潮湿或导电表面可能会导致电击或短路。

4. 请勿将本产品靠近热源或火源。高温可能会导致设备过热或损坏。

5. 请勿将本产品靠近儿童。儿童可能会误操作设备，导致受伤或损坏。

6. 请勿将本产品靠近易燃液体或气体。易燃液体或气体可能会导致火灾或爆炸。

7. 请勿将本产品靠近高压电源。高压电源可能会导致电击或短路。

8. 请勿将本产品靠近强磁场。强磁场可能会导致设备故障或损坏。

9. 请勿将本产品靠近强辐射源。强辐射源可能会导致设备故障或损坏。

10. 请勿将本产品靠近强震动源。强震动可能会导致设备故障或损坏。

2. 此文件可帮助车主阅读保养手册, 如出现以下情况, 即使在保修期外发生故障, 以下情况也会收取费用:

- (A) 如果没有出示保修卡 (2) 如果无法证明购买日期 (3) 如果产品超过保修时间, 发生保修期外维修费用
- (4) 使用 (按照使用说明书中) 的非法或非正常使用 (5) 其他造成损坏设备的故障或损坏, 例如: 车辆碰撞或不当使用造成的故障或损坏 (6) 因火灾、地震、水灾、盗窃、人为损坏、意外事故、火灾、战争、恐怖主义等事件造成的故障或损坏 (7) 更换非制造商零件, 更换零件等
- 3. 可使用再制造零件或替代零件进行维修。此外, 维修更换的旧零件和我们不会承担责任

因故障无法使用本产品所造成的损失, 我们将不予赔偿。

本产品自出厂日起，享有一年的保修期限。

保修的产品在保修时凭本保修证及有效购货凭证，符合下列条款时即可保修。

1. 您的设备必须按照本产品使用说明书正确使用；

2. 本保修卡不适用于人为、意外火灾、外力挤压、坠落等；或者自然老化(地震、火灾、雷电)所造成的损坏或损坏零件；

3. 本保修卡遗失后不再补发，请妥善保管证一同妥善保管。

产品名称：
型号：
购买时间：
颜色：
联系电话：
保修地点：
经销商名称及地址：

请认真填写并妥善保管，若您因设备需要保修服务，请联系您所购入设备的经销商。

① Charging lid indicator light, charging and light function: lid and light lamp on

② Charging interface

③ Sound hole of horn

④ Touch the button to stop

2. Bluetooth pairing

1. Open the charging bin. The L/R headset automatically enters Bluetooth pairing mode and waits for connection.
2. Open Bluetooth on your phone, search for device name V12, and click to connect. (Voice prompt: L/R headphone connection prompt sound)

2. Rotate and adjust the position of the earphone speaker, moving it up and down until the earphones fully fit the contour of the ear.

Function Name	Operation mode and status	Indicator status	Prompt
Connect	After the smartphone enters pairing mode, connect them to devices such as mobile phones. On the second connection, the headphones will automatically reconnect to the device	nothing	Bluetooth connected
Hang up the	Call status click on LR earphones at will	nothing	nothing
Reject Call	Call status Any LR Long press the earphones for 2 seconds	nothing	nothing
Answer Call	Call status click on LR earphones at will	nothing	nothing
Turn it up	Long press the right headset	nothing	There is a maximum volume, the volume is at maximum
Reduce the volume	Long Press left headset	nothing	nothing is at maximum
Next Song	Double-click on the right headset to go to the next track	nothing	nothing
Previous Song	Double-click the left headset to enter the previous track	nothing	nothing
Play/Pause	Click on either side of the headset	nothing	nothing
Low power	The voltage of the earphone battery is lower than 3.4 V	The red light flashes once every five seconds	insufficient power
Electricity display	After successfully connecting the earphones to devices, iOS system and Android phones can read battery level	nothing	nothing
Power off	See the reason in the manual and shut down the machine 1. The headset will be switched off after 10 minutes in a reserved power mode without any operation 2. The headset will be switched off after 10 minutes of continuous use without any security detection is on for the earphone 3. The headset will be switched off after 10 minutes of continuous use without any security detection is on for the earphone 4. 5 minutes does not turn the earphones completely, shut down 5. The headset factory voltage drops to 3.1 V or less and stops automatically	nothing	Turn it off
Power on	Open charging box. Make sure the headset is fully charged	nothing	Power on
Voice Assistant	Press either on any side of the headset	nothing	nothing

Please follow the following precautions to avoid injury and property damage. Long term use of high volume infatigates the ears and may lead to permanent effects such as reduced hearing, tinnitus, or ringing in the ears, and may contribute to preventing excessive volume. Depending on the Bluetooth device connected to the device, there may be a whistling phenomenon during playback. Please always pay attention to maintain a comfortable and appropriate volume, and gradually increase the volume. Suddenly increasing the volume may damage hearing.

Do not use the device when you are sleepy, drowsy, or have other symptoms while using this device. Please stop using it as soon as possible upon encountering a doctor, or contact a repair center or the seller at the time of purchase for further information.

1 Please do not place the smartphone body in the back pocket to avoid compression, deformation, or damage to the device when you are driving.

2 Please do not use this device in the cockpit, as radio waves and other factors may cause accidental operation and accidents.

3 Please do not use this device near medical devices, as radio waves and other influences may interfere with the operation of the device or other medical electronic devices.

4 Please do not use this machine in crowded carriages, noisy places, or indoor medical facilities.

Please do not use: near automatic controlled devices such as automatic doors and fire

If these notice the following precautions to avoid death or serious injury caused by fire, electric shock and heat, fire. Please do not touch the leaking liquid of the charging battery directly with your hands. If the liquid accidentally enters the eyes, to avoid the possibility of blindness, please do not rub the eyes and immediately rinse thoroughly with water before seeking medical treatment. If the leaked liquid accidentally touches the body or clothes, to avoid possible burns or other injuries, please wash with water immediately. If skin inflammation or other injuries occur, please seek medical treatment in a

and other situations may cause fire or other injuries, causing pollution and damage to the surrounding area. Do not disassemble this machine on your own to avoid malfunctions or electric shock. If you need to replace the rechargeable battery, conduct internal inspections, repairs, etc., please contact the after-sales service center or the specialized store at the time of purchase in a timely manner. Please do not expose this device to high temperatures or around heating equipment such as near flames, direct sunlight, or in high-temperature areas such as the interior of cars. Keep and place 2Batteries (battery packs or combination batteries) must not be exposed to overheating environments.

according to this manual.

2. This document can be reused and please keep it safe. In case of any malfunction during the warranty period, fees will be charged.

(1) If no warranty card is presented (2) if the purchase date cannot be confirmed (3) if the product exceeds the warranty period and malfunctions, a repair request is made

(4) (Misuse (precautions in the technical manual for normal use, etc.) (5) (Equipment malfunctioner damage caused by other reasons, or malfunction or damage caused by improper maintenance modification (6) Malfunctions or damage caused by fire, earthquake, wind, flood, lightning other natural disasters, pollution, salt damage, abnormal voltage, etc. (7) Replace worn unreplaceable parts, replace dirty parts

3. Remanufactured parts or replacement parts can be used for maintenance. In addition, repair and replacement of old parts and we will properly handle.

We will not compensate for any losses caused by the inability to use this product due to malfunction

Warranty terms

This product has a one-year warranty period from the date of purchase. The products under warranty can be repaired with this warranty certificate and a valid sales certificate when they meet the following terms:

1. Your device must be used correctly according to the product manual;
2. This warranty card is not applicable to faults or damages caused by human factors, accidents (fire, external pressure, falling, etc.), or natural disasters (earthquakes, typhoons, lightning, etc.);
3. This warranty card will not be reissued after it is lost. Please keep it properly together with the sales voucher.

Product Name:	
Model:	
Purchase time:	
Name:	
Contact phone number:	
Purchase location:	
Dealer Name and Address:	

Please keep this certificate properly. If your equipment needs warranty service, please contact the distributor of Your Social Security.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance with FCC regulations may void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generates, uses and can radiate frequency energy and, if not installed and used in accordance with the

				<p>Instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.</p> <p>If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none">— Reorient or relocate the receiving antenna.— Increase the separation between the equipment and receiver.— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.— Consult the dealer or an experienced radio/TV technician for help. <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction</p>
--	--	--	--	---