



iloubee

**基本信息 PRODUCT BASIC**

**BT连接 BT CONNECTION**

连接开关基座位置。Toggle switch to B position

**回连模式 Linking**

短按FN+Q/W/E进行回连通道。Short press FN+Q/W/E to change BT channel.

**配对模式 Pairing**

长按FN+Q/W/E进入配对模式。Long press FN+Q/W/E enter pairing mode.

**有线模式 WIRED CONNECTION**

连接USB设备，电源开关拨到中间位置为有线模式。Connect USB to the device, and unplug the power switch to the middle position for wired mode.

**2.4G连接 2.4G MODE**

通过开关进行切换，切换到2.4G模式。Toggle the switch to G position to switch to 2.4 G mode.

**配对模式 Pairing**

长按FN+P键。Long press FN+P to match the code.

温馨提示：设备在出厂时已经配对，因此无需再次配对。  
Friendly reminder: The devices are already paired at the factory, so there is no need to pair them again.

**指示灯 INDICATOR LAMP**

NUM — NUM: Num Lock  
CHG — CHG: 充满红光亮，充满熄灭。低电量红光闪烁  
Win Lock 按键亮白光

**旋钮功能 KNOB FUNCTION**

热插拔旋钮(旋钮可直接拔出)  
热插拔旋钮(旋钮可直接拔出)  
热插拔旋钮(旋钮可直接拔出)

**电池电量提示 BATTERY LEVEL REMINDER**

在BT和2.4G模式，按FN+ENTER查看电池电量  
In BT and 2.4G mode, Press and hold FN+ENTER to view the battery level indicator

**比如 For example:**

11 背光亮表示此时键盘10%的电量  
The backlit of the '1' key is illuminated, indicating that the keyboard's current battery level is at 10%.

11 ~ 12 背光同时亮，表示此时键盘20%的电量  
The '1' and '2' keys are both illuminated, indicating that the keyboard's current battery level is at 20%.

以此类推 Similarly

背光同时亮，表示此时键盘100%  
When the backlight illuminates from '1' to '0' simultaneously, it indicates that the keyboard battery is at 100% charge.

**自定义背光录制 CUSTOM BACKLIGHT SET**

不可自定义 Non-customizable

Fn + 2 Fn + 3  
Fn + 11  
Fn + Home  
e.g. Fn + W + V + B + N  
重复按键可以改变背光颜色 Repeat key presses can change backlight colors

**第二组合功能键 SECONDARY COMBINATION FUNCTION KEYS**

End + Del Pause Win Lock  
Fn + A Fn + S  
Fn + Space  
按住3秒不放，恢复出厂设置 Press and hold for three seconds to restore factory settings

**背光控制 BACKLIGHT CONTROL**

Fn + ↑ Backlight Brightness+  
Fn + ↓ Backlight Brightness-  
Fn + Back Fn + Ins  
打开/关闭背光和侧边灯 Turn on/off backlight and side lights  
侧光颜色切换 Side light color switching

**多媒体功能 MULTIMEDIA KEYS**

Windows模式下 (Fn+A: 切换到Windows系统)  
Windows system(Fn+ A: switch to Windows system)

Mac模式下 (Fn+S: 切换到Mac系统)  
MAC system(Fn+ S: switch to Mac system)

**FCC WARNING**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/television technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**WHEN USING A KEYBOARD**

1. Maintain proper posture and avoid excessive force on the keys.
2. Take regular breaks to prevent hand fatigue.
3. Clean the keyboard regularly to remove dust and dirt.
4. Avoid exposing the keyboard to liquids.
5. Keep the keyboard in a cool, dry environment, free from extreme temperatures or humidity. Remember these tips for a comfortable and durable keyboard experience.

**BATTERIES**

A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

1) Replacement of a battery with an incorrect type that can defeat a safeguard;  
2) Disposal of a battery into a fire or a hot oven, or mechanically crushing or cutting of a battery;  
3) Leaking of flammable liquid or gas;  
4) A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.