




Mammotion Innovation

USER MANUAL

YUKA SERIES

1000/2000/3000

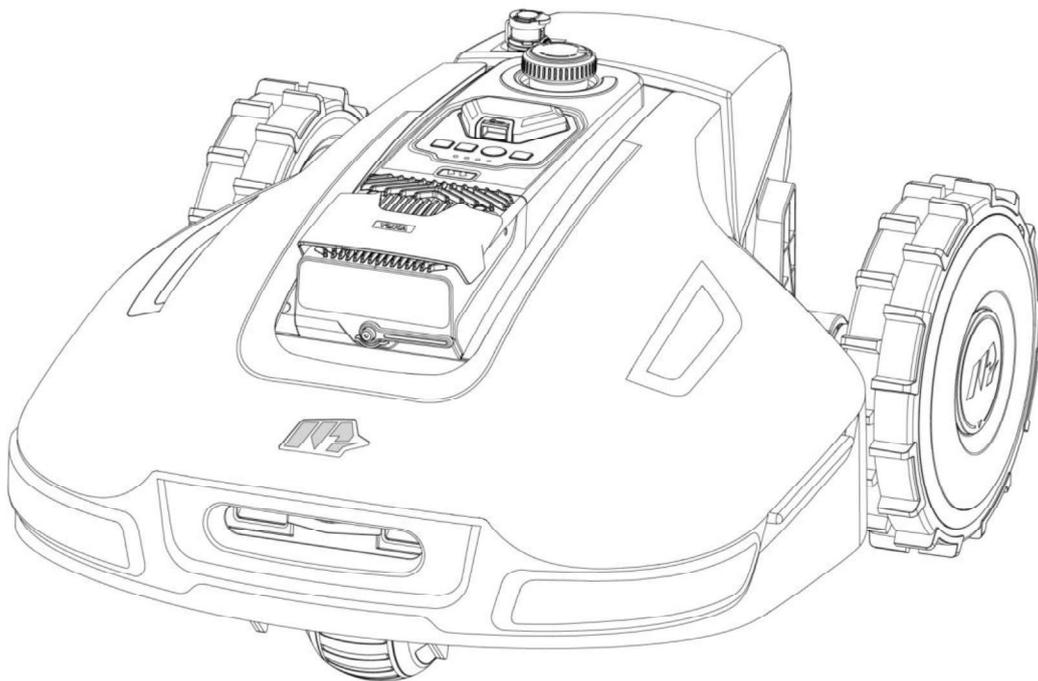

Original Instructions
Version **V1.0**
2024.10

Thank you for choosing Mammotion as your garden care lawn mower. This user manual will help you learn and operate Mammotion Yuka, a perimeter-free lawn mower, to cut grass and maintain your lawn.

This manual is copyrighted by Mammotion company. Without the written permission of the company, any unit or individual shall not copy, modify, reproduce, transcribe or transmit in any way or for any reason. This manual is subject to change without notice at any time.

Revision Log

Date	Version	Description
2024.10	V1.0	Initial version

CONTENTS

1	Safety Instructions	- 1 -
1.1	General Safety Instructions	- 1 -
1.2	Safety Instructions for Installation	- 2 -
1.3	Safety Instructions for Operation	- 2 -
1.4	Safety Instructions for Maintenance	- 3 -
1.5	Battery Safety	- 3 -
1.6	Residual Risks	- 4 -
2	Introduction	- 5 -
2.1	About Mammotion Yuka	- 5 -
2.2	In the Box	- 8 -
2.3	Symbols on the Product	- 13 -
2.4	Product Overview	- 16 -
3	Installation	- 22 -
3.1	Preparation	- 22 -
3.2	Choosing a Location for RTK Reference Station	- 22 -
3.3	Choosing a Location for Charging Station	- 24 -
3.4	Installing	- 25 -
4	Operation	- 39 -
4.1	Preparation	- 39 -
4.2	Add Your Product	- 41 -
4.3	Create a Map	- 42 -
4.4	Mow	- 55 -
4.5	Me	- 74 -
5	Maintenance	- 82 -
5.1	Cleaning	- 82 -
5.2	Maintenance for Cutting Blades	- 84 -
5.3	Battery Maintenance	- 85 -

5.4	Winter Storage.....	- 85 -
6	Product Specifications.....	- 88 -
6.1	Technical Specifications.....	- 88 -
6.2	Fault Codes.....	- 92 -
7	Warranty	- 94 -
8	Compliance	- 97 -

1 Safety Instructions

1.1 General Safety Instructions

- Carefully read and understand the user manual before using the robot.
- Only use the equipment recommended by Mammotion with the robot. Any other usage is incorrect.
- Never allow children, persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge or people unfamiliar with these instructions to use the robot, local restrictions may restrict the age of the operator.
- Do not allow children to be in vicinity or play with the robot when it is operating.
- Do not use the robot in areas where people are unaware of its presence.
- When manually operating the robot with the Mammotion app, do not run. Always walk, watch your steps on slopes, and maintain balance at all times.
- Avoid touching moving hazardous parts, such as the blade disk, until it has completely stopped.
- Avoid using the robot when there are people, especially children or animals, in the work area.
- If operating the robot in public areas, place warning signs around the work area with the following text: "Warning! Automatic lawn mower! Keep away from the robot! Supervise children!"
- Wear sturdy footwear and long trousers when operating the robot.
- To prevent damage to the robot and accidents involving vehicles and individuals, do not set task areas or channels across public pathways.
- Seek medical aid in case of injury or accidents.
- Set the robot to **OFF** and remove the security key before clearing blockages, performing maintenance, or examining the robot. If the robot vibrates abnormally, inspect it for damage before restarting. Do not use the robot if any parts are defective.
- Do not connect or touch a damaged cable until it is disconnected from the power outlet. If the cable

becomes damaged during operation, disconnect the plug from the power outlet. A worn or damaged cable increases the risk of electrical shock and should be replaced by service personnel.

- Do not place cables in areas where the robot will cut.
- Only use the charging station included in the package to charge the robot. Incorrect use may result in electric shock, overheating, or corrosive liquid leakage from the battery. In case of electrolyte leakage, flush with water/neutralizing agent and seek medical aid if the corrosive liquid comes into contact with your eyes.
- Only use original batteries recommended by Mammotion. The safety of the robot cannot be guaranteed with non-original batteries. Do not use non-rechargeable batteries.
- Keep extension cords away from moving hazardous parts to avoid damage to the cords which can lead to contact with live parts.
- The illustrations used in this document are for reference only. Please refer to the actual products.

1.2 Safety Instructions for Installation

- Avoid installing the charging station in areas where people may trip over it.
- Do not install the charging station in areas where there is a risk of standing water.
- Do not install the charging station, including any accessories, within 60 cm/24 in of any combustible material. Malfunctioning or overheating of the charging station and power supply can pose a fire hazard.
- For users in the USA/Canada: If installing the power supply outdoors, there is a risk of electric shock. Only install it in a covered Class A GFCI receptacle (RCD) with a weatherproof enclosure, ensuring that the attachment plug cap is inserted or removed.

1.3 Safety Instructions for Operation

- Keep your hands and feet away from the rotating blades. Do not place your hands or feet near or below the product when it is turned on.
- Do not lift or move the product when it is turned on.

- Ensure that there are no objects such as stones, branches, tools, or toys on the lawn. Otherwise, the blades may be damaged when they come into contact with the object.
- Do not put objects on top of the product, charging station or RTK reference station.
- Do not use the product if the **STOP** button is not functioning.
- Avoid collisions between the product and people or animals. If a person or animal comes in the path of the product, stop it immediately.
- Always power off the robot when it is not in operation.
- Do not use the product simultaneously with a pop-up sprinkler. Utilize the Schedule function to ensure that the product and pop-up sprinkler do not operate at the same time.
- Avoid setting a channel where pop-up sprinklers are installed.
- Do not operate the product in the presence of standing water in the task area, such as during heavy rain or water pooling.

1.4 Safety Instructions for Maintenance

- Power off the robot when performing maintenance.
- Disconnect the plug from the charging station before cleaning or performing maintenance on the charging station.
- Do not use a high-pressure washer or solvents to clean the robot.
- After washing, ensure that the robot is placed on the ground in its normal orientation, not upside down.
- Do not reverse the robot to wash the chassis. If you do reverse it for cleaning purposes, make sure to restore it to its proper orientation afterward. This precaution is necessary to prevent water from leaking into the motor and potentially affecting normal operation.

1.5 Battery Safety

Lithium-ion batteries can explode or cause a fire if disassembled, short-circuited, exposed to water, fire, or high temperatures. Handle them with care, do not dismantle or open the battery, and avoid any form of

electrical/mechanical abuse. Store them away from direct sunlight.

- Only use the battery charger and power supply provided by the Manufacturer. The use of an inappropriate charger and power supply can cause electric shocks and/or overheating.
- DO NOT ATTEMPT TO REPAIR OR MODIFY BATTERIES! Repair attempts may result in severe personal injury, due to explosion or electrical shock. If a leak develops, released electrolytes are corrosive and toxic.
- This appliance contains batteries that are only replaceable by skilled persons.

1.6 Residual Risks

To avoid injuries, wear protective gloves when replacing the blades.

2 Introduction

2.1 About Mammotion Yuka

The Yuka Series 3D Vision Robot Lawn Sweeping Mower, known as Yuka, boasts dual cutting blades for efficient mowing. It utilizes floating cutting blades to ensure precise cuts across diverse terrains and features a U-shape bumper for improved maneuverability and protection.

Equipped with a lawn sweeper kit, Yuka excels in simultaneous mowing and sweeping, maintaining a pristine lawn effortlessly. Its advanced positioning is driven by a state-of-the-art 3D vision and RTK fusion-mapping system, enabling precise navigation and mapping without the need for perimeter wires. Ideal for homeowners seeking efficient and perimeter-free lawn maintenance, Yuka sets a new benchmark in automated mowing technology.

2.1.1 About 3D Vision Module

Yuka is equipped with a vision module that provides 3D vision positioning, 3D vision obstacle detection, and FPV mode.


- 3D vision positioning helps to guarantee positioning accuracy when RTK positioning fails due to poor satellite signals.
- 3D vision obstacle detection identifies obstacles in the front.
- FPV mode can be used for monitoring as a security camera.

2.1.2 About Positioning

Yuka is built in an RTK (real-time kinematic) navigation system, a multi-sensor integrated navigation system, and a 3D vision positioning system, which provide more accurate positioning data.

RTK Positioning

RTK is a differential GNSS positioning technology that greatly enhances positioning accuracy to approximately 5 cm/2 in. Yuka accesses four global navigation systems (GPS, GLONASS, BeiDou, and Galileo) and incorporates supplementary sensors, thus, providing nearly 100 times improved accuracy than conventional GPS systems.

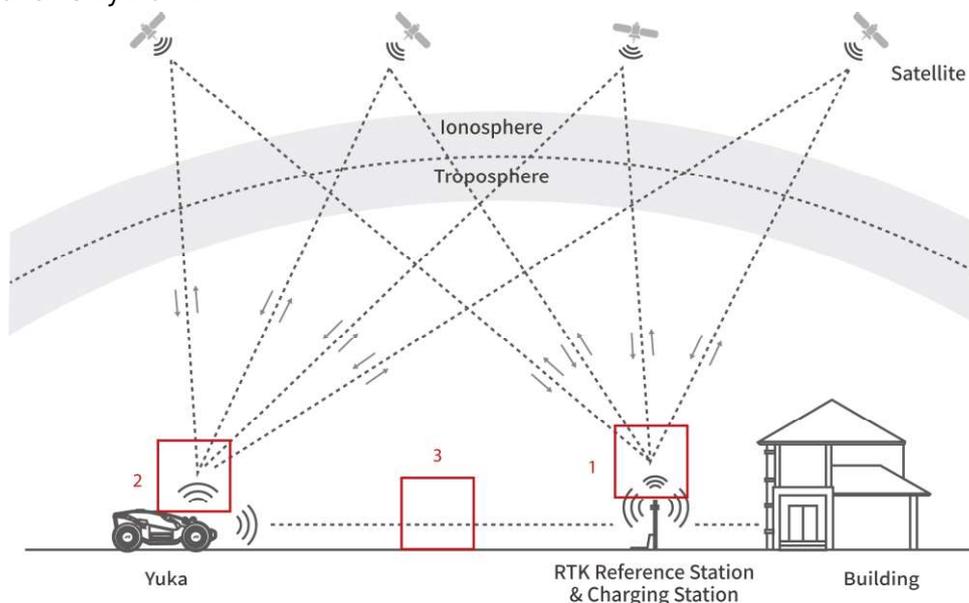

1. To perform its work, the RTK reference station receives satellite signals, requiring an obstruction-free environment and open-sky view.
2. Yuka operates similarly, requiring an open sky view to receive satellite signals.
3. Data transmission from the RTK reference station to Yuka is possible. This does not imply that there must constantly be an unobstructed view from every point on your lawn to the RTK reference station. As long as the transmission path is not completely blocked, the data can be transmitted via radio.

3D Vision Positioning

Yuka primarily uses RTK positioning to locate itself. However, in situations where satellite signals are obstructed by obstacles such as eaves or trees during mapping and mowing, Yuka can still operate effectively using the 3D vision positioning.

2.1.3 About Obstacles Detection

Yuka identifies obstacles through 3D vision and the U-shape bumper. The 3D vision system can identify

obstacles and respond accordingly.

2.1.4 About Lawn Art Printing

By utilizing AI algorithms to tailor the cutting path, cutting height, and angle, Yuka can create special patterns via the Mammotion app. See [Create a Pattern](#) for more information.

2.1.5 About Self-emptying Lawn Sweeper Kit (sold separately)

Equipped with the self-emptying lawn sweeper kit, Yuka efficiently gathers grass clippings, leaves, and debris during mowing operations, autonomously disposing of them at the designated location.

2.1.6 About Connectivity

Yuka supports three methods of connectivity, namely, Bluetooth, Wi-Fi, and 4G cellular data. Bluetooth is used to connect Yuka with your phone, while Wi-Fi and 4G cellular data are used to access the internet.

2.1.7 About Voice Control

NOTE

Yuka now supports voice commands in English, German, and French.

Yuka is compatible with both Alexa and Google Home voice control. Once linked, you can easily start or stop working or recharging using simple voice commands. See [To Link Your Alexa Account](#) or [To Link Your Google Home Account](#) for more information.

2.1.8 About Auto-recharge

Yuka supports automatically return to charge when the battery is lower than 15%.

2.1.9 About Anti-theft System


Yuka has an anti-theft system to prevent unauthorized removal.

- The alarm is triggered when Yuka is lifted.
- Users can track Yuka's location by GPS and 4G positioning through the Mammotion app, as long as it is online.
- Additionally, Yuka's structure allows for an AirTag to be attached to track its location.

2.2 In the Box

Ensure the parts can be found in the package according to your order. If any parts are missing or damaged, contact your local dealer or our after-sales support. Mammotion recommends you keep the package box and foam inserts for future use.


2.2.1 Yuka Installation Kit

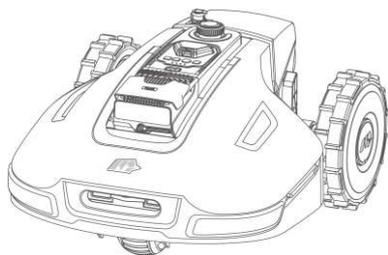

Yuka x1



Security Key x1 (for spare use)

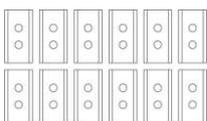


Replacement Blade x12 (for spare use)



Screw x12 (for spare use)


2.2.2 Charging Station Installation Kit

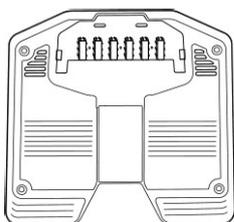

Charging Base Plate x1




Charging Tower x1

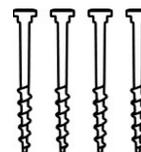

Stake x4




Screw x4 (1pc for spare use)

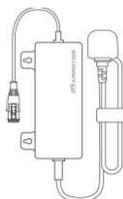

Charging Station Power Supply x1

2.2.3 RTK Installation Kit

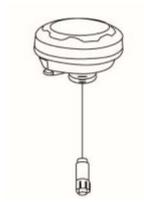

RTK Reference Station x1



Radio Antenna x1




Trident Ground Stake x1



Mounting Pole x2



**RTK Reference Station Extension
Cable (10M) x1**

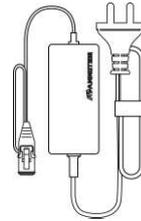


**RTK Reference Station Power
Supply x1**


2.2.4 Tool Kit




Allen Key 8mm x1

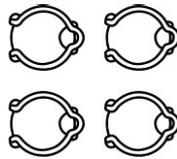

Cord Tie x4

 

Cable Peg x4

 

**Screwdriver (Phillips bit+2.5mm
hex bit) x1**



SIM-eject Tool x1




Allen Key 1.5mm x1

2.2.5 Other Accessories (Optional)

The following accessories are sold separately.

RTK Reference Station Wall Mount Kit


By using the wall mount kit, the RTK reference station can be securely installed on a wall, enhancing its satellite signal reception.

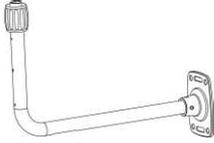

RTK Wall Mount x1




 M8x50 Expansion Bolt x4



Drilling Template x1

Self-emptying Lawn Sweeper Kit

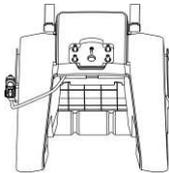

Sweeping Brush Module x1




Handle Module x1




Screw x6 (2pcs for spare use)




Hopper Cover x1

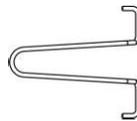


Hopper Handle x1

 

Hold-down Plate x2

 


Screw x8 (2pcs for spare use)

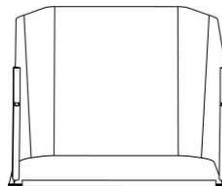

Hopper x1



 
U-shaped Supporting Rod x1



Screwdriver (Phillips bit+2.5mm hex bit)
x1




Battery x1

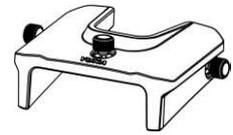


Counterweight Part x1


RTK Solar Panel Kit

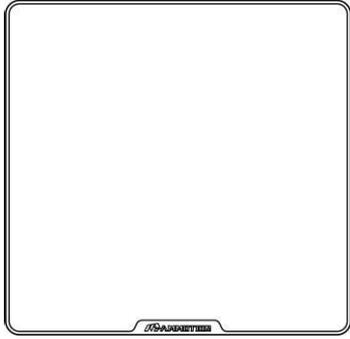


Solar Panel x1

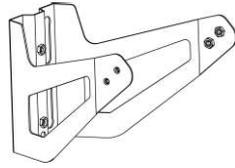

Mounting Bracket x1

 


Stake x4

 

Expansion Bolt x6
(2pcs for spare use)




Screw x6
(2pcs for spare use)

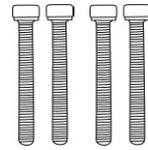

M5x40 Screw x4
(2pcs for spare use)



 Allen Key 1.5mm x1



Allen Key 4mm x1



Allen Key 8mm x1

2.3 Symbols on the Product

2.3.1 Symbols

These symbols can be found on the product. Study them carefully.


Symbol	Description
	Warning.
	Read user instructions before operating the product.
 TS-A081-2703002	Use a detachable supply unit TS-A081-2703002.
 TS-A012-1201002	Use a detachable supply unit TS-A012-1201002.
	This product complies with the applicable EU Directives.
Made in China	This product is manufactured in China.
	It is not permitted to dispose of this product as normal household waste. Ensure that the product is recycled in accordance with local legal requirements.
	This item can be recycled.
	Keep the pack of this product dry.
	The pack of this product should not be covered.
	Prohibit flipping.

Symbol	Description
	This product is fragile.
	The pack of this product/the product should not be tread.
	Class III appliance.
	Keep hands or feet away from movable blades.
	Do not ride on the product.
	Keep a safe distance from your product when operating.
	WARNING: Do not touch rotating blade.
	WARNING: Read the user instructions before operating the product.
	WARNING: Danger of projections of objects against the body. Keep an adequate safe distance from the machine while it is running.
	WARNING: Do not put hands and feet near or under the opening of the cutting means. Remove the disabling device before operating on the machine or before lifting it.

Symbol	Description
	<p>WARNING: Do not ride on the product. Never put your hands or feet close to or under the product.</p>


2.4 Product Overview

2.4.1 Yuka

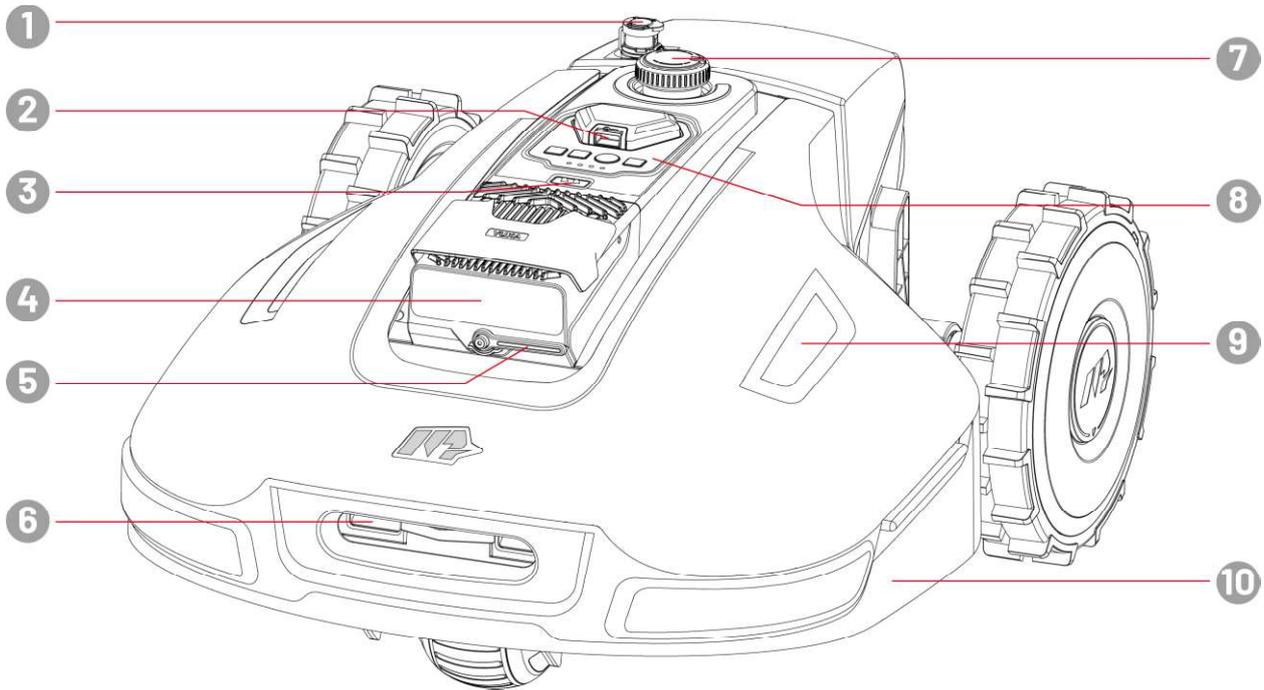

- | | |
|---|--------------------|
| 1. Port for Sweeper Kit | 2. Security Key |
| 3. Rain Sensor | 4. Vision Module |
| 5. Vision Module Wiper | 6. Charging Pad |
| 7. Cutting Height Adjustment Button — press and turn to adjust cutting height | 8. Control Center |
| 9. Side LED | 10. U-shape Bumper |

Control Center

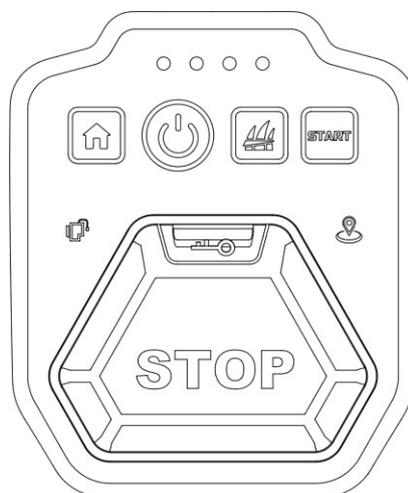

Button/Icon	Description	Description
	Home Button	<ul style="list-style-type: none"> ● Press , then press  to return to the charging station. ● Press , then press  to continue working/unlock the robot.
	Grass Button	
	Start Button	
	Power Button	Long press the button  to turn on/off the robot.
	Emergency Stop Button	If any unexpected problems arise, press the button to stop the robot immediately.
	Positioning Indicator	Indicates the positioning status. See LED Indicator Codes for more information.
	Sweeper Kit Indicator	Indicates the connection status of the sweeper kit.
	Battery Indicator	Indicates the robot's battery.

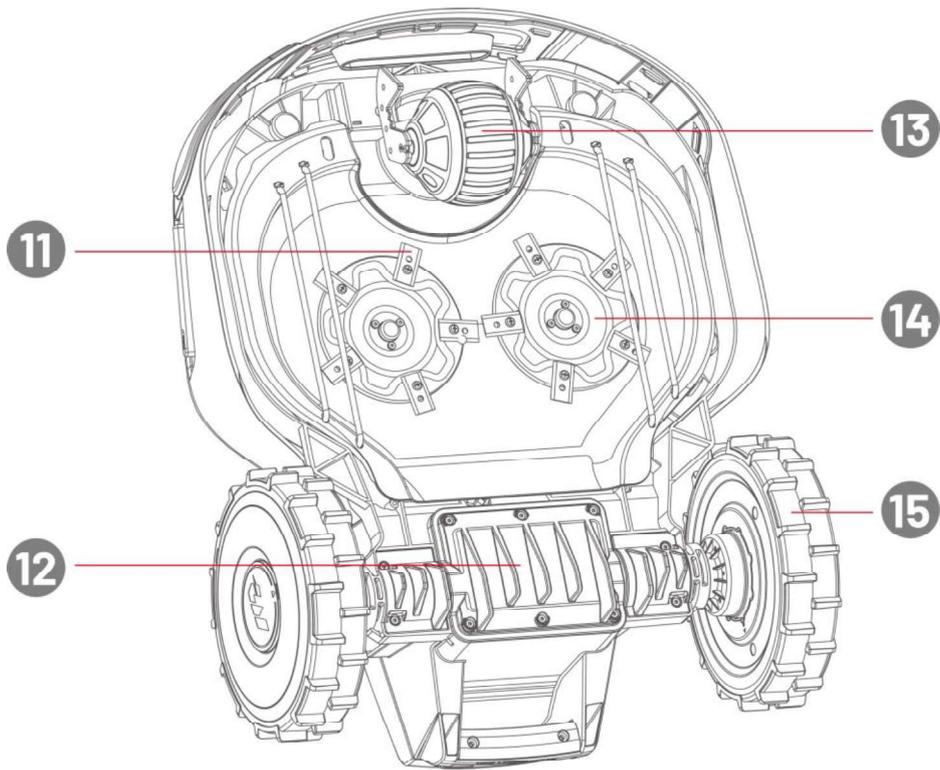


Figure 2-1 Bottom View of Yuka

11. Cutting Blade


13. Omni Wheel

15. Rear Wheel

12. Battery Compartment

14. Cutting Disc

2.4.2 Charging Station and RTK Reference Station

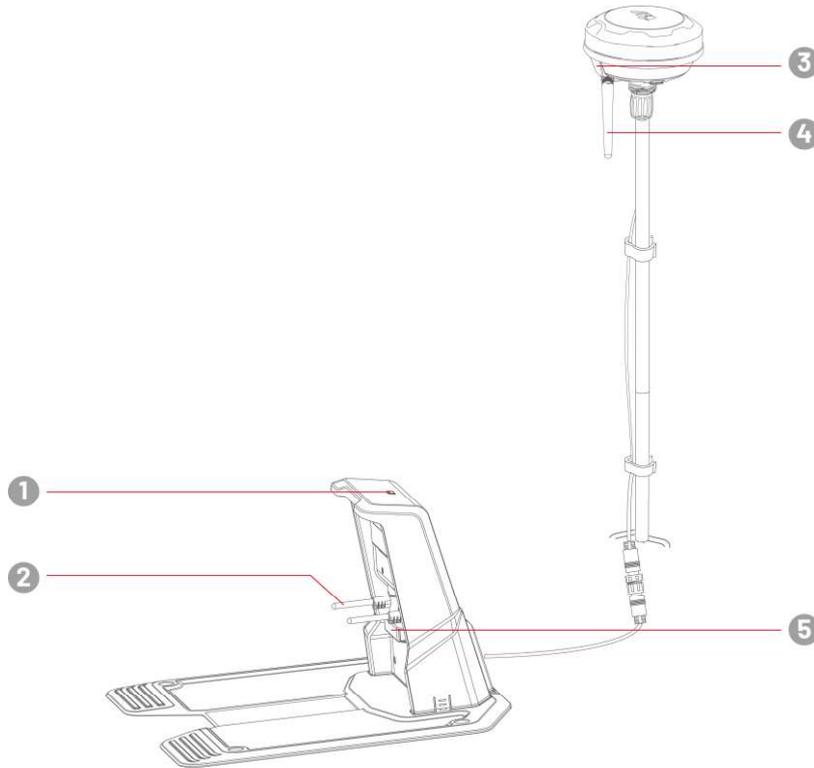

- | | |
|---|-------------------------|
| 1. Charging Station LED Indicator | 2. Charging Pin |
| 3. RTK Reference Station LED Indicator | 4. Radio Antenna |
| 5. Infrared Transmitter | |

2.4.3 LED Indicator Codes

Yuka

Indicator	Color	Description
Side LED	Constant green	<ul style="list-style-type: none"> ● System initialization ● Manual control mode ● Automatic work mode ● Charging finished (Yuka still on the charging station)
	Breathing green	<ul style="list-style-type: none"> ● OTA upgrade in progress
	Slow flash green	<ul style="list-style-type: none"> ● Charging in progress
	Slow flash red	<ul style="list-style-type: none"> ● Emergency stop activated
	Fast flash red	<ul style="list-style-type: none"> ● Low battery ● Bumper triggered ● Yuka got stuck ● RTK positioning failed ● Yuka has been lifted/tilted/flipped over
	Very fast flash red	<ul style="list-style-type: none"> ● System upgrade failed ● Systematic error
	Off	<ul style="list-style-type: none"> ● Pause ● Standby ● Sleeping
Positioning Indicator	Constant green	RTK positioning is working well.
	Flash green	The RTK positioning has failed, but the vision positioning is working well.
	Constant red	Both RTK and vision positioning have failed.
	Flash blue	Yuka's firmware is being upgrading.
	Constant blue	Yuka powered on successfully.

Charging Station

Color	Description
Flash green	Yuka is being charged.
Constant green	Yuka is fully charged or uncharged.
Constant red	An error has occurred.

RTK Reference Station

Color	Description
Flash blue	The reference station is powering on.
Flash green	The reference station is initializing.
Constant green	The initialization is finished and the reference station works well.
Off	The initialization is finished and the local time is between 18:00 and 8:00.
Constant red	An error has occurred.
Slow flash green	Low power consumption.


3 Installation

3.1 Preparation

- Read and understand the safety instructions prior to installation.
- Use original parts and installation materials.
- Sketch your lawn and mark up obstacles. This will make it easier to examine where to place the charging station and RTK reference station, and to set the virtual boundaries.

3.2 Choosing a Location for RTK Reference Station

To optimize the performance of the RTK system, the RTK reference station must be in an open area to receive satellite signals. You can install the RTK reference station on flat, open ground or on an unobstructed wall or roof. In general, if your lawn is L-shaped, you can place the RTK reference station on a wall or roof or on the ground; if your lawn is O-shaped or U-shaped, or if you have multiple lawns, we recommend that you place the RTK reference station on a wall or roof.



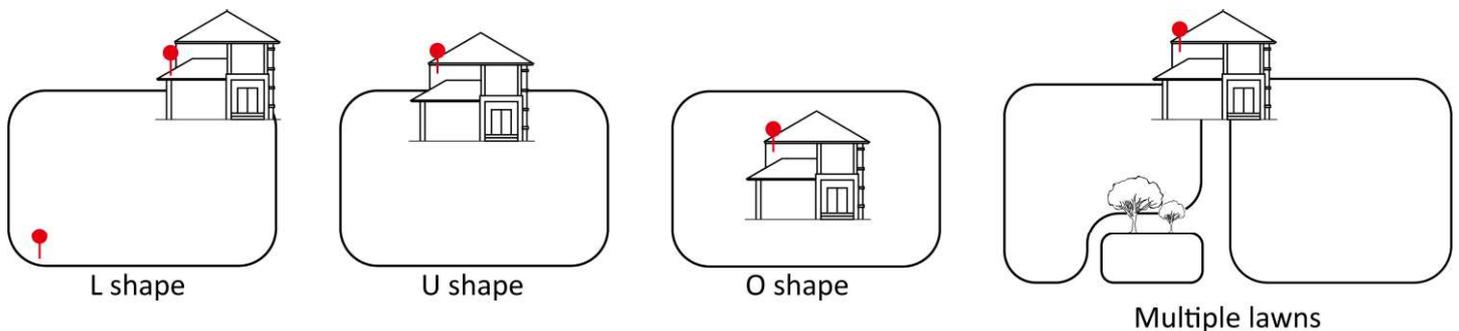


The location requirements are as follows:

- The RTK reference station should be oriented vertically, as shown below:




- Place the RTK reference station on a flat, open ground or on an unobstructed wall or roof. Make sure there are no roofs or trees that may obstruct the satellite signals.
- DO NOT install the RTK reference station at the corner of an L-shaped building or on a narrow path between two structures or under a tree.

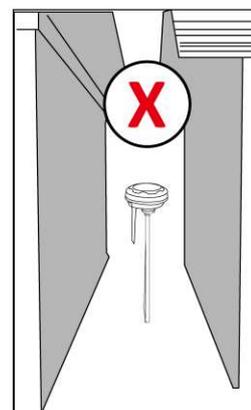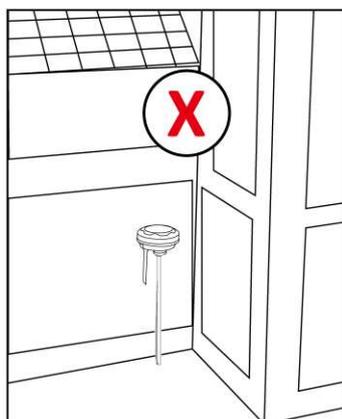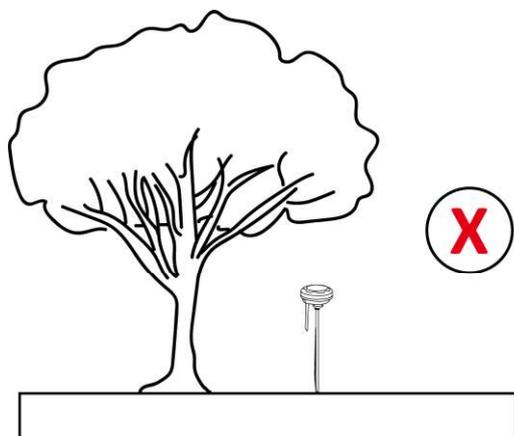

3.3 Choosing a Location for Charging Station

- Place the charging station on a flat ground.
- The charging area (1x1 m/3x3 ft. in front of the charging station) should be free from significant bumps. The slope must be less than 5°.
- DO NOT install the charging station at the corner of an L-shaped building or on a narrow path between two structures.
- No obstacles or other items should be between the charging station and the docking point.
- The base plate of the charging station must not be bent or tilted.

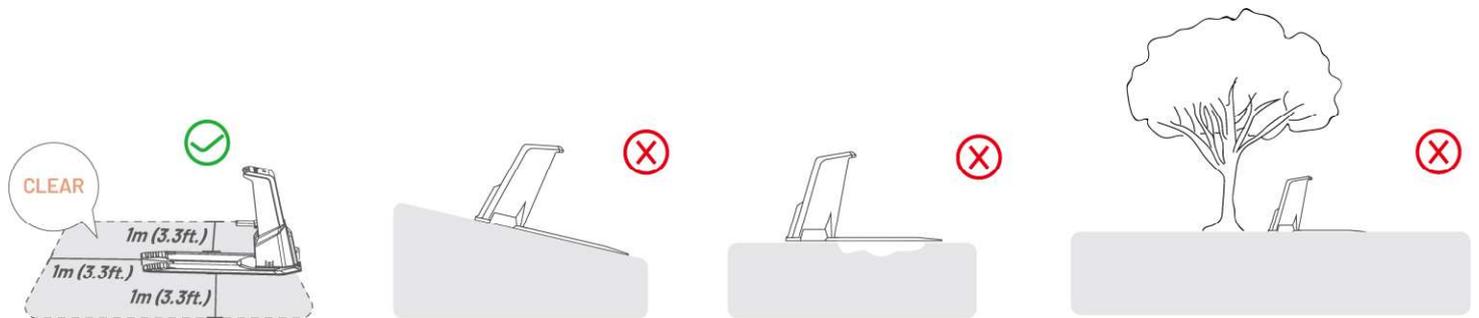

3.4 Installing

Before installing, remove the packaging foam from the bottom of the Yuka as shown in the label.





3.4.1 Yuka Assembly


IMPORTANT

Activate the SIM card on your phone before installation.


1. Press and hold the buttons on the Omni wheel to remove it.
2. Use the screwdriver with 2.5mm hex bit to detach the cover.
3. Eject the SIM card tray using the SIM-eject tool, install the SIM card, and push the card tray into place.

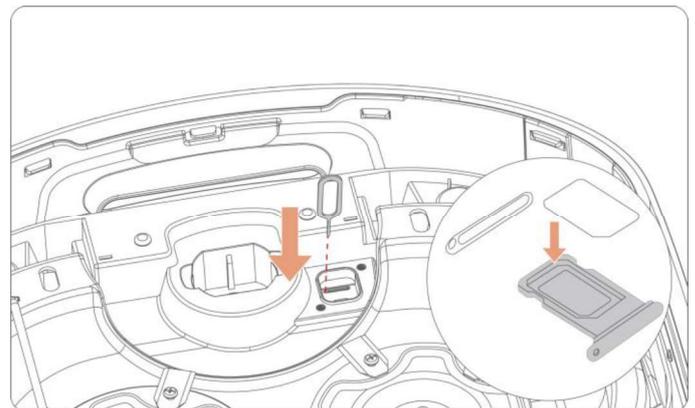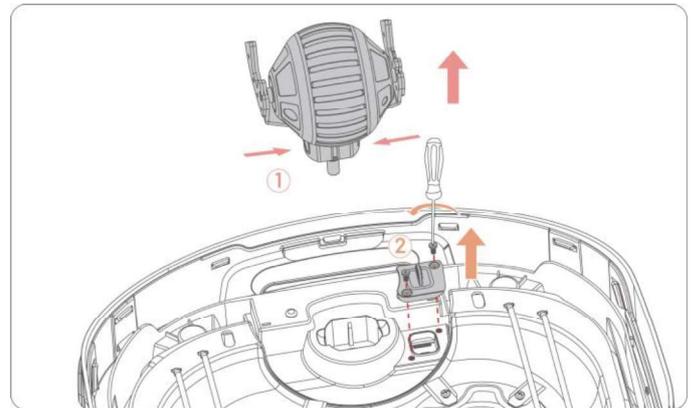

4. Reinstall the cover securely.

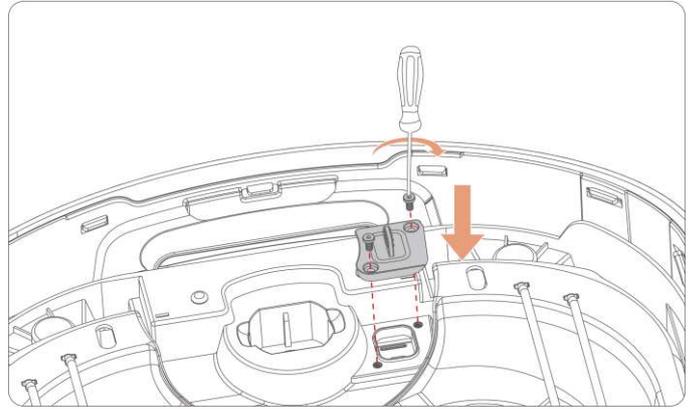


5. Reinstall the Omni wheel until you hear a CLICK sound.

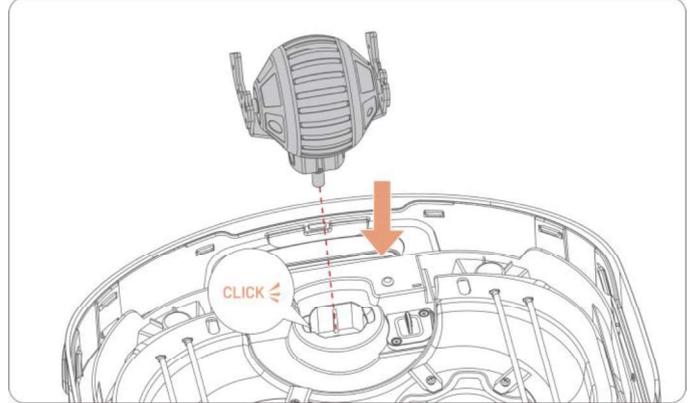


3.4.2 Installing the Charging Station


1. Insert the charging tower into the charging base plate until you hear a CLICK sound.

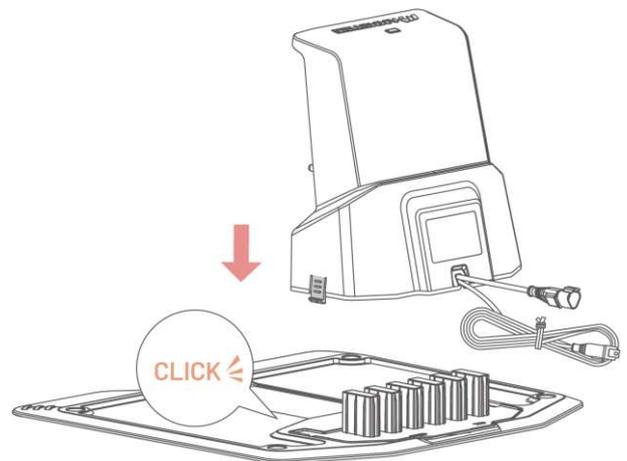


2. Install and tighten the three screws from the bottom of the charging base plate using the screwdriver with the 2.5mm hex bit.

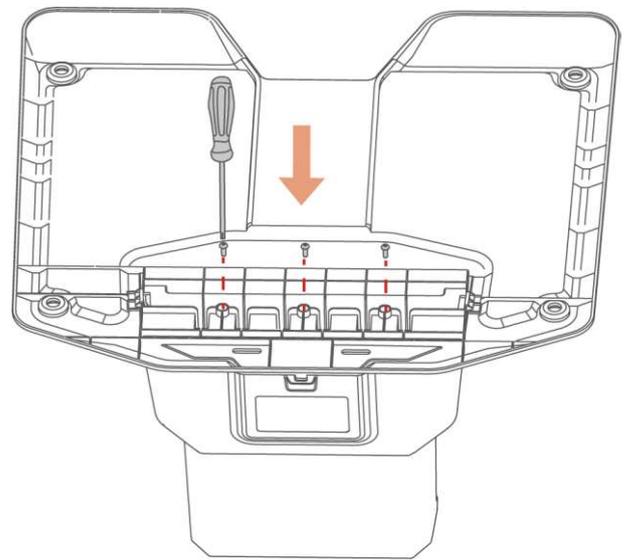

3. Select an open spot to install the charging station.
4. Use the four stakes to properly fasten the charging station in the position as shown.

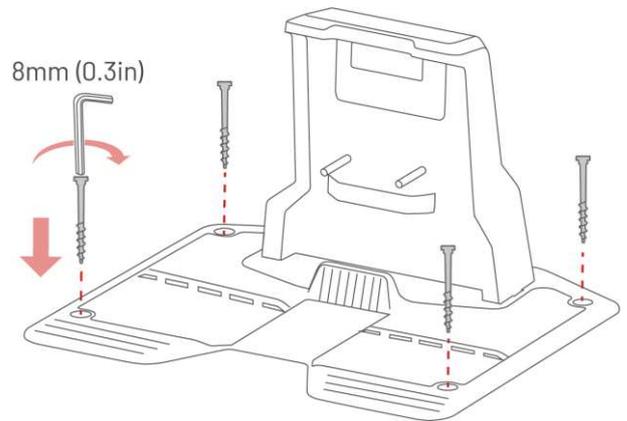


5. Connect the charging station cable (the longer one) with the power supply.
6. Use the cable peg to fix the cable on the ground.

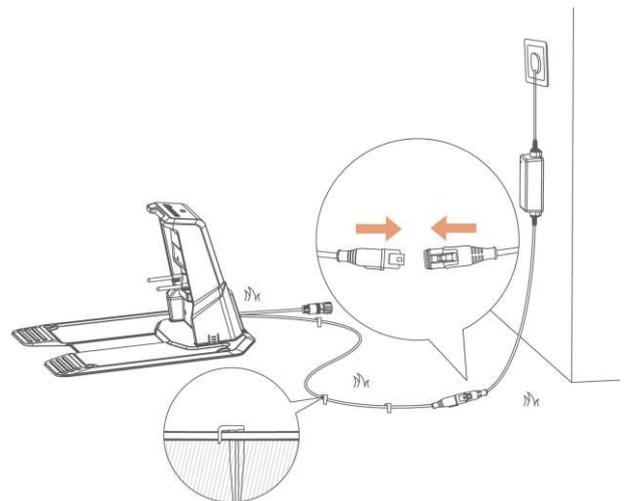


3.4.3 Installing the RTK Reference Station


1. Assemble the two mounting poles and the trident ground stake.

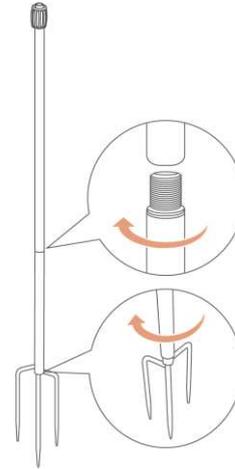


2. Fix the radio antenna to the RTK reference station.

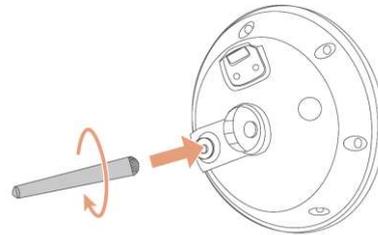

3. Route the RTK reference station cable into the mounting pole as shown.
4. Mount the RTK reference station on the mounting pole.

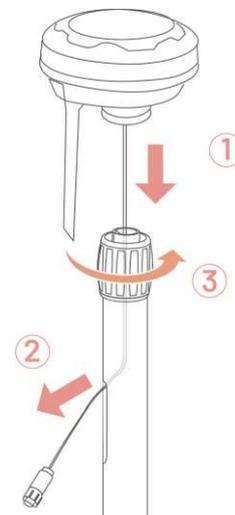


5. Thrust the mounting pole into the ground close to the charging station.

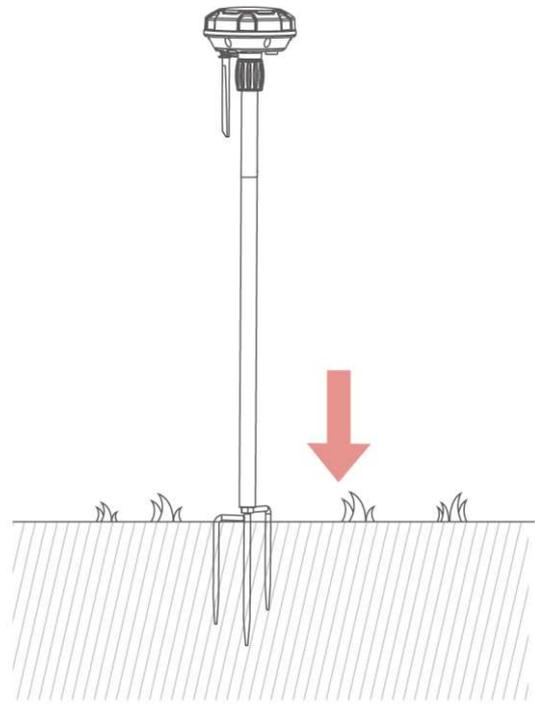


6. Connect the RTK reference station cable with the charging station cable (the shorter one).

7. Use the cord tie to fix the cable on the mounting pole.

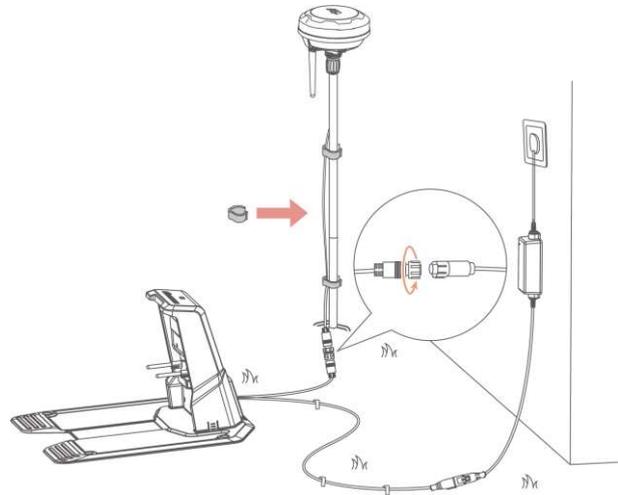

8. Plug the charging station power supply into the wall socket.

9. Move the robot onto the charging station for charging.

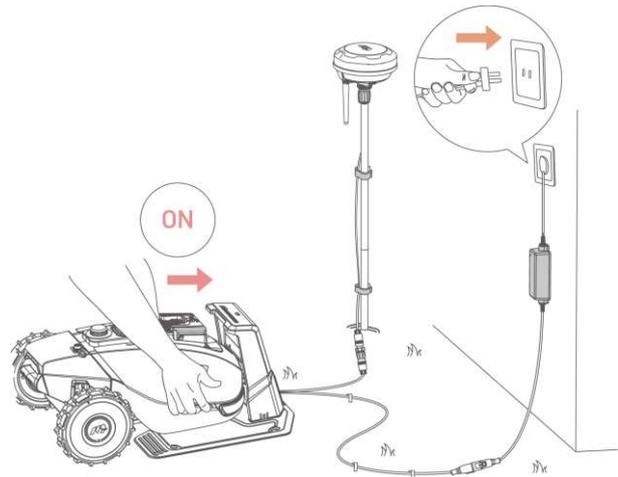


NOTE: Charge the robot for initial use.


3.4.4 Installing the RTK Reference Station Wall Mount Kit (Optional)

Skip the section 3.4.3 if you have ordered the RTK reference station wall mount kit.


1. Choose a suitable installation area at a high place of your house.
2. Stick the drilling template on the wall and drill four holes (10 x 40mm/0.4 x 1.6 in) at the appropriate position.

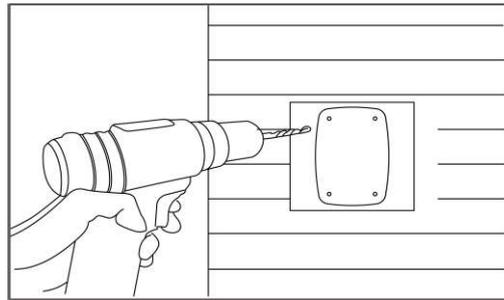


3. Attach the RTK wall mount on the wall using the four bolts (M8 x 50) and secure the bolts firmly.

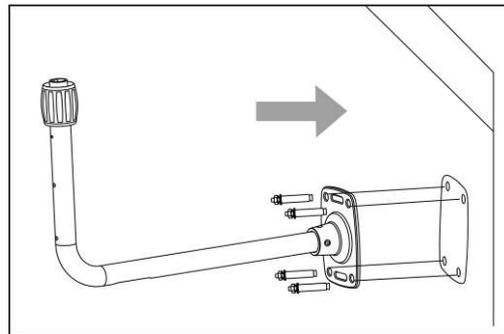


4. Fix the radio antenna to the RTK reference station.
5. Route the RTK reference station cable into the wall mount as shown.
6. Attach the RTK reference station to the wall mount.

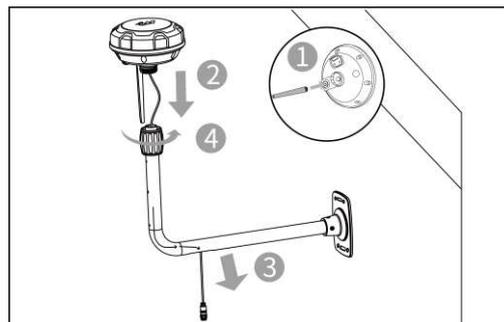

7. Connect the RTK reference station plug to the RTK reference station extension cable (10 m/33 ft.).

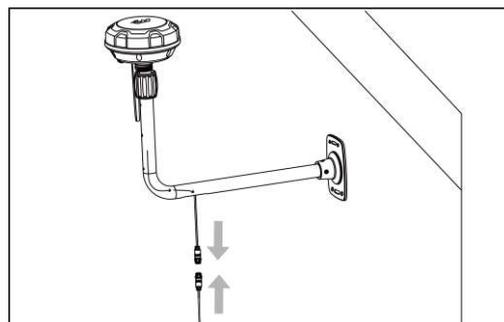


8. Connect the RTK reference station cable (10 m/33 ft.) to the RTK reference station power supply.
9. Plug the power supply into a wall socket.

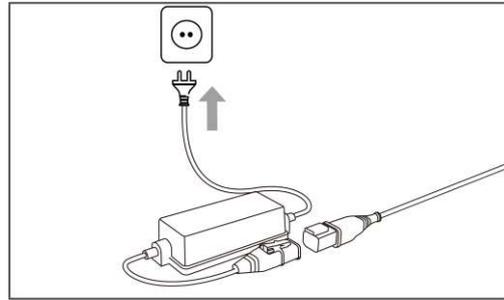


3.4.5 Installing the Self-emptying Lawn Sweeper Kit (Optional)

Please follow the instructions below to install the self-emptying lawn sweeper kit if any.


1. Use the screwdriver with the 2.5mm hex bit to loosen the 6 screws to detach the battery cover at the bottom of Yuka.

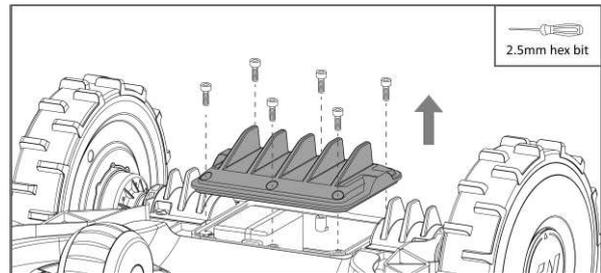


2. Connect the battery wires and use the two screws to secure the battery. Tighten the screws using the screwdriver with the 2.5mm hex bit.

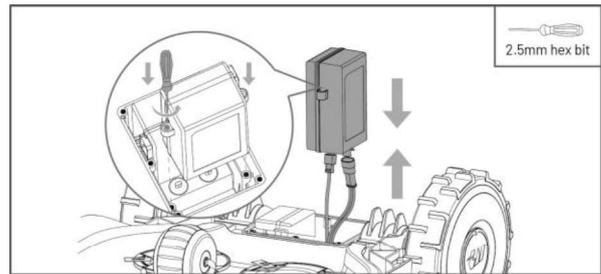


3. Reinstall the battery cover.

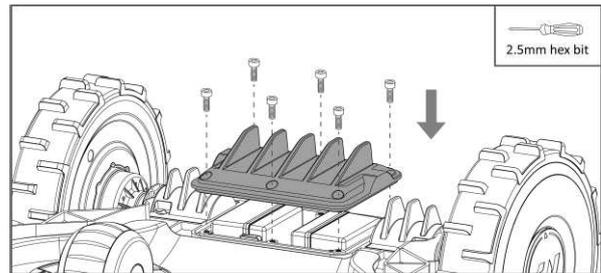


4. Install the handle module on top of the sweeping brush module and tighten the 4 screws using the screwdriver with the 2.5mm hex bit.

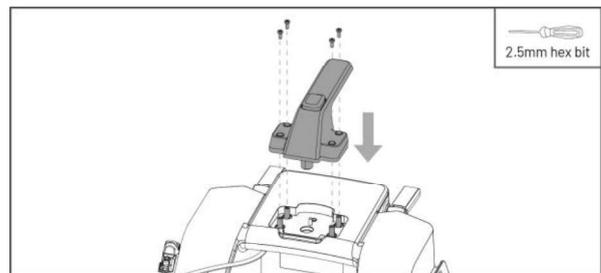


5. Mount the hopper handle as indicated in the provided picture.

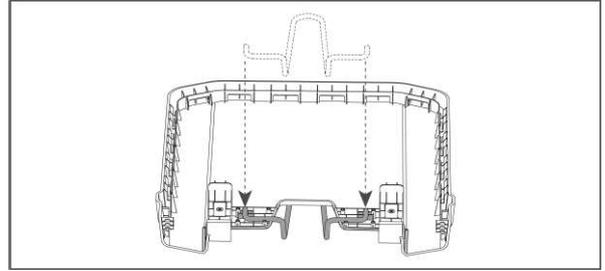


6. Attach the two hold-down plates to secure the hopper handle in place. Tighten the 8 screws using the screwdriver with the 2.5mm hex bit. Note that the torque should not be over 5 N·m.

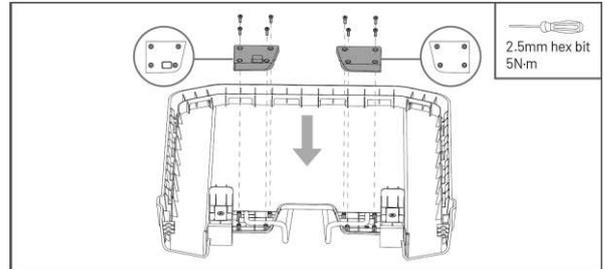


7. Embed the hopper into the hopper cover securely and gently pull both ends to adjust alignment.

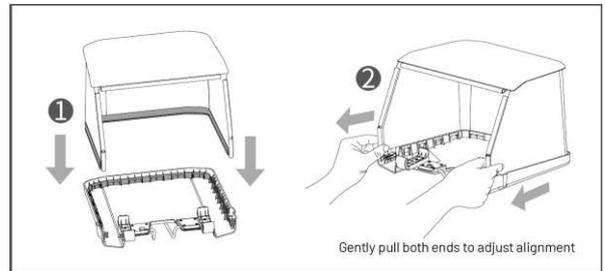


8. Insert the U-shaped supporting rod into the hopper.

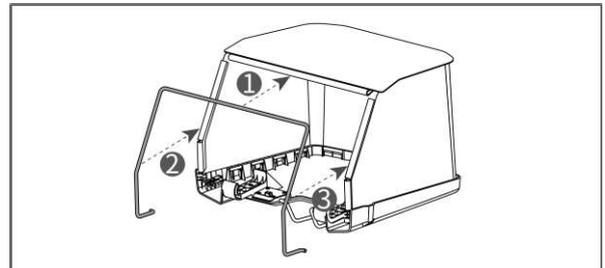


9. Securely insert both ends of the U-shaped support rod into their designated positions.

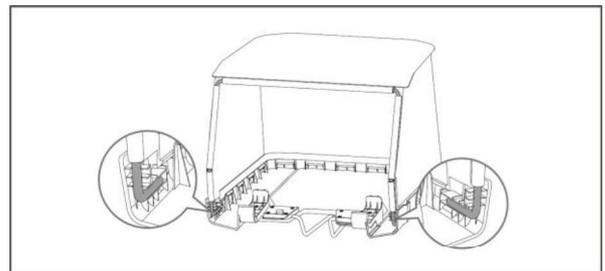


- 10.** Assemble the sweeping brush module with the hopper module.

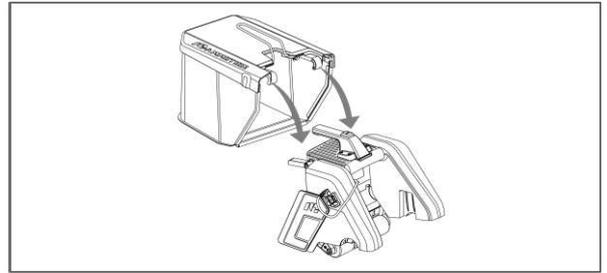


- 11.** Insert the protrusion on the lawn sweeper into the slot on the rear of Yuka.

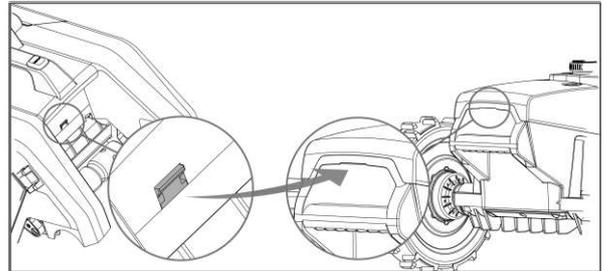


- 12.** Mount the sweeper onto Yuka.

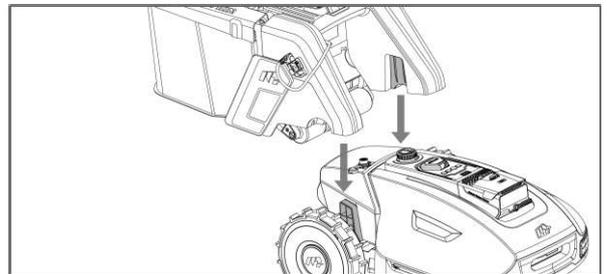


- 13.** Connect the sweeper plug to Yuka.

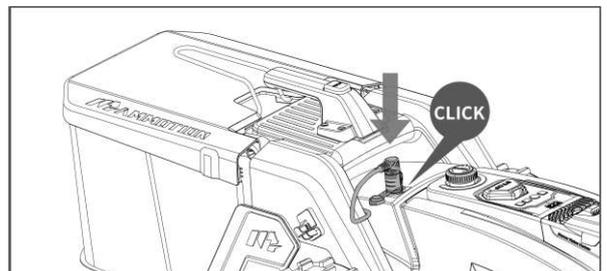


- 14.** Use a tool to detach the vision module cover carefully.

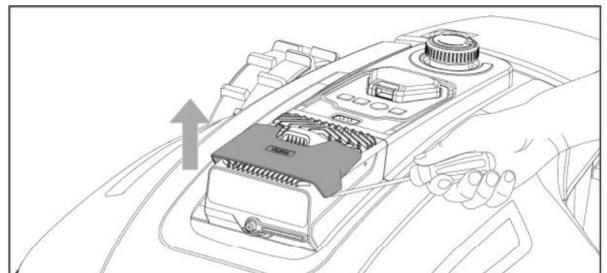

15. Attach the counterweight part onto the vision module.

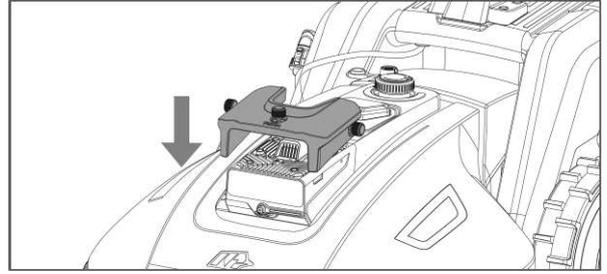


16. Tighten the screws securely.

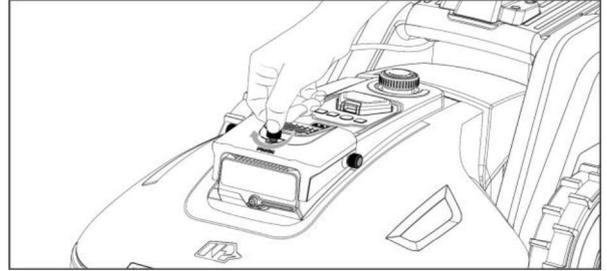

To Uninstall the Lawn Sweeper Kit

1. Disconnect the plug from Yuka.
2. Press the button and lift the handle to detach the lawn sweeper kit.

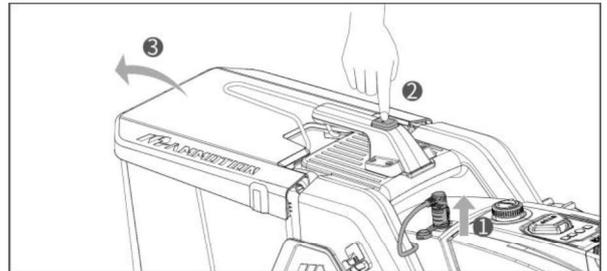


3.4.6 Installing the RTK Solar Panel Kit (Optional)

NOTE


There are three options to install the RTK solar panel kit. Please decide the optimal one to continue.

Before installing, expand the bracket outward to properly accommodate the solar panel.

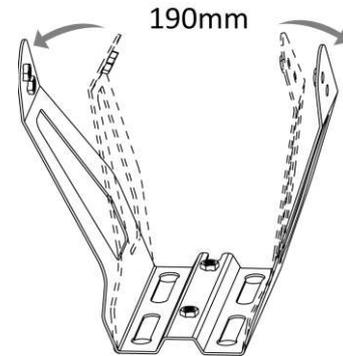


Option 1: Install the RTK Solar Panel Kit on a Wall


1. Place the mounting bracket on the wall and mark four holes with a pencil, ensuring the distance is within the cable's reach.

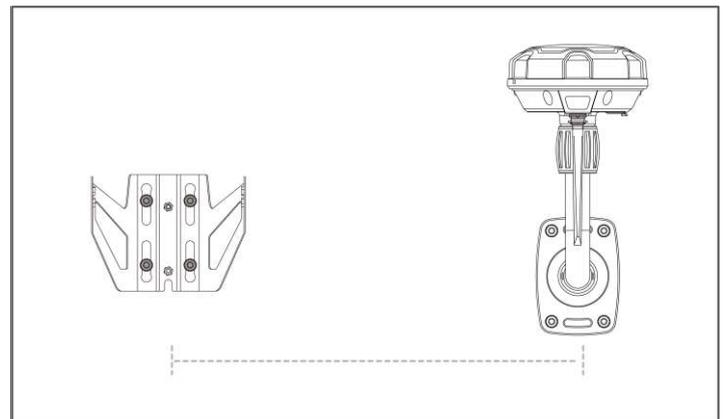


2. Drill 10mm/0.4 in. diameter, 35mm/1.4 in. depth holes.

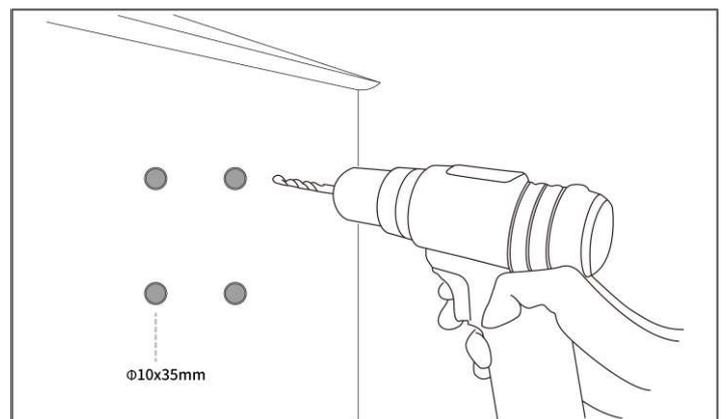

- 3.** Tap the expansion bolts into the holes and remove the nuts, spring, and flat washers when the expansion bolts are stuck.

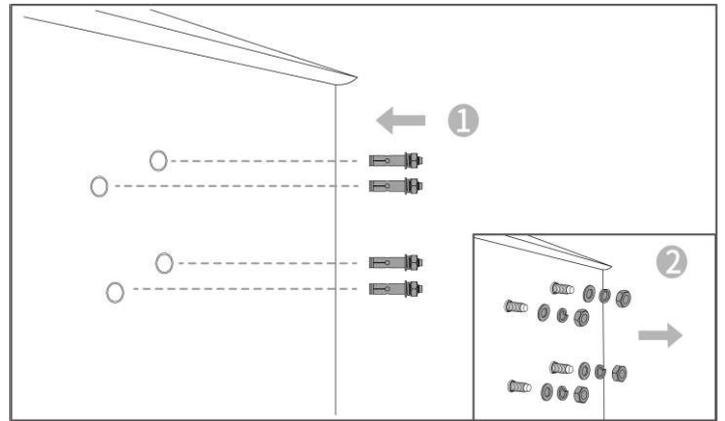


- 4.** Attach the bracket to the wall without reversing it. Reinsert washers, spring washers, nuts, and tighten with a 13mm/0.5 in. socket wrench.

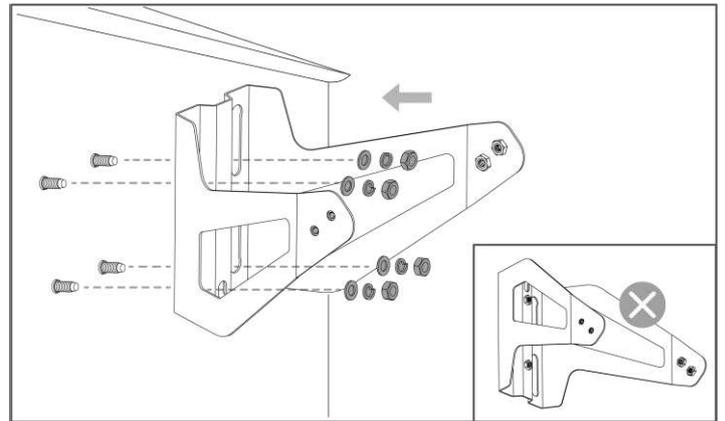


- 5.** Secure the solar panel to the bracket with four screws and tighten using a 4mm/1.5 in. Allen key.

- 6.** Adjust the angle by shifting the screw to another hole if needed.

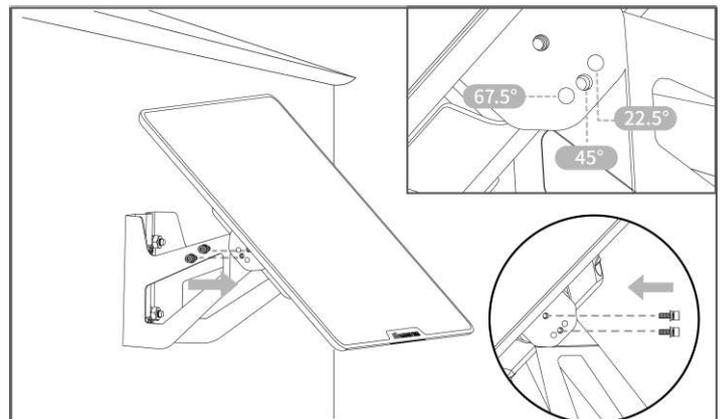


- 7.** Connect the solar panel cable to the RTK reference station cable.

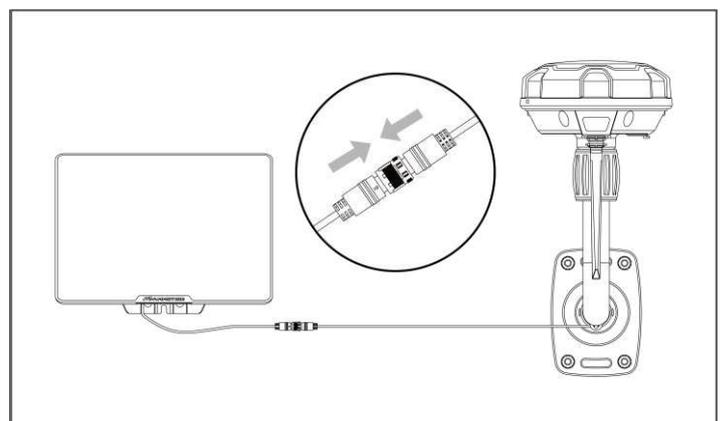


Option 2: Install the RTK Solar Panel Kit on a Flat Ground/Roof


1. Reverse and place the mounting bracket on the surface, secure with stakes or expansion bolts, ensuring the distance is within the cable's reach.

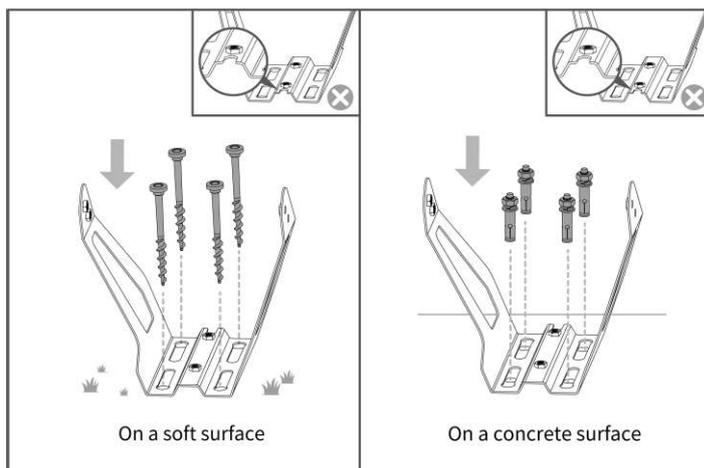

2. Secure the solar panel to the bracket with four screws and tighten using a 4mm/1.5 in. Allen key.
3. Adjust the angle by shifting the screw to another hole if needed.

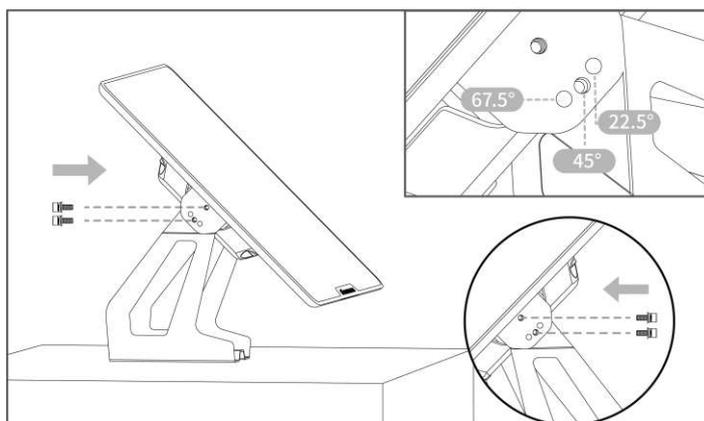


4. Connect the solar panel cable to the RTK reference station cable.

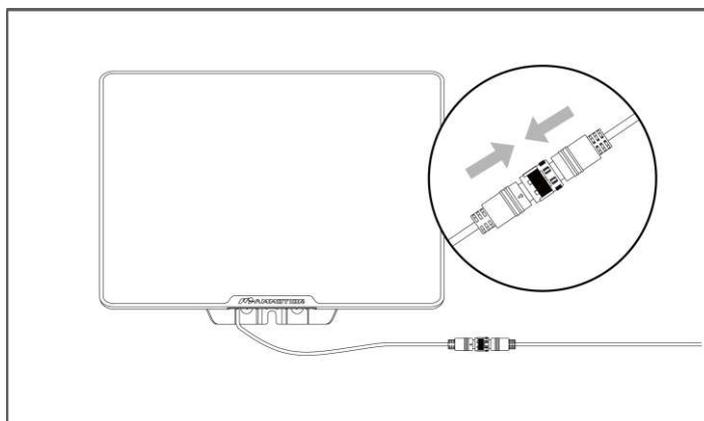


Option 3: Install the RTK Solar Panel Kit on an RTK Wall Mount (sold separately)


1. Mount the bracket onto the RTK wall mount with two screws (M5x40). Tighten the screws using a 4mm/1.5 in. Allen key. Avoid reversing the mounting bracket during installation.

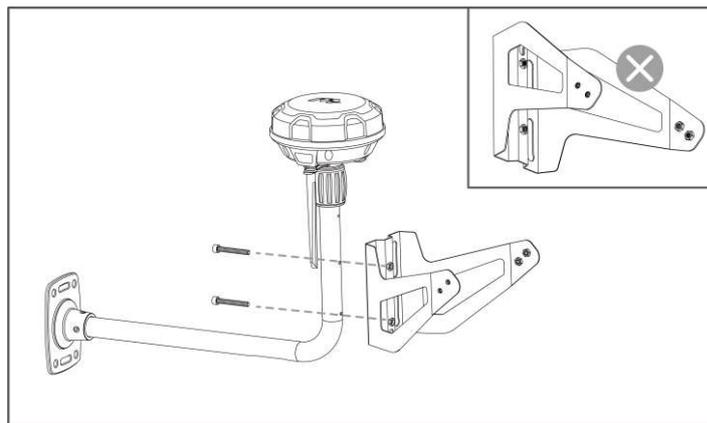

2. Secure the solar panel to the bracket with four screws and tighten using a 4mm/1.5 in. Allen key.
3. Adjust the angle by shifting the screw to another hole if needed.

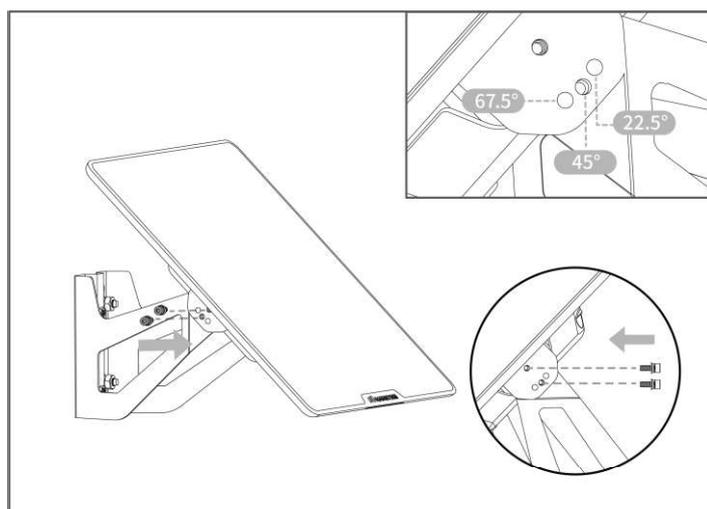

4. Connect the solar panel cable to the RTK reference station cable.

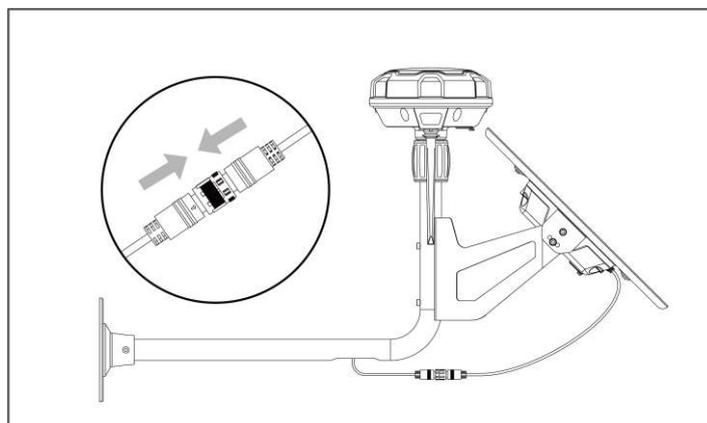

4 Operation

NOTE

The screens are only for reference. Please refer to the actual ones.

4.1 Preparation

4.1.1 Download Mammotion App

Yuka is designed to work with the Mammotion app, please download the free Mammotion app first. You can scan the QR code below to get it from the Android or Apple app stores, or search for Mammotion in these stores.



After installing the app, please sign up and log in. During use, the app may ask you for Bluetooth, Location, and local network access when necessary. For optimal use, it is recommended to allow the above access. For more information, please refer to our Privacy Agreement. Go to Mammotion app > **Me** > **About Mammotion** > **Privacy Agreement**.


If you want to log in with a third-party account, tap  or  on the login page to continue. Mammotion app now supports logging in with Google and Apple accounts.

4.1.2 Charge the Robot for the Initial Use

A new set of robot comes factory-set in 'transportation mode', please charge it for the first time.

1. Connect the charger of the charging station to the power supply; the LED should display a constant green light.
2. Place the robot on the charging station, ensuring the charging pad on the front is connected to the pin of the charging station, and the side LED lights up.
3. Continue charging the robot until the LED on the charging station flashes green and the side LED on the robot flashes green.

Once these steps are completed, the robot will be activated and ready for use.

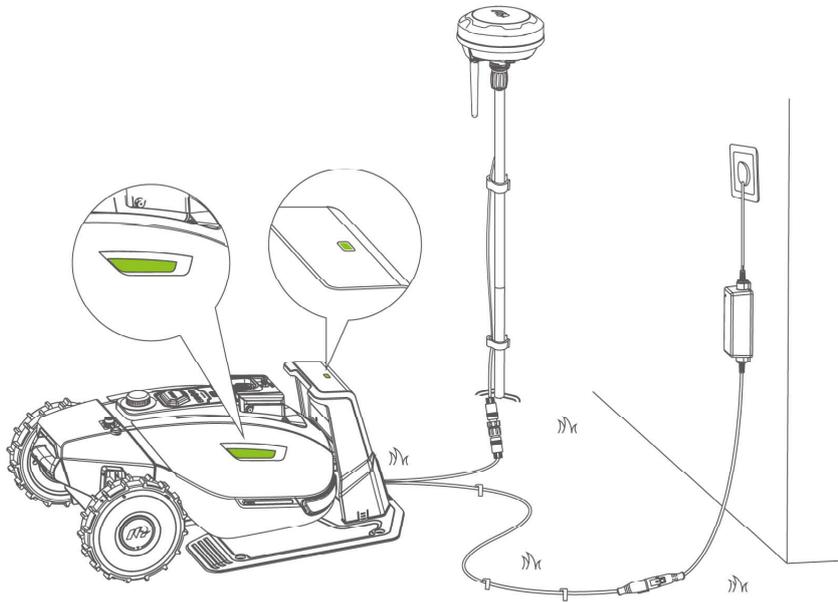


4.2 Add Your Product

NOTE

- Make sure the distance between your phone and the device is less than 3 m/10 ft.
- You can skip the Wi-Fi setup if you are using 4G cellular data. It is advisable to also establish a connection to a Wi-Fi network for optimal performance.

4.2.1 Add Devices

1. Tap **+** to add your robot or RTK reference station.
2. Select **Add**.
3. Follow the onscreen guidelines to set up the device.
4. Follow the onscreen instructions to connect the device and set network successfully.

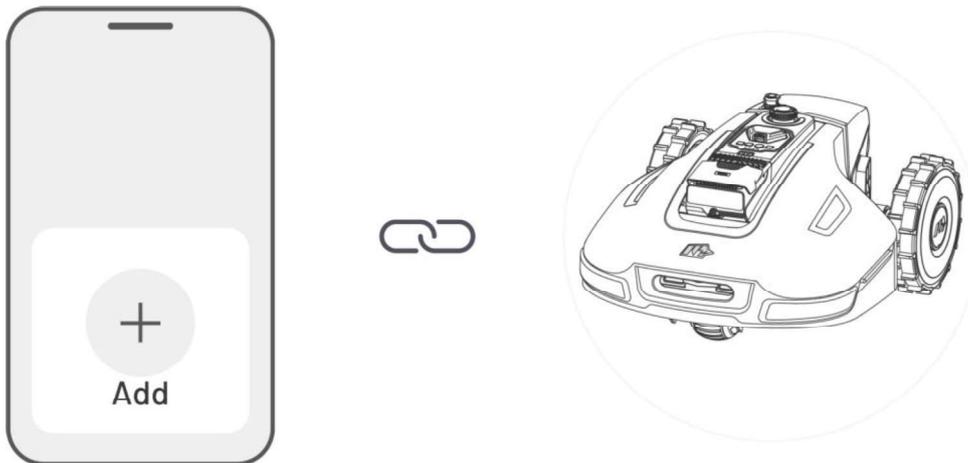


4.2.2 Update Firmware

For optimal experience, ensure your devices are updated to the latest firmware version.

➤ To update the firmware

1. Go to **Settings > Device information > Robot version** or **Settings > Robot version** to update the firmware.
2. Ensure the robot is connected to a stable network.

During the update, please avoid exiting the app, performing other operations, or turning off the robot.

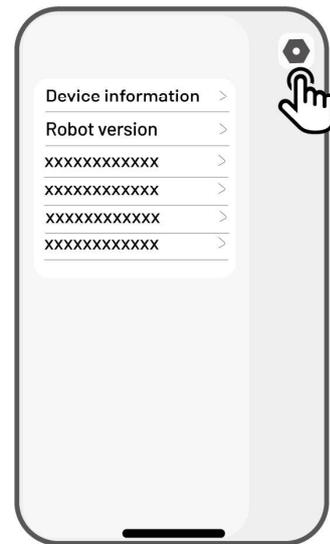


4.3 Create a Map

4.3.1 Map out the Task Area

Preparation

Before mapping, it is important to be aware of key considerations.


- Remove debris, piles of leaves, toys, wires, stones, and other obstacles from the lawn. Make sure no children or animals are on the lawn.

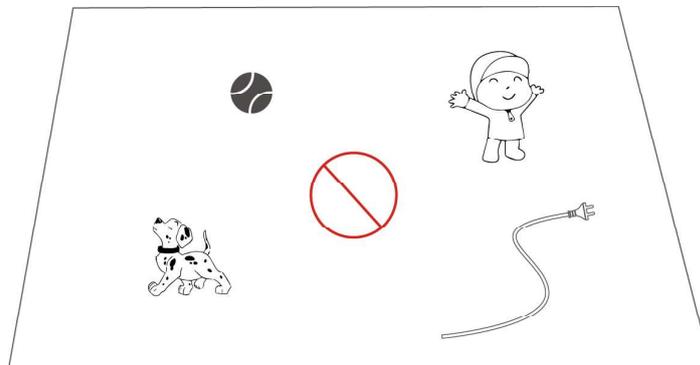


Map your Lawn

1. Make sure the robot is powered on and your phone Bluetooth is on. Your phone will connect to the robot automatically with a Bluetooth connection.


2. Tap **Create a Map** to start.

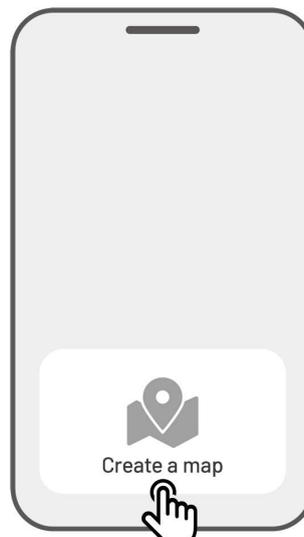


3. Control the robot to a proper starting point of the perimeter and tap ▶ to start mapping.

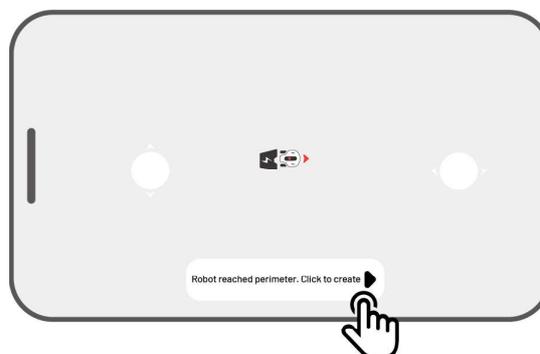


4. Guide the robot along the perimeter. Keep the controller within 3 meters (10 feet) of the robot to maintain a stable Bluetooth connection.

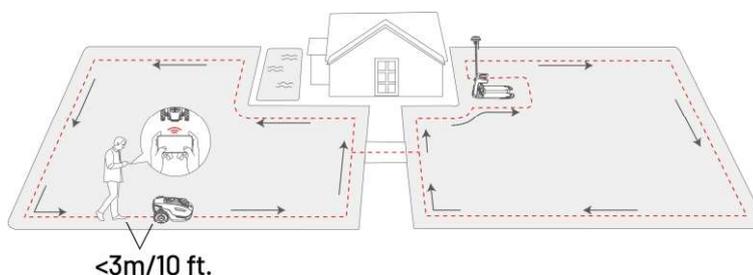

- a) If the perimeter meets an obstacle such as a wall, fence, ditch, or uneven pathway, maintain a distance of at least 15 cm (6 inches) from the perimeter while guiding the robot.

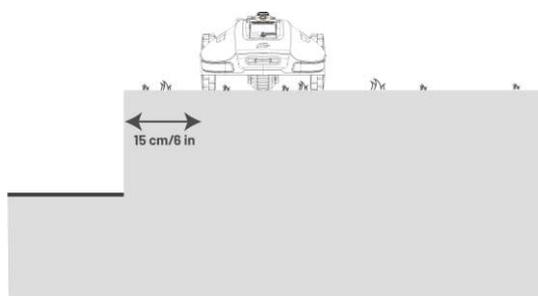


- b) If the perimeter meets a level, even pathway, it is recommended to guide the robot on the pathway for more efficient cutting.

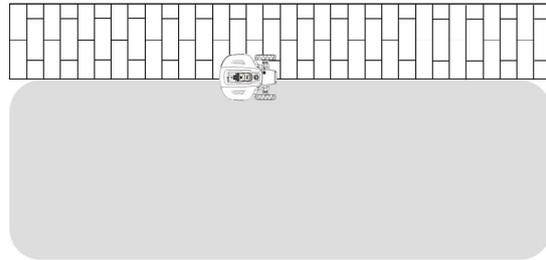

5. Control the robot back to the starting point and tap **Finish** to finish mapping.

- To modify the set perimeter, tap  and guide Yuka back along the path to the intended location.
- Tap  to delete all existing perimeters and remap if necessary.

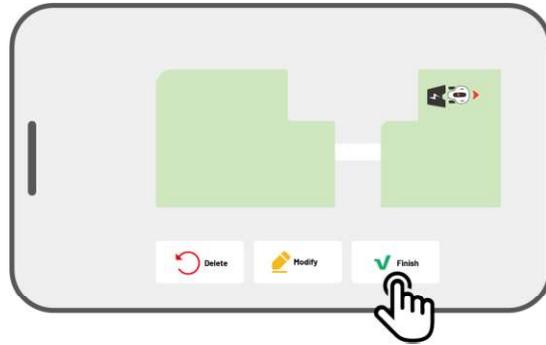


NOTE

- When mapping, the system will estimate the area. Please ensure that the area is not more than the upper limit (See **Technical Specifications** for more information), or the task area mapping will fail.
- Drive the robot out of the task area first if a new area is created.


4.3.2 Map out a No-go Zone

No-go zones are created for pools, flowerbeds, trees, roots, ditches, and any other obstructions present in the lawn. The robot will avoid mowing inside these designated areas.


1. Tap **Create > No-go zone** on the Map page.

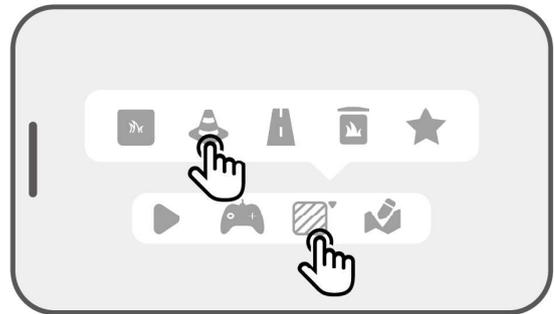


2. Guide the robot around the perimeter of a no-go zone, then tap  to start mapping.

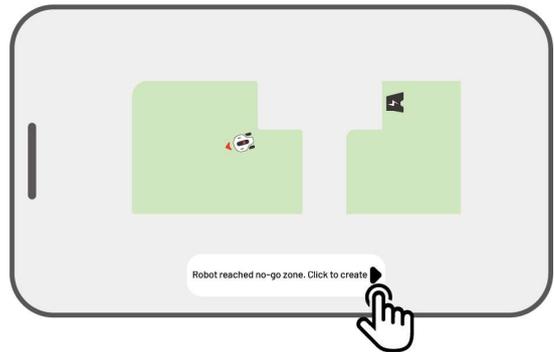

3. Control the robot along the perimeter of the no-go zone and back to the start point to complete mapping the no-go zone.

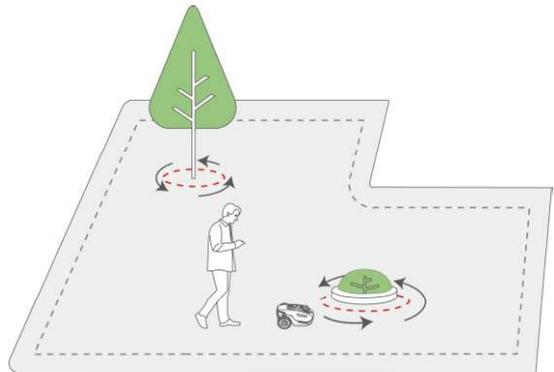


4. Tap **Finish** to save the setting.

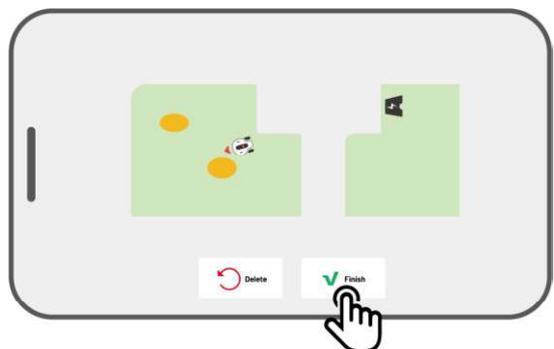


4.3.3 Map out a Channel

The channel is intended to connect various task areas or link the task area with the charging station.


1. Tap **Create > Channel** on the map page.

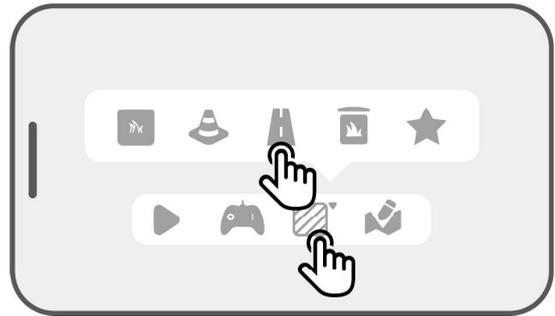

2. Control the robot into a task area. Tap  to start mapping.

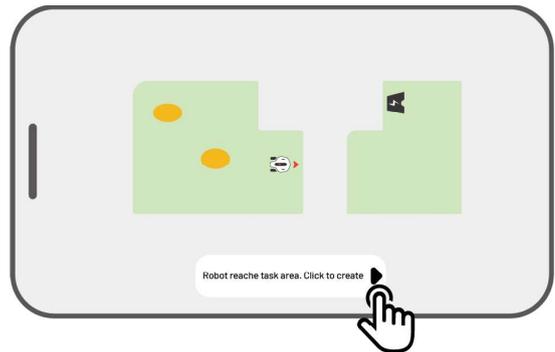


3. Manually control the robot from a task area to another task area or to the charging station.

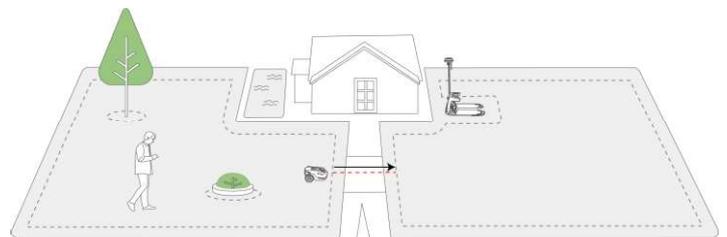


NOTE

- The channel should be wide enough to accommodate two robots side by side.
- The channel should be free from significant bumps.

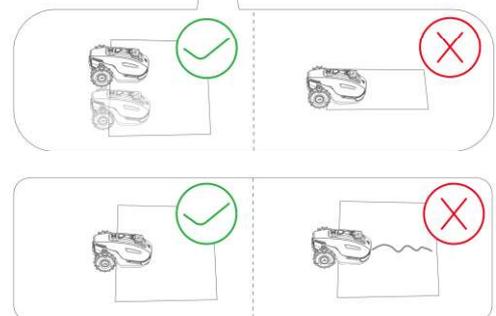

4. Tap **Finish** to save the setting.

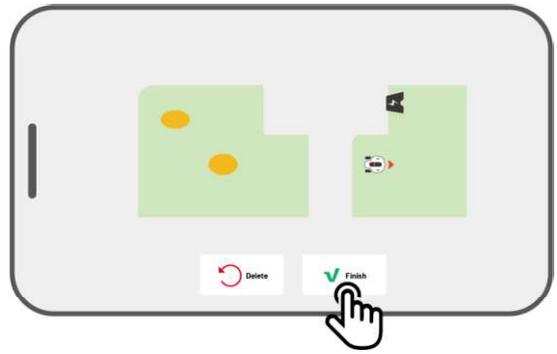


4.3.4 Mark a Dumping Spot (Optional)


After the self-emptying lawn sweeping kit is successfully installed, you are ready to set it up in the Mammotion app.

A dumping spot is where the robot sends collected grass clippings, leaves, and debris. Once a task area is created, you can define the dumping spot either inside or outside the task area.


1. Tap **Create > Dumping spot** on the Map page.

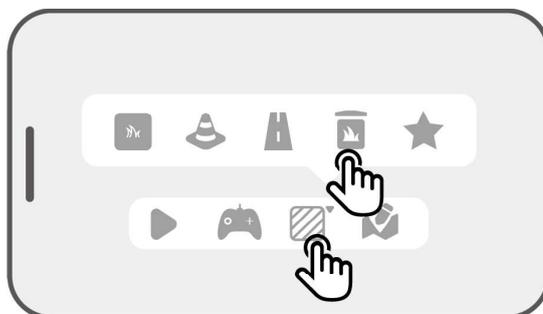

2. Control the robot into a task area or near a perimeter, then tap  to start.

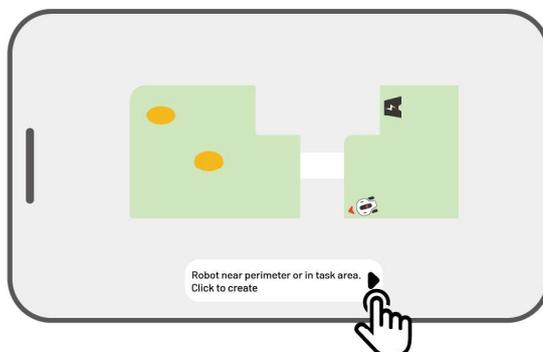


3. Manually drive the robot to the designated spot, then tap  to mark this spot as the dumping area. You can set multiple dumping spots.

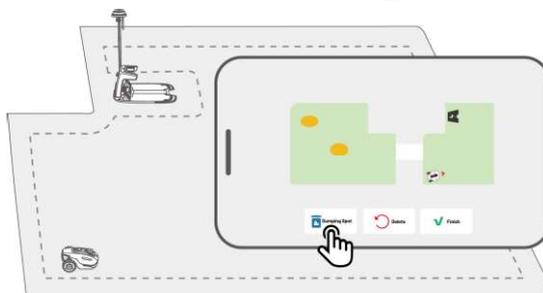

4. Tap **Finish** to save the setting.

5. Drive the robot back to the task area and tap **Finish** to finalize the mapping process if the dumping spot is located outside the task area.

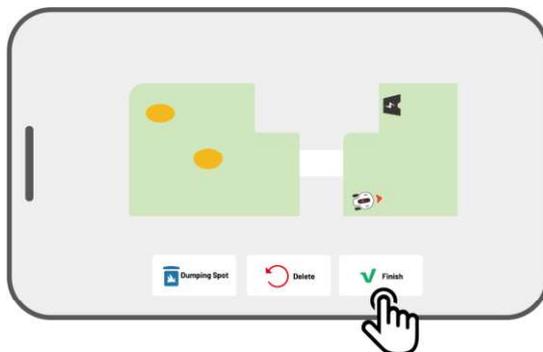


NOTE

- Ensure that there are no objects within a 2-meter diameter of the dumping spot.
- The distance between two dumping spots should not be less than 1 m (3 feet).
- If the dumping area is located outside the task area, a channel will be created automatically while manually driving Yuka back to the task area.

4.3.5 Create a Pattern

The pattern is designed to personalize your lawn-cutting experience, and after it's added, the grass on the patterned area will be preserved while cutting to maintain its design. See the available patterns in the app.


1. Tap **Create** > **Pattern** on the Map page.

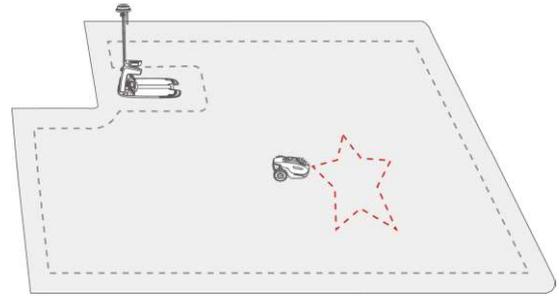



2. Choose the pattern that you want to create.



3. Drag and zoom in/out the pattern to adjust its location and size.

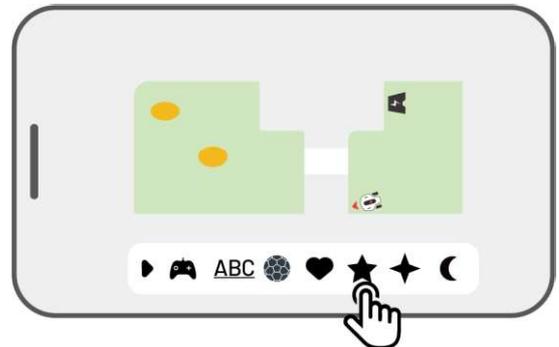

4. Tap **Finish** to finish the setup.

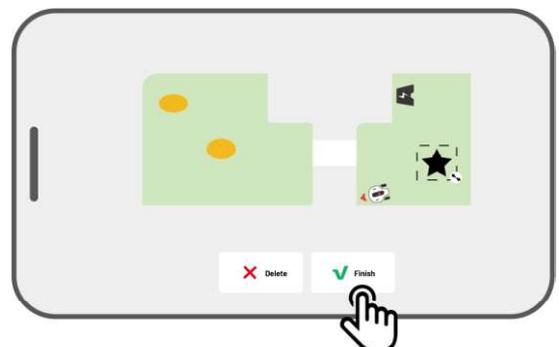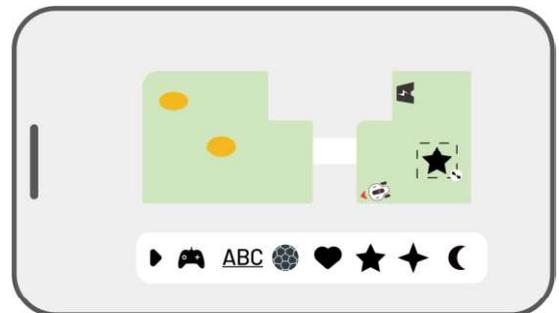

NOTE


- Each task area can have a maximum of 10 patterns, with a total limit of 50 patterns overall.
- The pattern should not be placed too close to the task area perimeter, no-go zone, dumping spot, or charging station. Maintain a minimum distance equal to the width of the robot.

4.3.6 Edit Your Map

Rename the area

Mammotion allows you to create multiple areas . For easy management, you can rename the area.


1. Tap **Edit** > ●●● to open the popup.
2. Tap **Rename** to set a name for the area.

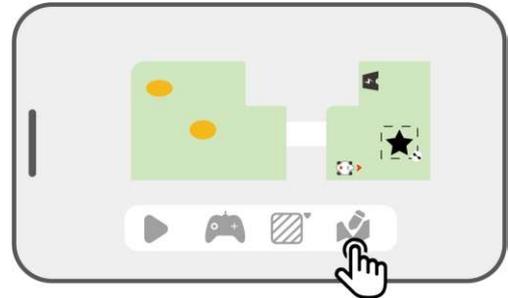

Modify the area


After mapping your lawn, there are some changes on your lawn, such as planting a tree at the perimeter of your lawn or existing a hole or the positioning signal is weak, you can modify the area without deleting it totally.

1. Tap **Edit** > ●●● to open the popup.
2. Tap **Modify** to re-draw the perimeter.

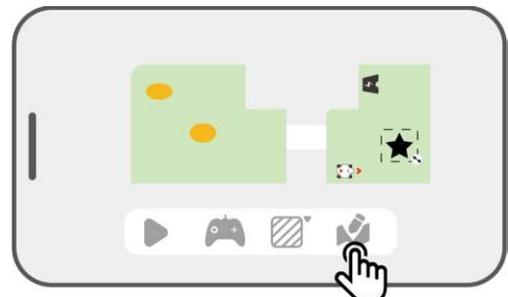

Delete the area/no-go zone/channel/dumping spot/pattern


Tap **Edit** > 🗑️ to delete the area, no-go zone, channel, dumping spot, and pattern. When you delete an area, the items inside will also be deleted.

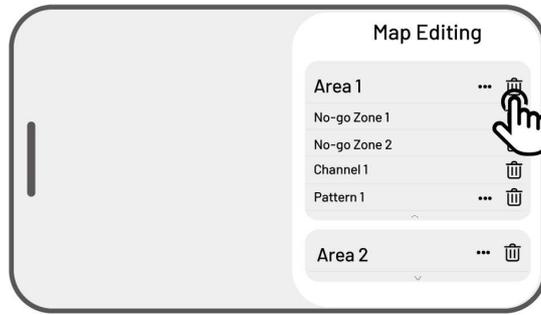

4.3.7 To Edit or Delete the Pattern

➤ To edit the pattern, tap **Edit** to enter the Map editing page.

- **Enable** – toggle the button on/off to enable/disable the pattern. After enabling the pattern, the grass on the patterned area will be preserved while mowing to maintain its design.

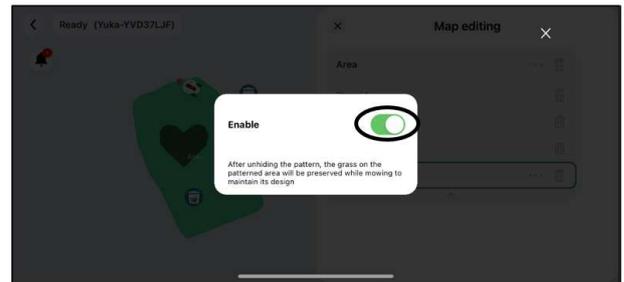

➤ To delete a pattern, tap **Edit > Delete**  to continue.




4.3.8 Multiple Task Areas with Overlapping

If you have several lawns that overlap, the shared section will be assigned to the task area that was created first. No channel is necessary for two task areas with overlapping sections.

4.3.9 RTK Reference Station Cannot Be Moved Once Your Lawn Mapping is Finished

Do not move the RTK reference station after the map is created or the resulting working area will diverge from the designated task area.

In the event of a RTK reference station relocation, please go to **Settings**  > **Robot settings** > **Delete map** to delete the current map, then remap.

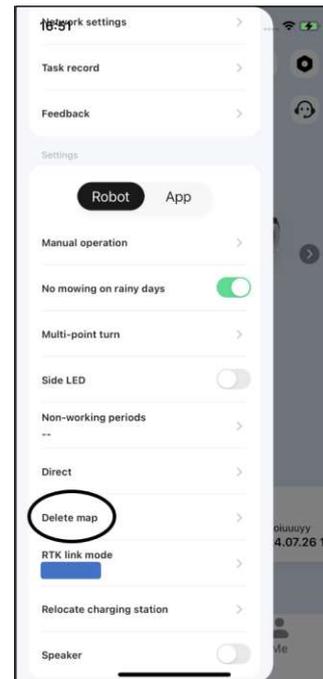

4.4 Mow

4.4.1 Preparation

- Ensure Yuka is in the task area before mowing.
- If any unexpected problems arise, please press the **STOP** button and secure Yuka. The STOP button holds top priority among all commands.
- If the lift sensor is activated, Yuka will come to a halt. Please press the **Grass** button followed by the **START** button to activate Yuka.
- Please mow the task area no more than once a day as doing so may be harmful to your lawn.
- Yuka supports a maximum grass height of 130 mm/5 in for the US version and 120 mm/4.7 in for other versions. It is recommended to adjust the cutting height according to the grass height for each mowing as follows:


Grass Height	Cutting Height
100-130 mm/3.9-5 in	Set to 100 mm/3.9 in
100-120 mm/3.9-4.7 in	Set to 90 mm/3.5 in
60-100 mm/2.4-4 in	Cut by 20 mm/0.8 in
20-60 mm/0.8-2.4 in	Cut by 10 mm/0.4 in

IMPORTANT


- For initial use of Yuka, we strongly advise setting the cutting height to above 50 mm/2 in.
- **Adjust the cutting height by manually pressing down and turning the PUSH button  on Yuka before mowing.**

4.4.2 To Start Mowing

1. Select **Mow** to start mowing settings.
2. Follow the onscreen information to finish the settings and start mowing.

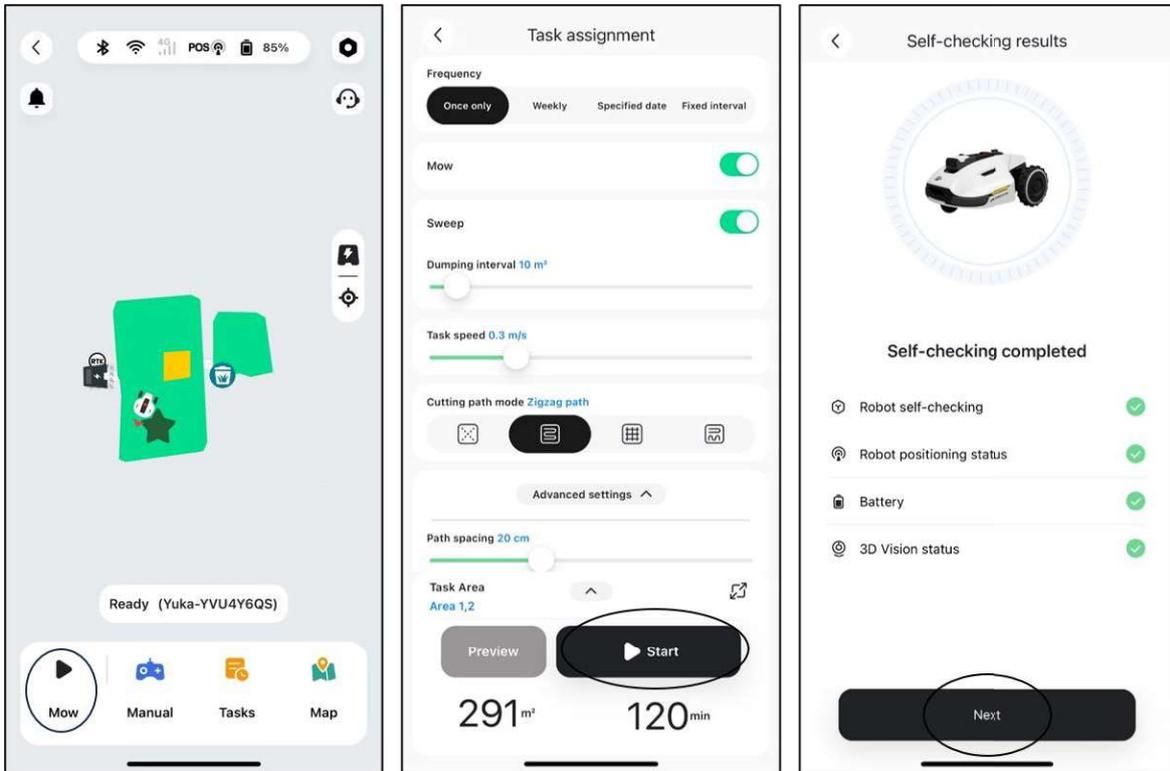

Cutting Path Mode

 


Perimeter laps only

Yuka will mow/sweep the perimeter grass only.



Zigzag path

 Yuka will work in straight rows.



Chess board path





Yuka will work in straight rows both horizontally and vertically.





Adaptive zigzag path

The task area will be divided into segments for efficient working.

Task Settings

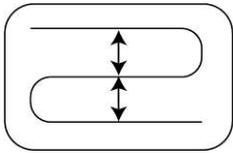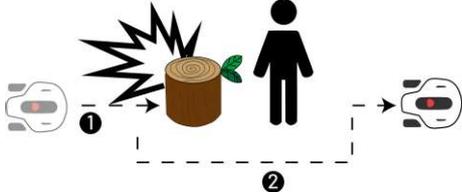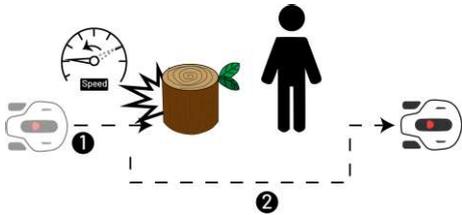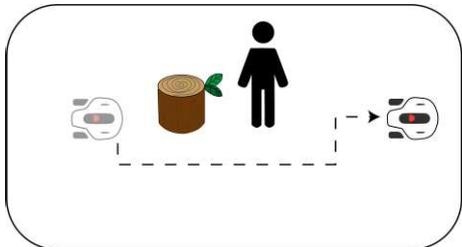Mow	Toggle the button to on/off to enable/disable the mowing function.		/
Sweep	Toggle the button to on/off to enable/disable the sweeping function.		/
Dumping interval	Yuka will dump once based on the settings.		/
Task speed	The speed of Yuka when mowing.		/
Path spacing (cm)	The spacing between 2 mowing paths.		
Obstacle detecting mode	Direct touch	Bypass the obstacles after a front bumper collision.	
	Slow touch	Yuka will slow down after detecting the obstacles and bypass them after a front bumper collision.	
	Less touch	Yuka will bypass all obstacles upon detection when working within the task area, excluding the perimeters, channels, and recharge paths, the robot will bypass people and vehicles upon detection; For other obstacles, it will use the Slow Touch Mode.	

	No touch	Yuka will bypass the obstacles upon detection.	
Perimeter mowing laps	<p>The mowing circles at the perimeter.</p> <p><i>*In the perimeter laps only mode, the perimeter mowing laps cannot be set 0.</i></p>		
No-go zone mowing laps	<p>The grass-cutting circles surrounding the boundary of the restricted area.</p>		
Path order	<p>Perimeter first: Yuka starts working from the perimeter.</p>		
	<p>Zigzag first: Yuka starts working from zigzag path.</p> <p><i>*Available for zigzag path and chess board path modes.</i></p>		
Cutting path angle (°)	<p>Relative angle: Take the most efficient path recommended by algorithm as the 0-degree direction.</p>		<p>Area 1</p> <p>Area 2</p>

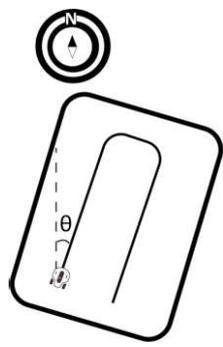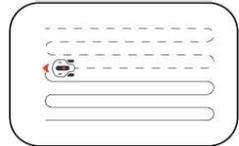	<p>Absolute angle: Take the due north as the 0-degree direction.</p>	
<p>Start progress</p>	<p>Yuka will start working from the percentage you set.</p>	<p>E.g. set 50% for start progress</p> 


When Yuka Enters an Area Where RTK Signals are Weak While Mowing

If Yuka enters an area where RTK signals are weak while mowing, the multi-sensor fusion positioning system will assist Yuka in continuing to operate through the vision module. The vision navigation can last for 50 meters/164 feet. Yuka should return to an area covered by RTK signals before the vision navigation reaches its limit, otherwise, Yuka will come to a stop.

4.4.3 Task Schedule

With the Schedule function, you can set a regular task and Yuka will automatically do its work according to your setting.

- **Once only** – Yuka will commence work promptly upon configuration.
- **Weekly** – Yuka will repeat the task every week based on your preferences.
- **Specified date** – Yuka is scheduled to commence work on the specified date.
- **Fixed interval** – specify non-working days. For example, if you input 3 days, Yuka will operate once every 3 days as per your settings.

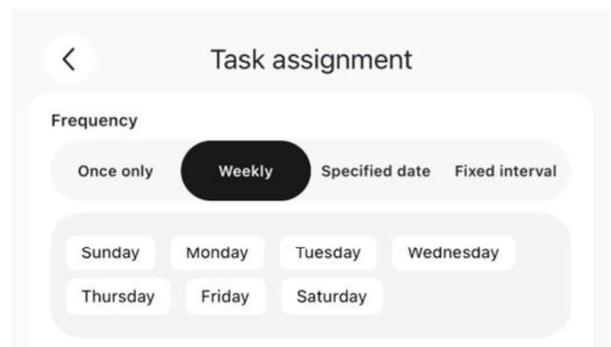


To Set a Schedule

NOTE

- The task schedule adding is temporarily disabled when Yuka is working.
- A schedule can be set after a task area has been created.

1. Tap **+** on the main page.
2. Follow the onscreen information to set time, frequency, work area, and advanced settings. Tap **Start/Save** to complete the setup. Or tap **Preview** to preview the results if needed.

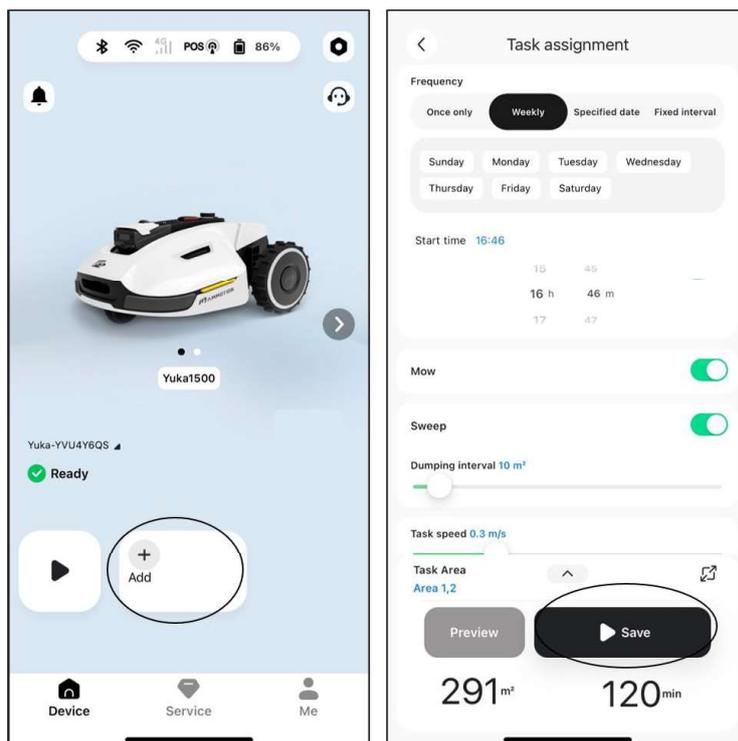

NOTE

- Toggle the **Mow/Sweep** button to off if you want to perform mowing/sweeping only.
- The task schedule adding is temporarily disabled when Yuka is working.
- A schedule can be set after a task area has been created.

To Change/Delete a Schedule

Tap **⋮** on the schedule you set to open the drop-down menu.

- **Enable** – toggle the button  to off  to inactivate the schedule if needed.

- **Rename** – tap to change the name of the schedule.
- **Edit** – tap to change the schedule.
- **Run now** – tap to run this schedule immediately.
- **Copy** – tap to create a new schedule with the same settings while keeping the original schedule, then choose one to edit.
- **Delete** – tap to delete the schedule.

If the exclamation mark  appears, it indicates that the task schedule cannot be performed due to errors. Tap the exclamation mark for more details.


4.4.4 Status Bar

From left to the right:

- Bluetooth
- Yuka's Wi-Fi
- Cellular strength
- Positioning status
- Yuka battery status



Tap the status bar to show the following details.

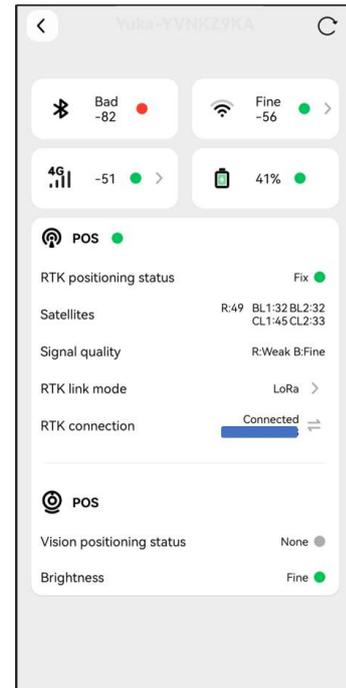

- **Positioning status** – shows the strength of positioning.
 - ✧ **Fix** – fine positioning status with an accuracy of less than 10 cm/4 in, up to 2 cm/1 in with a good open-sky area.
 - ✧ **Float** – poor positioning status with an accuracy about 50-200 cm/20-79 in.
 - ✧ **Single** – bad positioning status with a meter-level accuracy.
 - ✧ **None** – no positioning status.

**Only Fix status enables automatic mowing.*

- **Satellites** – refers to the total number of satellites received by Yuka and RTK reference station.

- ✧ **R** stands for the number of satellites received by Yuka.
 - ✧ **B** stands for the number of satellites received by RTK reference station.
 - ✧ **C** stands for the number of co-viewing satellites received by both Yuka and RTK reference station.
 - ✧ **L1** and **L2** respectively indicate the satellites operating at L1 and L2 frequencies.
- **Signal quality**
 - ✧ **R** stands for satellite signal strength of Yuka.
 - ✧ **B** stands for satellite signal strength of RTK reference station.

*The accuracy of positioning is affected by the quality of the satellite signal and the number of Co-Viewing satellites. Objects such as trees, leaves, walls, and fences can weaken the signal and lead to positioning errors. Despite the detection of more than 20 satellites by both the Yuka and RTK reference station, the signal quality can still be deemed as Weak or Bad.
 - **RTK link mode** – offers two connection modes: LoRa and Internet RTK. See **To Switch RTK Link Mode** for more information.
 - **RTK connection** – indicates the connection status of the RTK reference station.
 - **Vision positioning status** – shows the strength of vision positioning.
 - ✧ **Fine** – vision positioning is optimal.
 - ✧ **Bad** – vision positioning is poor.
 - ✧ **Initialization** – vision module is initializing.
 - ✧ **None** – no vision positioning available.
 - **Brightness** – shows the strength of ambient light.
 - ✧ **Fine** – ample brightness for vision positioning.
 - ✧ **Dark** – insufficient brightness; vision positioning cannot operate.

To Switch RTK Link Mode

RTK link mode refers to the method of connection between an RTK reference station and a Yuka. There are two primary modes: **LoRa** and **Internet RTK**.


LoRa involves data communication between the RTK reference station and the Yuka using radio antennas. On the other hand, Internet RTK utilizes the internet for data communication between the RTK reference station and the Yuka. Internet RTK significantly expands the range of RTK applications, enabling operation over large geographical areas.

Switch LoRa to Internet RTK


IMPORTANT

- Internet RTK relies on a stable 4G network. It is crucial to ensure that Yuka maintains a reliable 4G connection.
- Please ensure that both Yuka and RTK reference station are bound to the same account.
- For optimal operation, it is recommended to update both Yuka and RTK reference station firmware to the latest versions.

1. Verify the 4G icon on the Status bar to illuminate, indicating successful activation of the SIM card. Tap the Status bar to access the status information page.
2. The current RTK link mode is LoRa. Tap it to access RTK link mode page. Select **Internet** and tap the RTK reference station to configure your network.

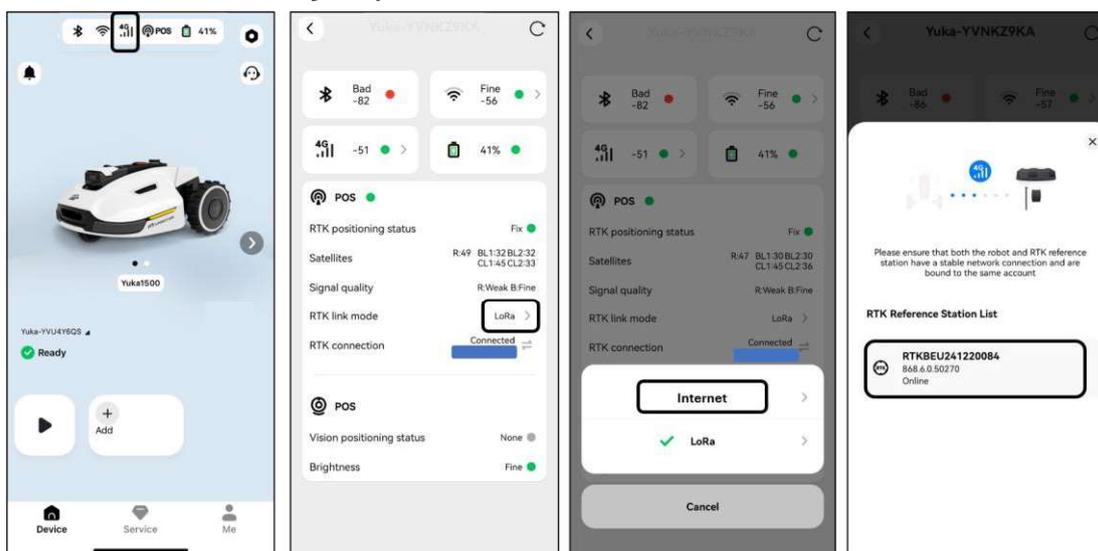


3. Wait for a green check mark to appear, then return to the status information page. Verify that the RTK positioning status displays 'Fix' and the RTK connection shows 'Connected'. Your setup is now complete.

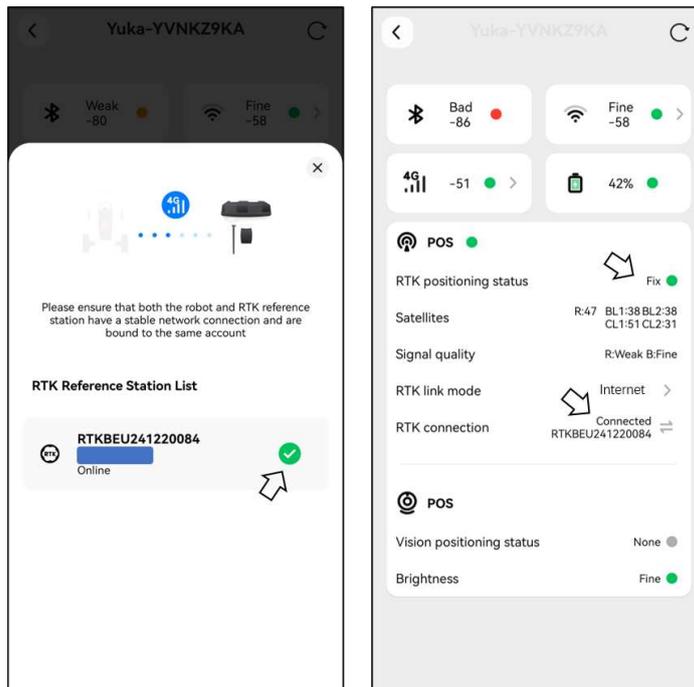


Switch Internet RTK to LoRa

1. Tap the Status bar to access the status information page.
2. The current RTK link mode is Internet. Tap it to access the RTK link mode page. Select **LoRa**, and ensure the displayed LoRa number matches the one on the RTK reference station's nameplate. If not, input the correct one. Tap **OK** to proceed.

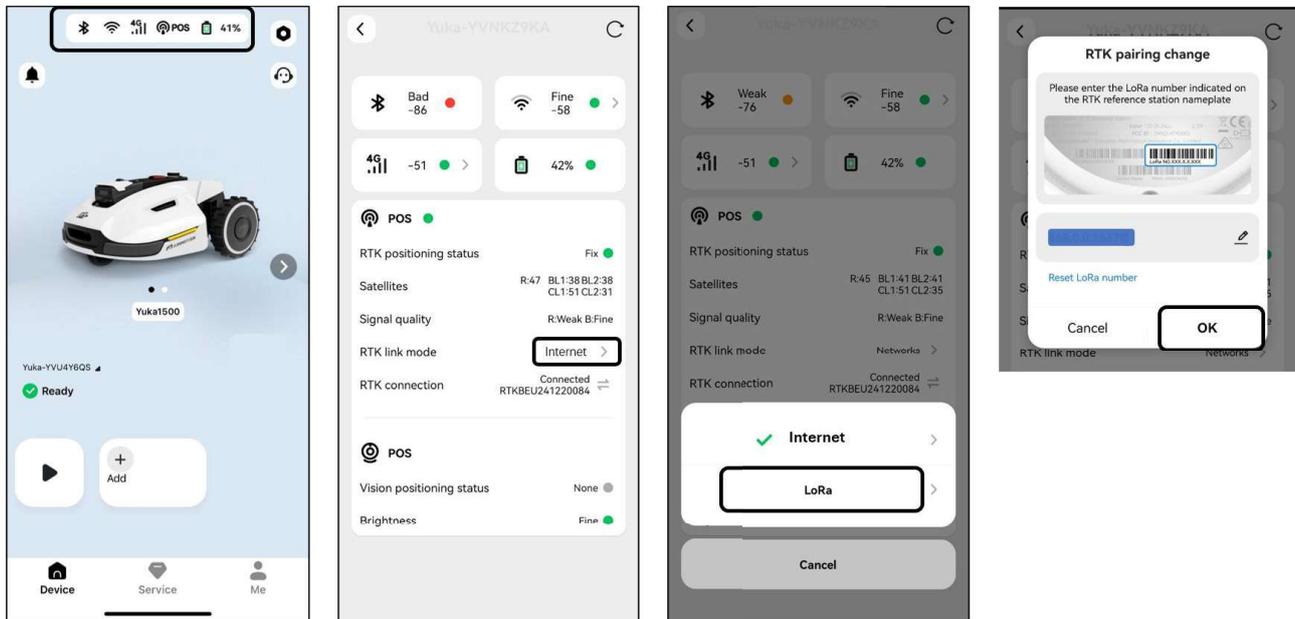

3. Return to the status information page and verify that the RTK link mode displays '**LoRa**', the RTK positioning status shows '**Fix**', and the RTK connection status shows '**Connected**'. Your setup is now complete.

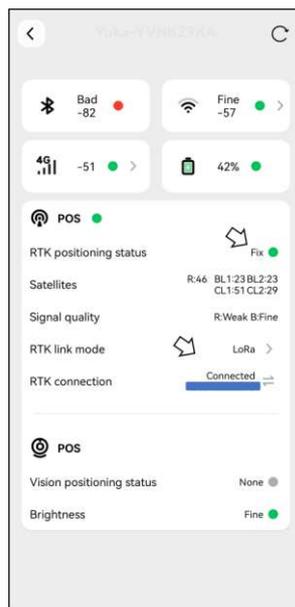

What to do when the Yuka's positioning is not Fix.

- Satellites (B): L1 < 20, L2 < 20
- Satellites (C): L1 < 20, L2 < 20
- Positioning status: Float

Measures:

Place the RTK reference station in an area with unobstructed views of the sky, without any physical obstructions within at least 5 m/16 ft. Alternatively, position the RTK reference station on a wall or roof.

- Signal quality (B): Bad or Weak
- Positioning status: Float

Measures:

Place the RTK reference station in an area with unobstructed views of the sky, without any physical obstructions within at least 5 m/16 ft. Alternatively, position the RTK reference station on a wall or roof.

- Satellites (B): L1:0, L2:0
- Satellites (C): L1:0; L2:0
- Positioning status: Single

Measures:

- ✓ Ensure the power supply to the RTK reference station is functioning normally.
- ✓ Verify that the indicator on the RTK reference station remains a constant green between the hours of 8:00-18:00 local time.
- ✓ Check for any defects within the RTK reference station, such as water leaks.
- ✓ Confirm that the radio antenna has been installed.
- ✓ Re-pair the RTK reference station and Yuka to see if it can be fixed.
- ✓ If you replace the RTK reference station, pair the new station with Yuka on the Mammotion app. For more details, visit <https://mammotion3006.zendesk.com/hc/en-us/articles/16503733641367>

- Satellites (R) < 25
- Satellites (C): L1 < 20, L2 < 20
- Positioning status: Float

Measures:

Check if the area where the Yuka is situated, particularly when the Yuka is being charged, has tall trees/walls/metal barriers, etc.

- Signal quality (R): Bad or Weak
- Positioning status: Float

Measures:

- ✓ Check if Yuka's current location is fully or partially covered.
- ✓ If the Yuka is positioned on the charging station, relocate it to a less obstructed area.
- ✓ If the Yuka is located on the perimeter/corner of the task area, adjust the perimeter/corner to ensure it is not covered by obstacles.
- ✓ If Yuka is located within the task area and has lost its positioning due to obstacles such as trees, iron tables or chairs, mark those obstacles as no-go zones.

- Satellites (R): 0
- Satellites (C): L1:0, L2:0
- Positioning status: None

Measures:

Check whether the Yuka is inside or if its rear is covered with metal. If the Yuka is faulty, please contact our after-sales team at https://mammotion3006.zendesk.com/hc/en-us/requests/new?ticket_form_id=13773144519703


- Satellites (B): L1:0, L2:0
- Satellites (C): L1:0; L2:0
- Positioning status: Float
- Signal quality (B): None

Measures:

- ✓ Check if the RTK reference station has powered off.
- ✓ If the Yuka is too far from the RTK reference station, narrow the distance between the RTK reference station and Yuka and retry.
- ✓ Verify if there are any malfunctions with the antenna, RTK reference station, or Yuka receiver. If so, please contact our after-sales team at https://mammotion3006.zendesk.com/hc/en-us/requests/new?ticket_form_id=13773144519703


4.4.5 Notification

Information regarding the status, any errors, etc. will be displayed in the notification section. Tap  in the upper-right corner to check the historical records.

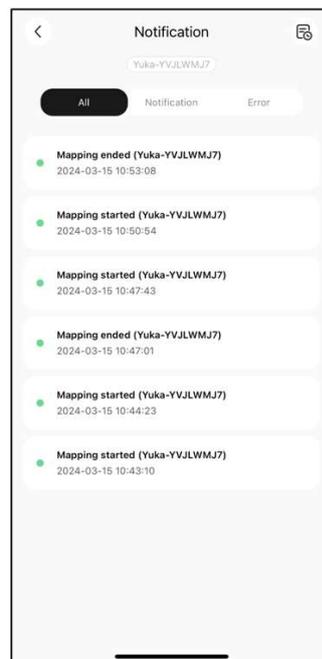

4.4.6 Settings


Click  to enter the Settings page.

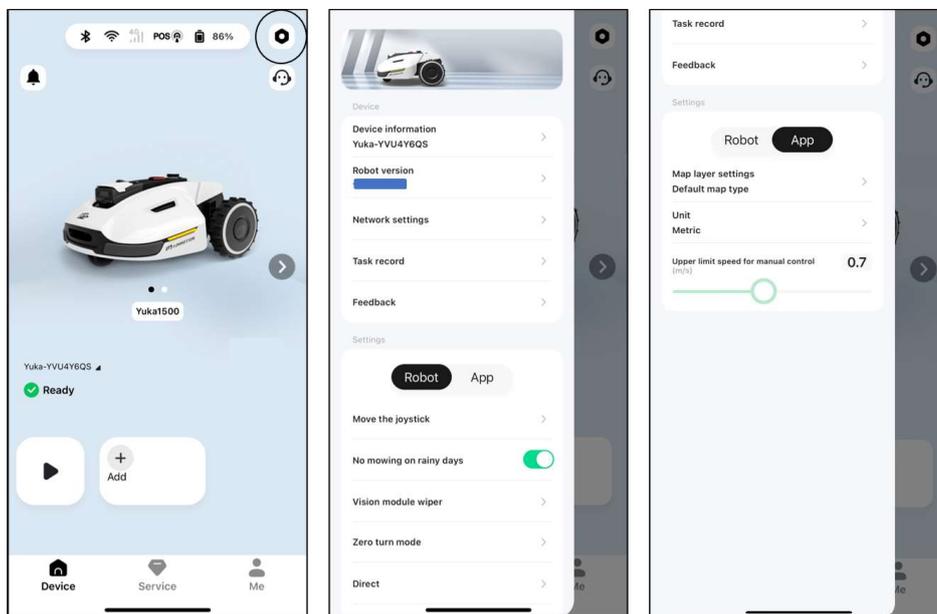

Device Settings

● Device Information

- ✧ **Device name** – change the name of Yuka.
- ✧ **Sharing management** – tap to view your sharing history and share your device with your family.
- ✧ **Robot version** – check the firmware version of Yuka and upgrade it if any.
- ✧ **Network settings** – set Yuka network.
- ✧ **Upload Logs** – tap to send your issues and logs to Mammotion to target. You can attach a maximum of 5 images and 1 video.
- ✧ **Factory reset** – tap to perform factory reset. All the logs and Wi-Fi passwords will be clear.
- ✧ **Maintenance** – shows the information on total mileage, mowing duration, battery cycle, and activation time.
- ✧ **Unbind** – tap to unbind the current Yuka. A Yuka can only be associated with one account and cannot be operated until it is bound. If you wish to transfer ownership of a Yuka, you must unbind it before proceeding.

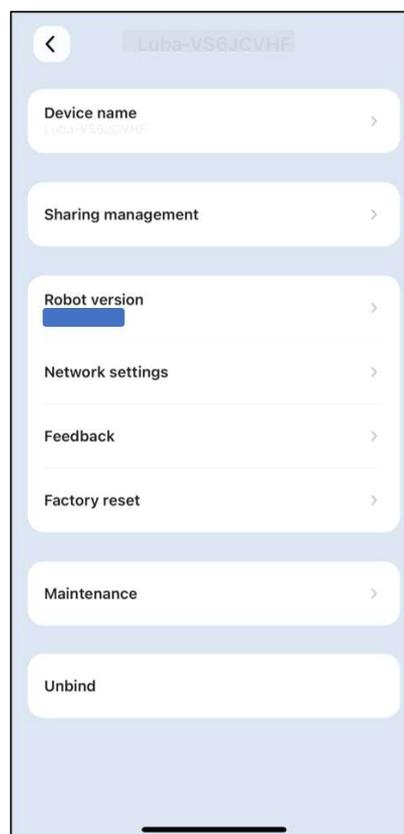


- **Robot Version** – check the firmware version of Yuka and upgrade it if any.
- **Network Settings** – set Yuka network.
- **Task Record** – shows the historical tasks which were completed and uncompleted.
- **Upload Logs** – tap to send your issues and logs to Mammotion to target. You can attach a maximum of 5 images and 1 video.


Robot Settings

- ✧ **Manual operation** – tap to enter manual mowing mode. See *Error! Reference source not found.* for details.
- ✧ **No mowing on rainy days** – when you enable this function, the Yuka will not mow if it rains.
- ✧ **Vision module wiper** – tap to clean the vision module.
- ✧ **Turnaround mode** – Zero turn and Multi-point turn.

Zero turn

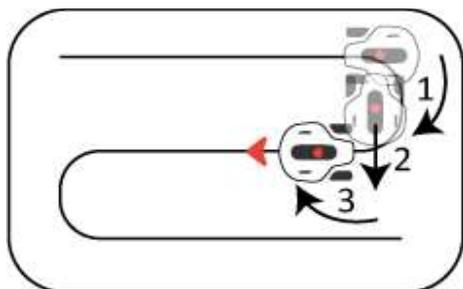


Multi-point turn

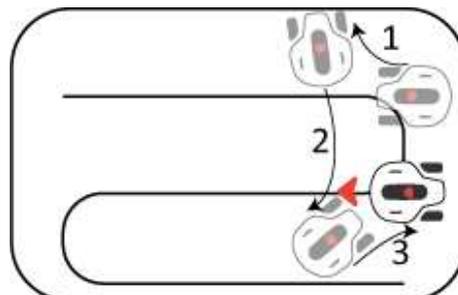


- ✧ **Side LED** – tap to turn on/off the side indicator of the Yuka.
- ✧ **Delete map** – tap to delete the task area you create.
- ✧ **Recharge route** – provides two ways to recharge: **Direct** or **Follow the perimeter**; **Direct** means that the Yuka takes the shortest route to return to the charging station; **Follow the perimeter** means that the Yuka drives down the border to the charging station.

Direct

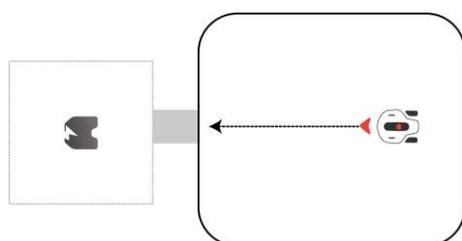

Follow the perimeter

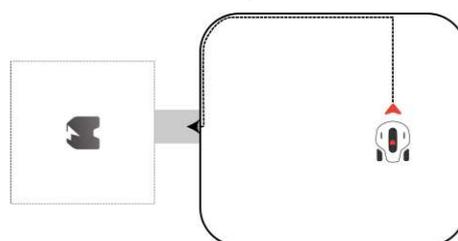

- ✧ **Non-working periods** – tap to set non-working period.
- ✧ **RTK link mode** – tap to switch RTK link mode or reset RTK pairing code.
- ✧ **Relocate charging station** – tap to relocate the charging station. See *To Relocate the Charging Station* for additional information.
- ✧ **Speaker** – tap to turn on/off the voice prompt.

To Relocate the Charging Station


NOTE

Please relocate the charging station while Yuka is charging.

Generally, the charging station should be relocated if

- The charging station is moved.
- The docking path has a significant incline.
- The recharge process consistently fails.

1. Install the charging station in a proper place.
2. Place Yuka on the charging station and ensure the positioning status is fine.
3. Select **Settings**  > **Relocate charging station**.

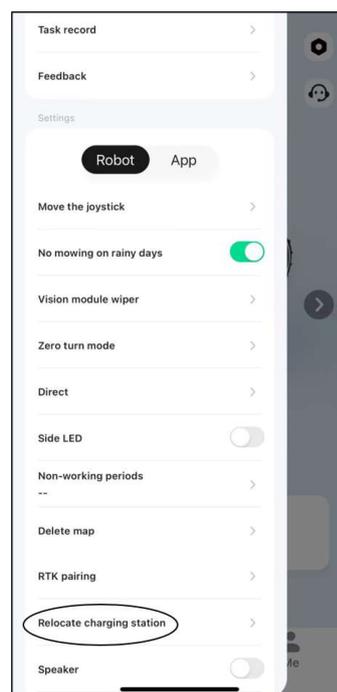

4.4.7 Recharge

NOTE

When performing recharge function, Yuka must be in the task area.

The Recharge button allows Yuka to return to charge.

To Perform Recharge



- Tap  on the Map page in the Mammotion app, or
- Press the button  on the Yuka, then press **START** to guide Yuka to the charging station.

4.5 Me


4.5.1 To Share Your Device

Sharing your device allows the recipient to control and access device information, but they cannot share it further or use its anti-theft feature.

1. Go to the Me page and tap **Device management and sharing**.
2. Select your own device to share.
3. Tap **Share with people** to go on.
4. Select **Share via account** or **Share via QR code** to share your device.
 - **Share via account**
 - a. Tap **Share via account**.
 - b. Enter the account number that you want to share, then tap **Share**.

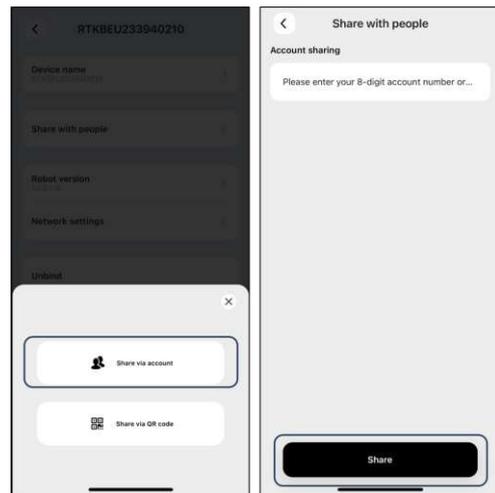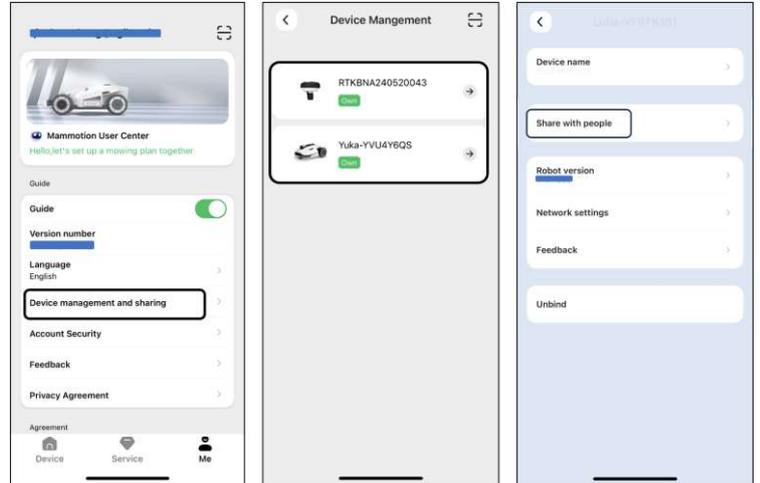


- c. In the recipient's Mammotion app, tap **Agree** in the popup.

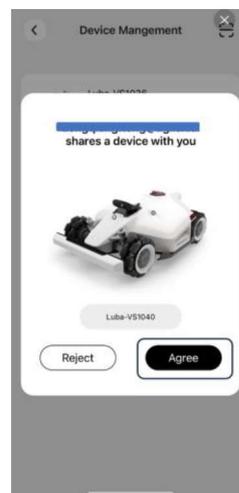


- **Share via QR code**

- Tap **Share via QR code** and a code will appear.

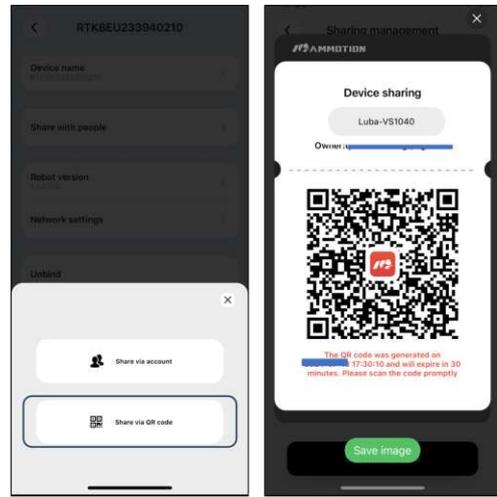


- Use the recipient's Mammotion app to scan the QR code and tap **Agree** in the popup.

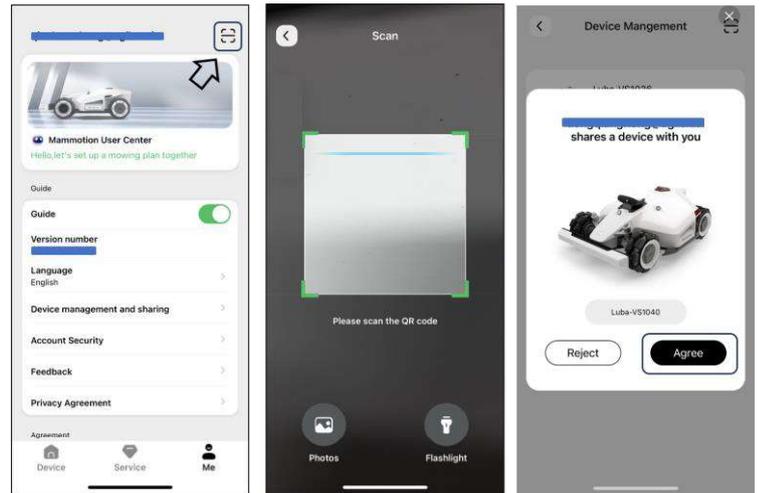


4.5.2 To Stop Sharing Your Device

For Owner

- Go to the Me page and tap **Device management and sharing**.
- Select the device that you have shared.
- Tap **Sharing management** to continue.

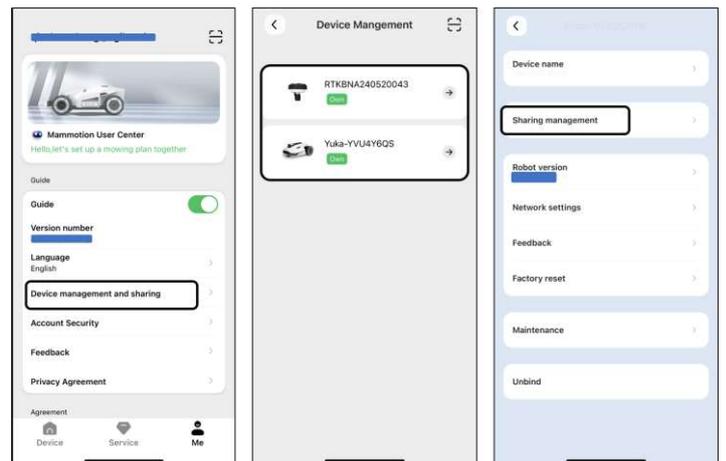


4. Select the corresponding sharing history and tap **Delete**.
5. Tap **Confirm** to revoke the recipient's access to the device.

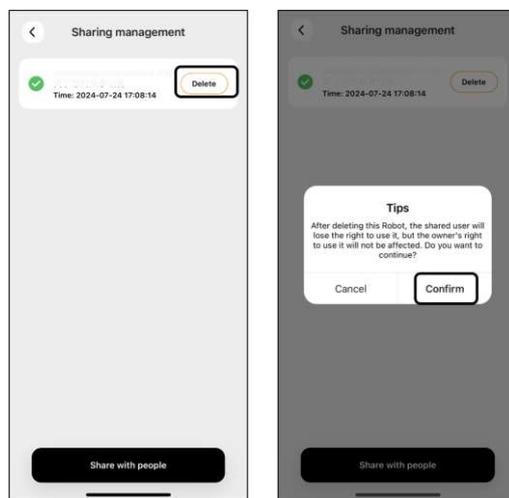


For Recipient

1. Go to the Me page and tap **Device management and sharing**.
2. Select the device that has been shared with you.
3. Tap **Delete**.
4. Tap **Confirm** to stop using the device. This action will not affect the owner's data.

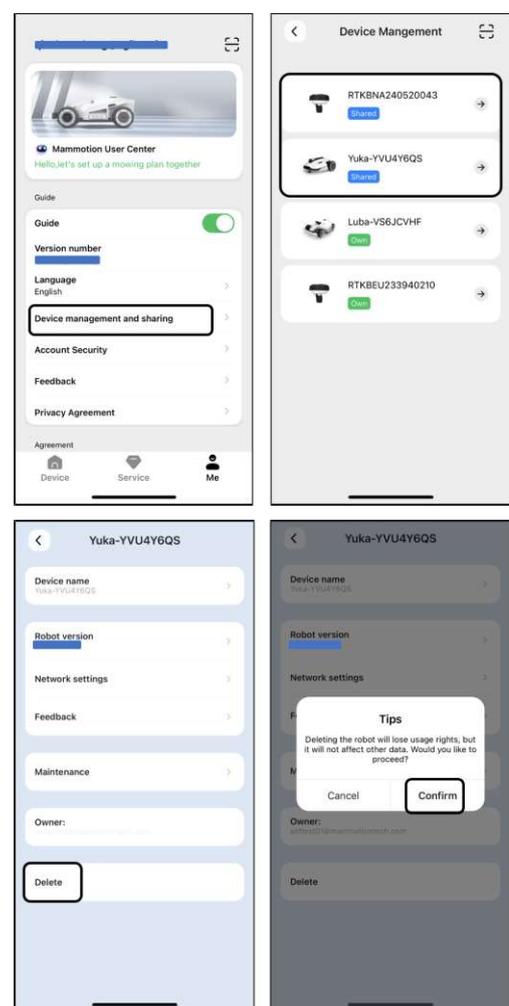

4.5.3 Find My Device

In the case that your Mammotion robot or RTK reference station that has been bound with the Mammotion app is missing, go to **Service > Find my Device** to track your device.

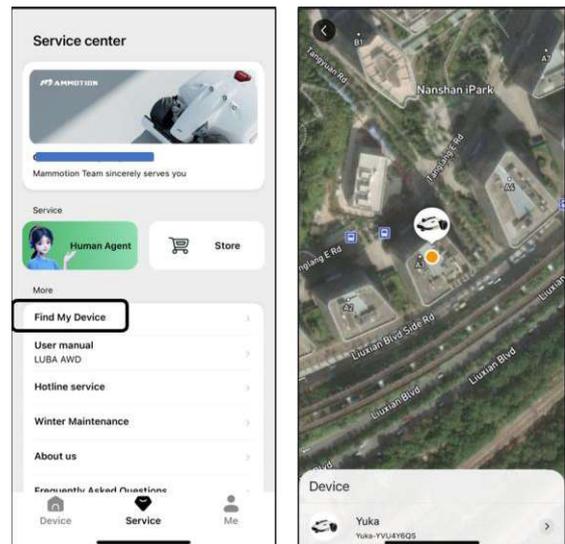

Tap the device to enter the next page where you can enable/disable **Location Notifications** and **Location Recorder**.


- **Location Notifications** – You will receive a push notification when the robot is more than 50 meters away from the working area after enabling it.
- **Location Recorder** – Record the location history of the robot after enabling it.

4.5.4 To Link Your Alexa Account

NOTE

- Prior to starting a job using voice control, it is necessary to have created at least one task beforehand.
- In cases where more than 2 sets of Yuka are linked to the same Mammotion account, the voice command will be directed to the most recently bound Yuka by default.

1. Go to the **Me** page and tap on **Alexa**.
2. Select **Yuka** to proceed.
3. Tap **Link Alexa** to go to the authorization page.
4. Finally, tap **Link** to complete the operation.

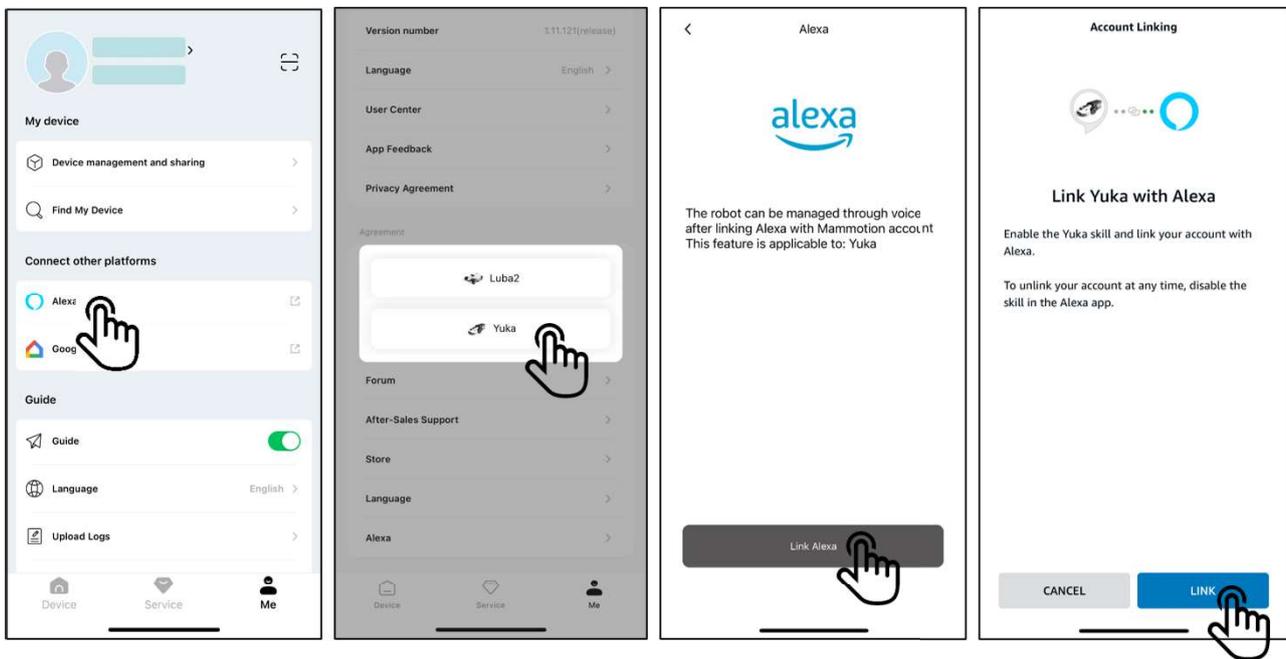

Once the linking is successful, you can control Yuka with voice commands. Here are some examples for starting, pausing, stopping, recharging, and checking the status:

Working

- Alexa, ask Yuka to start working
- Alexa, ask Yuka to start task xx (xx means the name of the task you set)

Pause working

- Alexa, ask Yuka to pause
- Alexa, ask Yuka to hold on
- Alexa, ask Yuka to suspend

Continue working

- Alexa, ask Yuka to continue
- Alexa, ask Yuka to resume

Stop working

- Alexa, ask Yuka to stop working
- Alexa, ask Yuka to end the task

Recharge

- Alexa, ask Yuka to recharge
- Alexa, ask Yuka to go home

Check status

-Alexa, ask Yuka status


-Alexa, ask Yuka what it is doing

4.5.5 To Link Your Google Home Account

NOTE

Prior to starting a job using voice control, it is necessary to have created at least one task beforehand.

1. Go to the **Me** page and tap on **Google Home**.
2. Tap **Link Google Home** to go to the authorization page.
3. Follow the instructions to complete the setup.

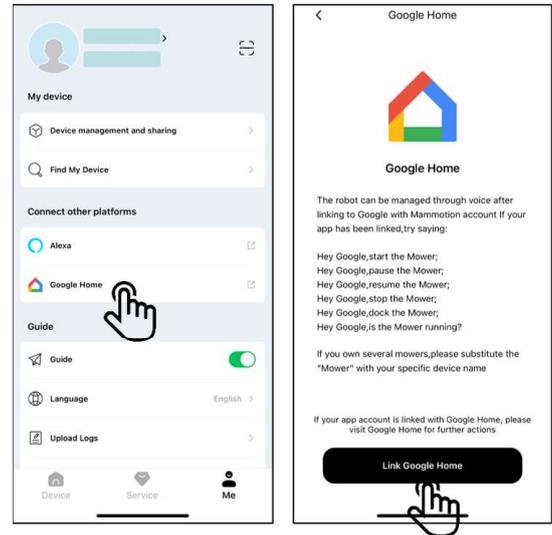

After linking succeeds, you can control Yuka using voice commands, try the following commands:

Start working

- Hey Google, start mowing
- Hey Google, start the Yuka now
- Hey Google, let the Yuka start running
- Hey Google, make the Yuka start running

Pause working

- Hey Google, pause mowing
- Hey Google, pause the Yuka now
- Hey Google, let the Yuka pause
- Hey Google, make the Yuka pause

Continue working

- Hey Google, continue mowing
- Hey Google, let the Yuka continue
- Hey Google, make the Yuka continue

Stop working

-Hey Google, stop mowing

-Hey Google, stop the Yuka

-Hey Google, let the Yuka stop

-Hey Google, make the Yuka stop

Recharge Yuka

-Hey Google, dock the Yuka

-Hey Google, let the Yuka go home

-Hey Google, make the Yuka go home

Check status

-Hey Google, is the Yuka running?

5 Maintenance

To maintain optimal mowing performance and extend the lifespan of your robot, Mammotion advises performing regular inspections and maintenance weekly. For safety and effectiveness, always wear protective clothing such as trousers and work shoes; avoid wearing open sandals or going barefoot during maintenance.

5.1 Cleaning

WARNING

- Ensure the robot is completely powered off before beginning any cleaning work.
- Always power off the robot before turning it upside down.
- When turning the robot upside down, handle with care to avoid damaging the vision module.

5.1.1 To Clean Robot

Housing

Use a soft brush or a damp cloth to clean the robot's housing. Avoid using alcohol, gasoline, acetone, or other corrosive or volatile solvents, as they may damage the robot's appearance and internal components.

Bottom

Wear protective gloves while cleaning the chassis and cutting disks. Use a brush to remove debris. Check for blade damage and ensure that the blades and cutting disks can rotate freely. DO NOT use sharp objects to clean the bottom.

Front Wheel

Clean the front wheel using a brush or water hose. Remove the mud if any.

Rear Wheels

Regularly clean the rear wheels with a brush or water hose if they become too dirty.

Vision Camera

Wipe the vision camera lens with a cloth to remove any stains. A clean lens is crucial for the performance of the vision module.

5.1.2 To Clean Charging Station

Use a brush and cloth to clean the infrared transmitter and the charging pin.

5.1.3 To Clean RTK Reference Station

Wipe the top of the RTK reference station with a cloth to remove any accumulated dirt.

5.2 Maintenance for Cutting Blades


CAUTION

1. Always wear protective gloves when inspecting, cleaning, or replacing the cutting blade.
2. DO NOT use an electrical screwdriver to tighten or loosen the cutting disk. Always use the correct screws and original blades approved by Mammotion.
3. Replace all cutting blades and their screws simultaneously to ensure a safe and effective cutting system.

Replace the cutting blades every 3 months or after 150 hours of mowing. For thicker grass, you may need to replace the blades more frequently.

How to replace a cutting blade

1. Turn off the robot.
2. Place the robot on a soft, clean surface, ensuring it is in an upside-down position.
3. Remove the old cutting blades with the included screwdriver with 2.5mm hex bit.
4. Install the new cutting blades using the included washers (B) and screws (A). Ensure that the blades can rotate freely and are securely installed.

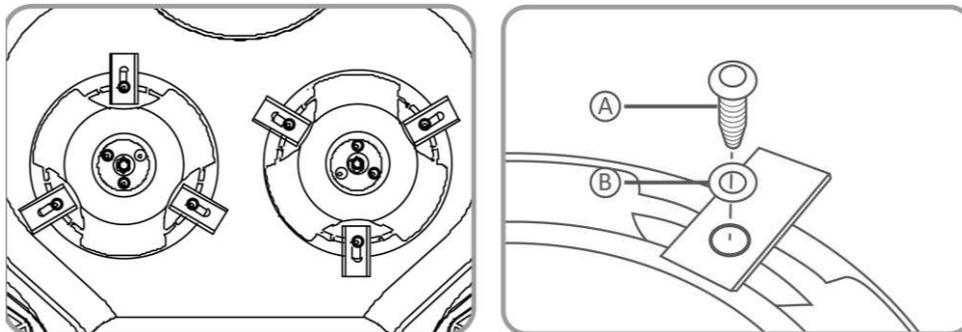

5.3 Battery Maintenance

- Maintain the battery fully charged before long-term storage to prevent over-discharge.
- Charge fully every 90 days, even if it is not in use.
- Ensure the charging ports on the robot are clean and dry before storing or charging.

5.4 Winter Storage

To ensure your robot is in optimal condition for the next mowing season, store the robot, charging station, and RTK reference station properly. If the ambient temperature drops below -20°C (-4°F) during winter, keep the robot, RTK reference station, and charging station indoors.

5.4.1 Store Robot

- Control the robot off the charging station, ensuring the robot has been fully charged.
- Power off the robot.
- Clean the robot (the housing, wheels, chassis, vision module, etc.) with a damp cloth or soft brush. You can wash the robot if necessary. DO NOT turn the robot upside down to clean its chassis with water.
- Leave the robot to get dry. DO NOT turn it upside down during this process.
- Apply anti-corrosion lubricant to the charging pads. DO NOT apply the chemicals to any other parts of the robot, especially metal contact areas, except for the connectors.
- Remove the security key. **(In the next mowing season, reinstall the security key.)**
- Remove the SIM card if any. **(In the next mowing season, check the SIM card is available and reinstall it.)**
- Store the robot indoors.

5.4.2 Store Charging Station

- Disconnect the power supply.

- Remove the stakes.
- Use a brush and cloth to clean the charging station thoroughly.
- Remove the charging station and the power supply.
- Store the charging station and the power supply indoors.

In the next mowing season, reinstall the charging station, then relocate it (See [To Relocate the Charging Station](#) for more information) and remap a channel between the charging station and the task area using the Mammotion app.

5.4.3 Store RTK Reference Station

If the ambient temperature is above -20°C (-4°F) in winter:

- Unplug the RTK reference station.
- Twine the RTK reference station cable around the station and tighten the protective cap.
- Cover the RTK reference station with a plastic bag or cover.

If you follow these steps and do not move the RTK reference station, you will not need to delete the map and remap for the next mowing season.

If the ambient temperature is below -20°C (-4°F) in winter:

If the RTK reference station is installed on the ground, follow the steps below:

- Delete the map in the Mammotion app.
- Unplug the RTK reference station.
- Remove the RTK reference station from the mounting pole.
- Remove the antenna.
- Use a cloth to clean the RTK reference station.
- Remove the mounting pole.

In the next season, reinstall the RTK reference station and remap in the Mammotion app.

If the RTK reference station is installed on the wall/roof, follow the steps below:

- Unplug the RTK reference station.
- Remove the RTK reference station from the wall mounting pole.
- Remove the antenna.

- Use a cloth to clean the RTK reference station.

In the next mowing season, reinstall the RTK reference station in its original position. There is no need to delete the map and remap as the location of the RTK reference station remains unchanged.

5.4.4 Store Sweeper Kit

- Power off the robot.
- Unplug the lawn sweeper kit.
- Reattach the port cover on the robot.
- Remove the sweeper kit from the robot.
- Clean the roller brush module with a brush.
- Rinse the surface and collection bag with a water hose.
- Allow the sweeper kit to dry thoroughly, then store it indoors.

5.4.5 Store Solar Panel Kit

If the ambient temperature is above -20°C (-4°F) in winter:

- Disconnect the solar panel and tighten the protective cap.
- Twine the solar panel cable around the mounting bracket.
- Maintain a battery charge of over 50% (indicated by a flashing green LED).
- Long press 2s to put the solar panel into standby mode.

If the ambient temperature is below 20°C (-4°F) in winter:

- Disconnect the solar panel and tighten the protective cap.
- Uninstall the solar panel.
- Maintain a battery charge of over 50% (indicated by a flashing green LED).
- Long press 2s to put the solar panel into standby mode.
- Wipe the solar panel with a cloth.

6 Product Specifications

6.1 Technical Specifications

6.1.1 General Specifications

Parameters	YUKA		
	1000	2000	3000
Max. Mowing Size	1,000 m ² (0.25 acres)	2000 m ² (0.5 acres)	3,000 m ² (0.74 acres)
In-App Area Storage Capacity	1,200 m ² (0.3 acres)	2,400 m ² (0.6 acres)	3600 m ² (0.6 acres)
Max. multi-zone Management	10	20	20
Engine	2 Wheel-drive		
Max. Climbing Ability	Without sweeper: 45% (24°) With sweeper: 18% (10°)		
Max. Slope at the Edge	Without sweeper: 25% (14°)		
Vertical Obstacle Passing Ability	50 mm (2 inches)		
Cutting Width	32 cm (12.6 inches)		
Cutting Height Adjustment	For US: 30-100 mm (1.18-3.94 inches) For EU/UK/AU: 20-90 mm (0.78-3.54 inches)		
Charging Time	Single battery: 150 min Dual batteries: 300 min		
Mowing Time per Charge	150 min (dual batteries and mowing only)		
Auto-recharge	YES		
Positioning & Navigation	3D Vision & RTK		
Obstacle Avoidance	3D Vision & Physical Bumper		

Parameters	YUKA		
	1000	2000	3000
Voice Control	Alexa & Google Home		
Vision Monitoring	YES		
Connectivity	4G & Bluetooth & Wi-Fi		
A weighted sound power	$L_{WA}=66\text{dB}$, $K_{WA}=3\text{dB}$		
A weighted sound pressure	$L_{PA}=58\text{dB}$, $K_{PA}=3\text{dB}$		
Waterproof	YUKA Robot: IPX6 Charging Station: IPX6 RTK Station: IPX7		
Rain Detection	YES		
Net Weight	15.6 kg (34.4 lbs.)		
Dimensions (L x W x H)	YUKA robot: 648 x 519 x 330 mm (25.5 x 20.4 x 13 inches)		
Warranty	YUKA Robot: 2 years Charging Station: 1 year RTK Station: 1 year		

6.1.2 Yuka Onboard Operating Bands Specifications (EU)

Operating Band	Frequency	Max. Conducted Power
BLE	2400-2483.5MHz	6.4dBm
WiFi	2400-2483.5MHz	16.94dBm
	5150-5250MHz	13.00dBm
	5250-5350MHz	13.00dBm
	5470-5725MHz	13.75dBm
	5725-5825MHz	9.58dBm
LORA	863.1-869.85MHz	9.99dBm
GSM900	Tx:880-915MHz, Rx:925-960MHz	33.41dBm
DCS1800	Tx:1710-1785MHz, Rx:1805-1880MHz	30.25dBm
WCDMA Band I	Tx:1920-1980MHz, Rx:2110-2170MHz	23.63dBm
WCDMA Band VIII	Tx:880-915MHz, Rx:925-960MHz	24.20dBm
LTE Band 1	Tx: 1920-1980MHz; Rx: 2110-2170MHz	22.59dBm

LTE Band 3	Tx: 1710-1785MHz; Rx: 1805-1880MHz	23.23dBm
LTE Band 7	Tx: 2500-2570MHz; Rx: 2620-2690MHz	23.28dBm
LTE Band 8	Tx: 880-915MHz; Rx: 925-960MHz	23.98dBm
LTE Band 20	Tx: 832-862MHz; Rx: 791-821MHz	22.86dBm
LTE Band 28	Tx: 703-748MHz; Rx: 758-803MHz	22.62dBm
LTE Band 38	Tx: 2570-2620MHz; Rx: 2570-2620MHz	22.54dBm
LTE Band 40	Tx: 2300-2400MHz; Rx: 2300-2400MHz	22.31dBm
BDS/GPS(L1)/Galileo(E1B) /GLONASS(G1)	1559-1610MHz	/

6.1.3 RTK Reference Station Operating Bands Specifications (EU)

Operating Band	Frequency	Max. Conducted Power
BLE	2400-2483.5MHz	<10dBm
WiFi	2400-2483.5MHz	<20dBm
LORA	863.1-869.85MHz	<13.98dBm
BDS/GPS(L1)/Galileo(E1B) /GLONASS(G1)	1559-1610MHz	/

Model: RTK301

6.1.4 Sweeper Kit Specifications

Parameters	Specifications
Dimensions (L x W x H)	650 x 420 x 390 mm/25.6 x 16.5 x 15.4 in.
Container Capacity	22 Liters
Sweeper Width	250 mm/9.8 in.
Operating Temperature	0-40°C (32-104°F)
Storage Temperature	-10-50°C (14-122°F)

6.1.5 Battery Specifications

Parameters	YUKA		
	1000	2000	3000
Battery charger	TS-A081-2703002 Input: 100-240V~, 50/60Hz, 2.0A Output: 27Vdc, 3.0A, 81W		
Battery pack	21.6Vdc, 4.5Ah		
Battery capacity	4.5Ah		
Temperature range for charging is 4-45 °C / 39-113 °F. Too high temperatures might cause damage to the product.			
WARNING: For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.			

6.2 Fault Codes

The app notification displays common fault codes along with their causes and troubleshooting steps.

Here lists the most common issues.

Fault Codes	Causes	Solutions
316	The left cutting disk motor is overheating.	The machine will return to normal once the motor has cooled down. This process may take several minutes.
318	The sensor for the left cutting disk motor has failed.	Restart Yuka. If the issue persists after a few times of restart, contact the after-sale team.
323	The right cutting disk motor is overloaded.	Check if the cutting disk is jammed and clear it if necessary. Alternatively, raise the cutting height.
325	The right cutting disk motor fails to start.	Check whether the cutting disk is jammed. If not, restart Yuka. If the issue persists after a few times of restart, contact the after-sale team.
326	The right cutting disk motor is overheating.	Restart Yuka. If the issue persists after a few times of restart, contact the after-sale team.
328	The sensor for the right cutting disk motor has failed.	Restart Yuka. If the issue persists after a few times of restart, contact the after-sale team.
1005	Low battery	Yuka will continue working after the battery is charged to 80%.
1300	The positioning status is poor.	Await Yuka's repositioning.
1301	The charging station has been moved.	Relocate the charging station.
1420	Timeout occurred while retrieving	Restart Yuka. If the issue persists, contact

Fault Codes	Causes	Solutions
	wheel speed data.	the after-sale team.
2713	Charging has been stopped due to low battery voltage.	Restart Yuka. If the issue persists after a few times of restart, contact the after-sale team.
2726	The battery is overcharged.	Stop charging immediately. If overcharging occurs frequently, contact the after-sale team.
2727	The battery is over discharged.	Recharge Yuka.

7 Warranty

Shenzhen Mammotion Innovation Co., Ltd warrants that this product will be free from material and workmanship defects under normal use in accordance with the product materials published by Mammotion during the warranty period. The published product materials include but not limited to user manual, quick start guide, maintenance, specifications, disclaimer, in-app notifications, etc. The warranty period varies among different products and parts. Check the table below:

Component	Warranty	
Battery	2 Years	
Wheel Hub Motor		
GPS Kit		
Vision Module		
PCBA		
RTK Reference Station		
Charging Station		
Sweeping Brush Module		
Decoration Parts		Consumable Parts
Cutting Blade		
Tire		
Cutting Disk	No warranty	
Grass Collection Bag		
Rotating Roller Brush		

If the product does not function as warranted during the warranty period, please contact Mammoth customer service for instructions.

- For products purchased from a local dealer, kindly reach out to the dealer first.
- Users must present a valid proof of purchase, receipt, or order number (for Mammoth Direct Sales). The Serial Number of the product is crucial for initiating warranty service.
- Mammoth will make every effort to address concerns through phone calls, email, or online chat.
- In some cases, Mammoth may advise you to download or install specific software updates.
- If issues persist, you may need to send the product to Mammoth for further assessment or to a local Mammoth-appointed service center.
- The warranty period for the product commences from the original date of purchase indicated on the sales receipt or invoice.
- For pre-ordered products, the warranty period begins from the shipping date from the local warehouse.
- Mammoth will need users to arrange the shipment by themselves if users would like to send the products to local service center or Mammoth factory for further diagnosis. Mammoth will repair or replace and send back to users at no cost if the problem falls under the warranty. If not, Mammoth or designated service center may charge a fee accordingly.

Here puts some examples of faults that warranty will not cover:

- Failure to follow the instructions outlined in the user manual.
- If the product arrives damaged during shipment and is not rejected upon delivery, or if no official documentation confirming the damages is provided by the shipping company. Inability to provide evidence of damage occurring during transit.
- Product malfunction due to accidents, misuse, abuse, natural disasters like floods, fires, earthquakes, exposure to food or liquid spills, incorrect electrical charging, or other external factors.
- Damage resulting from using the product in ways not permitted or intended as specified by Mammoth.
- Modification of the product or its components that significantly alters functionality or capabilities without obtaining written permission from Mammoth.

- Loss, damage, or unauthorized access to your data.
- Signs of tampering or alteration on product labels, serial numbers, etc.
- Failure to provide a valid proof of purchase from Mammotion, such as a receipt or invoice, or if there are suspicions of forgery or tampering with the documentation.

8 Compliance

FCC Compliance Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ISED Compliance Statements

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation,

Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

(1) L'appareil ne doit pas produire de brouillage;

(2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet équipement est conforme aux limites d'exposition aux radiations IC CNR-102 établies pour un environnement non contrôlé.

RF Exposure Compliance

This equipment complies with FCC/IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

Cet équipement est conforme aux limites d'exposition aux radiations IC CNR-102 établies pour un environnement non contrôlé.

Cet émetteur ne doit pas être colocalisé ou fonctionner en conjonction avec une autre antenne ou un autre émetteur. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

This radio transmitter [32325-RTK301] has been approved by Innovation, Science and Economic Development Canada to operate with the antenna types listed below, with the maximum permissible gain indicated. Antenna types not included in this list that have a gain greater than the maximum gain indicated for any type listed are strictly prohibited for use with this device.

Dipole antenna, 3.26dBi

Le présent émetteur radio [32325-RTK301] a été approuvé par Innovation, Sciences et Développement économique Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal. Les types d'antenne non inclus dans cette liste, et dont le gain est supérieur au gain maximal indiqué pour tout type figurant sur la liste, sont strictement interdits pour l'exploitation de l'émetteur.

Antenne dipôle, 3.26dbi

Simplified EU Declaration of Conformity

Hereby, Shenzhen Mammotion Innovation Co., Limited declares that the radio equipment type [Model:1000/2000/3000] is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<https://mammotion.com/pages/eu-declaration-of-conformity>.



SHENZHEN MAMMOTION INNOVATION CO., LTD

www.mammotion.com

Copyright © 2024, MAMMOTION All Rights Reserved.