

材质：80g 书纸

尺寸：160mm*90mm


装订方式：骑马订（翻页）

印刷：单色印刷

Reacher

R9BT-RA

User Manual

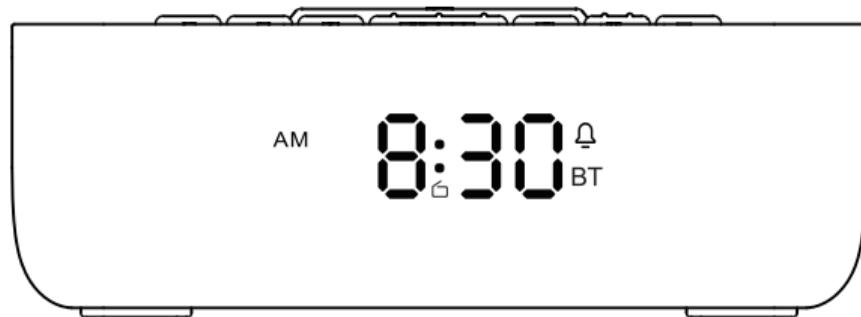

Get warranty/support with customer@reachershop.com

Instructional Video

You can get our Reacher product instructional video when you scan the QR code below and input item model R9BT-RA.

Link: https://www.youtube.com/channel/UCvpUg6_WyxzmEFQebi7FFVw




Quick Getting Started



Attention

1. All operations will auto-exit and save settings if there is no operation within 5 seconds.
2. Please check the "AM" & "PM" indicators when you set the time and alarm.
3. Please keep plugged in !


Top View

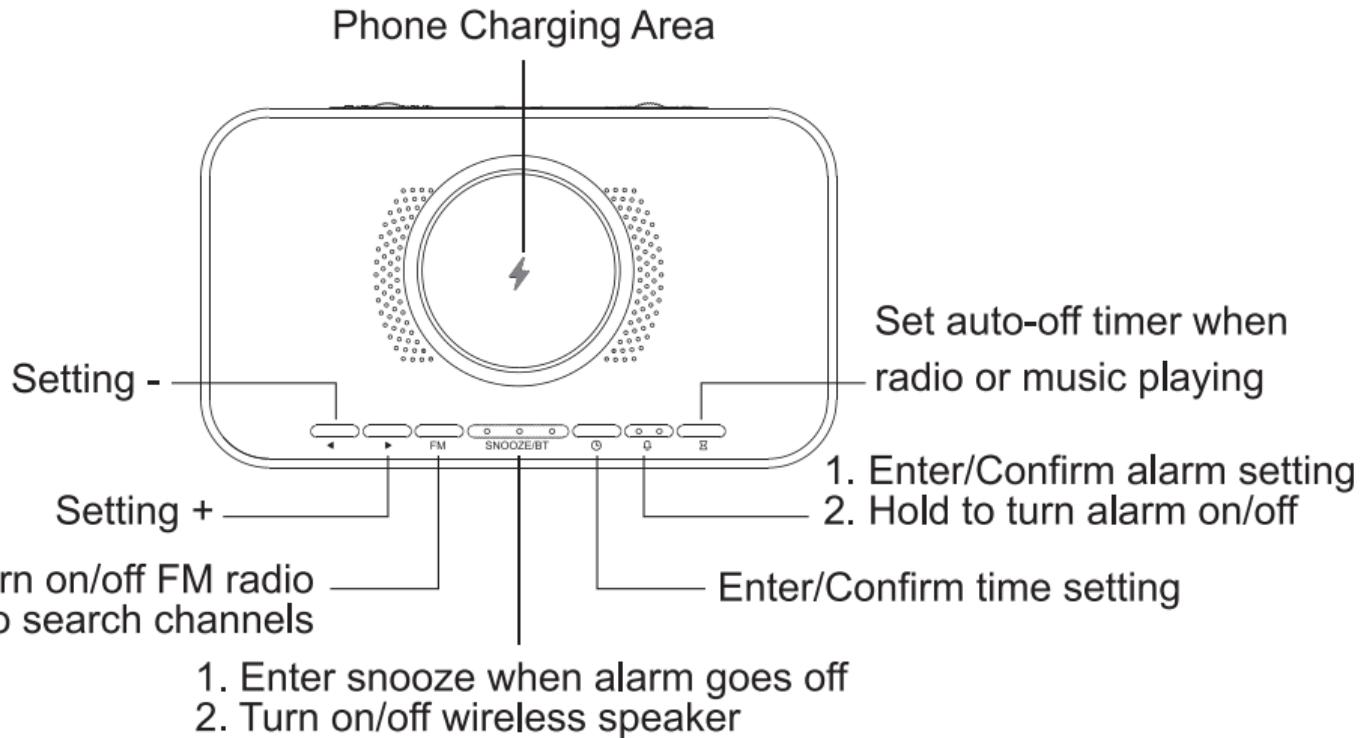

Front View



Back View

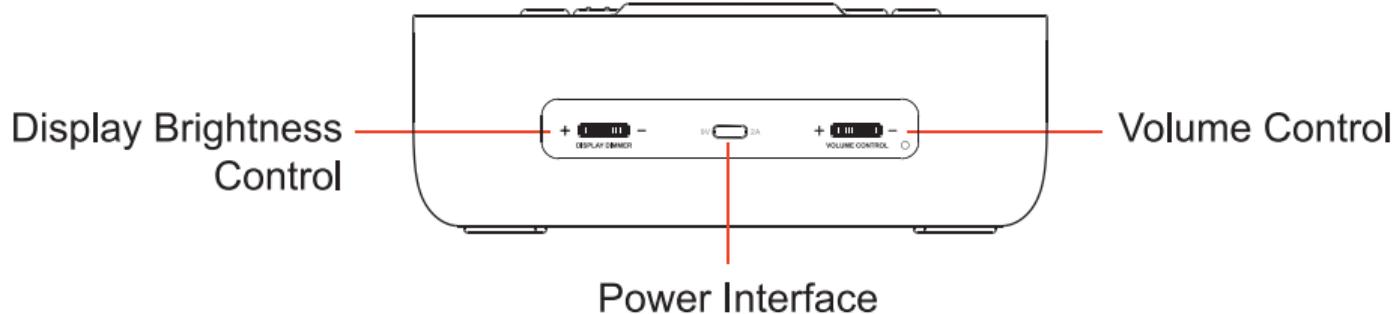

Time Setting



- ① Press “ 

Example: The default time is “AM 12:00”, but the correct time is “AM 12:30”.
Correct the minute as below.

1. Press “ 

5

Alarm Setting



- ① Press “ 

Notice:

1. Make sure you have set the FM radio channel before choose radio alarm ringtone.
2. The P06 ringtone is the last played FM radio channel.

Alarm Pause /Snooze



- ① Press “ 

6

Notice:

1. The “  ” icon will blink as you press the snooze, and it won’t blink when you stop the alarm.
2. If you do not press any button, the alarm will last for 10 minutes.

Alarm On/Off



Long press “  ” for 2s to turn on or off the alarm. If the “  ” icon displays, it means the alarm is on. Otherwise, the alarm is off.

FM Radio Setting

FM



Please extend the FM antenna on the back of the machine.

① Turn ON/OFF: press “ FM ”.

② Adjust volume: Scroll “ +  - ” (U00-U30).

Manual Tune FM Channel



Press “◀” / “▶” to tune radio frequency and long press “◀” / “▶” to tune quickly .

Auto Search FM Channel

 
FM

- ① Long press "FM" 2 secs to start auto-search.
- ② During the search, channels are saved automatically.
- ③ Once the station search is completed, press "FM" to select the saved radio station.

Notice:


Once auto search is completed, but you want to manual tune FM Channel, please RESTORE FACTORY SETTING.

Wireless Speaker Setting

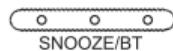

- ① Turn on: press “ ” .
- ② Connect: when the “ BT ” flashes, search and select R9BT-RA from the device list to connect.
- ③ Switch music: press “ ” / “ ” .
- ④ Adjust volume: scroll “ ” (U00-U30).
- ⑤ Play/Pause: press “ ” .
- ⑥ Turn off: long press “ ” for 2s(“ BT ” will disappear).

Connect Wireless Speaker:

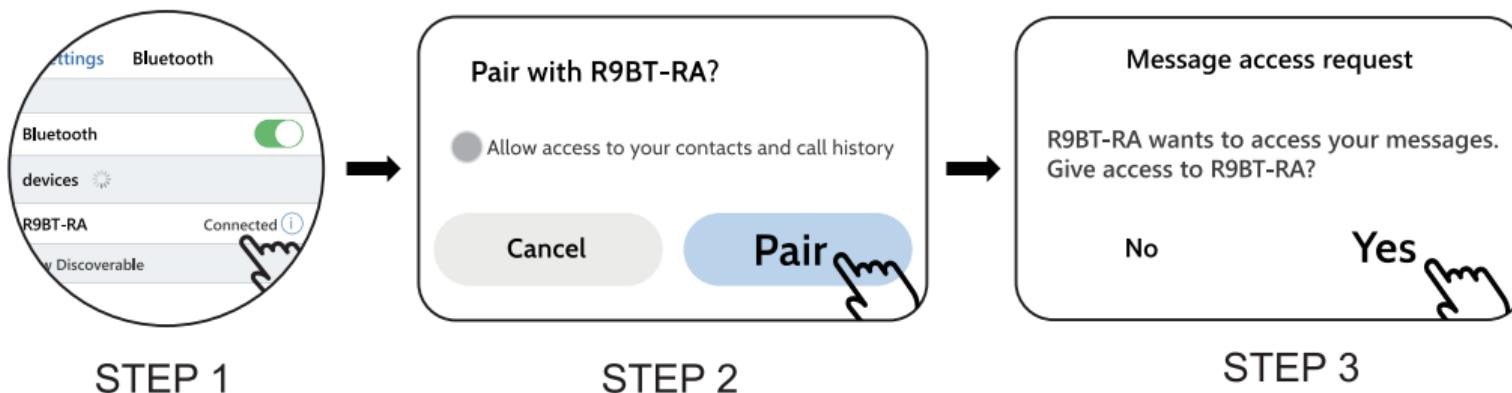

Notice:

1. The wireless speaker function is only for music play, not for phone calling.
2. The time will auto-sync when connected to your phone.
3. If the connection is successful, "BT" icon will continuously display on the R9BT-RA.

Auto-off Timer Setting



When the radio/wireless speaker is playing, press “  ” to preset duration to auto-turn off.

- ① Turn on: press “  ” (repeatedly press to select time).
- ② View Remaining Duration: press “  ” during the timing process.
- ③ Select Options: 30min-1H-2H-OFF.

Display Dimmer Setting



Scroll the “ +  - ” to brighten/dim the display brightness.

Wireless Phone Charging



Place your phone horizontally on the phone wireless charging area. The magnetic alignment function will automatically attach the phone, keeping it in the correct position.

Notice:

1. Please charge with a bare phone or phone with a metal-free & less than 3 mm thick phone case.
2. The magnetic alignment experience only applies to iPhone 12,13,14 and 15. Equipped with MagSafe case, its magnetic alignment function will be better.

Restore Factory Setting



Simultaneously hold “◀” and “☒” for 2s to restore factory settings.



Support & Warranty

Reacher backs 45-day refund policy and 12-month warranty for products in our store. 7×12H service: **customer@reachershop.com**. If you have any questions, please feel free to contact us.

Safety Instructions

- (1) To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.
- (2) To avoid damage, never place the unit near radiators, in front of heating vents, under direct sunlight or near water.
- (3) When disconnecting the power supply, pull the plug first. Do not pull the cord by itself. Never handle the power plug with wet hands, as this could cause fire or electric shock.
- (4) Do not open the housing.
- (5) Do not twist or pinch the power supply cord. If the plug or power supply cord needs to be replaced, ensure that it complies with the manufacturer's recommendation.

Battery Warning

WARNING

- **INGESTION HAZARD:** This product contains a button or coin cell battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.



Please note the following about the battery:

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.

- Call a local poison control center for treatment information.
- The machine has a built-in CR2032 battery.
- The nominal voltage of a CR2032 battery is 3 volts.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
- Batteries are not replaced by the consumer.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

(3) To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body:
Use only the supplied antenna.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.