

115mm×45mm PSSD说明书 (9p)

110g黑卡纸 灰色部分烫哑银

正

反

User Manual
for Apple Find My
苹果查找定位功能使用说明

 Works with Apple Find My

MOVE SPEED
Portable Solid State Drive

EN Instruction

To use the Apple Find My app or Find Items app to locate this item, the latest version of iOS, iPadOS, watchOS or macOS is recommended.

The anti-loss device is powered by a button cell battery, with an expected battery life of approximately 1 year. The battery can be replaced by removing the battery compartment cover yourself.

Button Function	Operating
Power on / Pairing Mode	Long press the button until you hear 1 beep, then release it to power on and initiate pairing mode.
View Serial Number	Long press the button until you hear 2 consecutive beeps, then release it to view the serial number in Find My.
Power off / Disable Mode	Long press the button until you hear 3 consecutive beeps, then release it to power off. The product will not be locatable at this time.
Restore	Long press the button until you hear a long beep, then release it to restore factory settings. You can then pair it with an Apple device again.

Add CK20C to Find My

1. Follow the manufacturer's instructions to make the item discoverable.
2. In the Find My app, tap , then choose Add Other item.
3. Tap Connect, type a name and select an emoji, then tap Continue.
4. Tap Agree to register the item to your Apple ID, then tap Finish.

See the location of CK20C

1. Tap Items at the bottom of the screen, then tap the item you want to locate.
If the item can be located, it appears on the map so you can see where it is.
The location and timestamp appear below the item's name. The item's location is updated when it connects to the Find My network.
2. If the item can't be located, you see where and when it was last located.
Below Notifications, turn on Notify When Found. You receive a notification once it's located again.
3. Tap Items at the bottom of the screen, then tap the item you want to get directions to.
3. Tap Directions to open Maps.
4. If CK20C is near you, back to Find My, tap Find, move follow the onscreen instructions.
5. Tap the Play Sound button to play a sound on your CK20C. When you locate it, tap the Close button.

Set separation alerts

1. Tap Items at the bottom of the screen, then tap the name of the item you want to set an alert for.
2. Below Notifications, tap Notify When Left Behind.
3. Turn on Notify When Left Behind.
4. If you want to add a Trusted Location, you can choose a suggested location, or tap New Location, select a location on the map, then tap Done.
5. Tap Done.

Turn on Lost Mode

1. Tap Items at the bottom of the screen, then tap the name of the lost item.
2. Below Lost Mode, tap Enable.
3. Follow the onscreen instructions to enter a phone number where you can be reached. To enter an email address instead, tap Use an email address.
4. Tap Activate.

Remove from Find My

1. Tap Items at the bottom of the screen, then tap the item you want to remove.
2. Bring the item near your iPhone.
3. Tap Remove item, then follow the onscreen instructions.
4. Long press the button until you hear a long beep, then release it to restore factory settings. You can then pair it with an Apple device again.

About Apple Find My

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPod, iPadOS, Mac, macOS and watchOS are the trademarks of Apple Inc. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

MOVE SPEED

CN 使用须知

移送CK20C移动固态硬盘内置防丢器，需搭配苹果iPhone/iPad/Mac电脑的“查找”APP、Apple Watch手表的“查找物品”APP使用，建议将设备系统更新至最新版本。

防丢器使用纽扣电池供电，预计有效使用时间为1年，可拆卸电池仓盖后自行更换。

按键功能	操作说明
开机, 启动配对模式	长按按键, 直到听到1声提示音后松开, 即可开机, 并启动配对模式。
查看序列号 (APP识别未知物品)	长按按键, 直到听到连续2声提示音后松开, 即可在Find My中查看序列号。
关机, 进入disable状态	长按按键, 直到听到连续3声提示音后松开, 即可关机, 此时产品将无法被查找。
恢复出厂设置	长按按键, 直到听到长音的提示音后松开, 即可恢复出厂设置, 可重新与苹果设备进行配对。

添加到查找

1.长按CK20C背面的功能键，开机并进入配对模式；
2.打开苹果设备的“查找”或“查找物品”APP，轻点“+”，然后选择“添加其他物品”；
3.轻点“连接”，键入名称并选择表情符号，然后轻点“继续”；
4.轻点“同意”以将物品注册到Apple ID，然后轻点“完成”。

查看物品位置

1.打开“查找”或“查找物品”APP，轻点屏幕底部的“物品”。
如果物品被定位，设备会显示在地图上，以便你查看其位置。位置和时间戳会出现在物品名称下方。物品的位置信息会直接报到“查找”网络时更新。
如果无法定位物品，你会看到物品上次定位的位置和时间。在“通知”下方，打开“找到时通知”。再次找到后，你会收到通知。
2.轻点物品以获取前往其位置的路线。
3.轻点“路线”以打开“地图”。
4.如果物品已在附近，回到“查找”APP，轻点查找，跟随箭头移动靠近。
5.轻点“播放声音”按钮以让CK20C发出声音，在找到后轻点“关闭”按钮以关闭声音。

打开“丢失模式”

1.轻点屏幕底部的“物品”，然后轻点丢失物品的名称。
2.在“丢失模式”下方，轻点“启用”。

删除物品

1.轻点屏幕底部的“物品”，然后轻点要删除的物品。
2.将物品靠近iPhone。
3.轻点“删除物品”，然后按照屏幕指示操作。
4.长按按键，直到听到长音的提示音后松开，即可恢复出厂设置，可重新与苹果设备进行配对。

EN Scan the QR code to view the complete user guide.
FR Scannez le code QR pour consulter le guide d'utilisation complet.
DE Scannen Sie den QR-Code, um das vollständige Benutzerhandbuch anzuzeigen.
ES Escanee el código QR para ver la guía completa del usuario.
PT Digitale o código QR para visualizar o guia completo do usuário.
IT Scansionare il codice QR per visualizzare la guida completa dell'utente.
RU Отсканируйте QR-код, чтобы просмотреть полное руководство пользователя.
SC 扫描二维码查看完整使用指南。
JP QRコードをスキャンして完全なユーザーガイドを表示します。
KR QR 코드를 스캔하여 완전한 사용자 가이드를 보십시오.
AR مسح الباركود ل просмотр المنشورة على الخلف.



操作说明
Instructions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meeel general RF exposure requirement. The device can be used in porlable exposure condition without restriction.