

connection on USB flash drive (TF card), and prompt voice Colorful light (11)

After Bluetooth speaker is turned on, Short press the button(8)to switch colorful lights Double click button (8) turn off colorful lights. There are 7 modes for colorful lights.

U Disk Play Plug the U disk stored with Mp3 music into the Store through the USB port.

disconnect the Bluetooth of the stereo, and play the music one the U Disk.

(Maximum support 32GB)

Micro SD Card(TF) Play

Plug the Micro SD Card (TF) stored with Mp3 music into the Store through the Micro SD Card (TF) port. disconnect the Bluetooth of the stereo, and play the music one the Micro SD Card(TF). (Maximum support 32GB)

Charger

USB-A (DC 5V2.1A) and USB-C(15W)ports can charger low-power mobile devices.

(Press button (8) when the main power switch is not turned on to charge the device)

Low-Voltage Battery Protection

Low voltage protection is our primary consideration for protecting your valuable battery.

If the battery voltage is below 15.5V, the speaker will emit a "Power low", Indicates the voltage is too low.

When the battery voltage drops to 15V, the speaker will emit a "Power off", the device will automatically shut down to prevent any damage.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

BATTERY POWERED BLUETOOTH SPEAKER

BST01 series

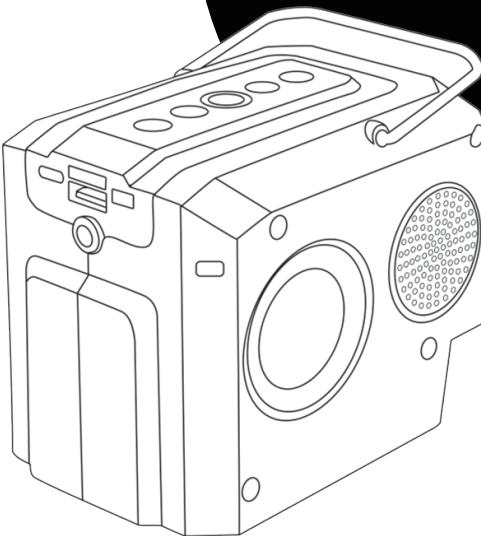


Important Safety instructions

- ❶ Read these instructions.
- ❷ Follow these instructions.
- ❸ Pay attention to all warnings.
- ❹ Do not use this speaker near water.
- ❺ Clean with a relatively dry cloth.
- ❻ Do not block any ventilation openings. Install according to manufacturer's instructions.
- ❼ Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- ❽ Only use attachments/accessories specified by the manufacturer.
- ❾ Only use the relevant 18V/20V MAX Li-ion battery.

Storage Recommendations

1. The most ideal storage place is one that is cool and dry, keep away from direct sunlight and excess heat or cold.
2. For long storage, please power on the speaker with the battery no longer than 2 months for the best results.

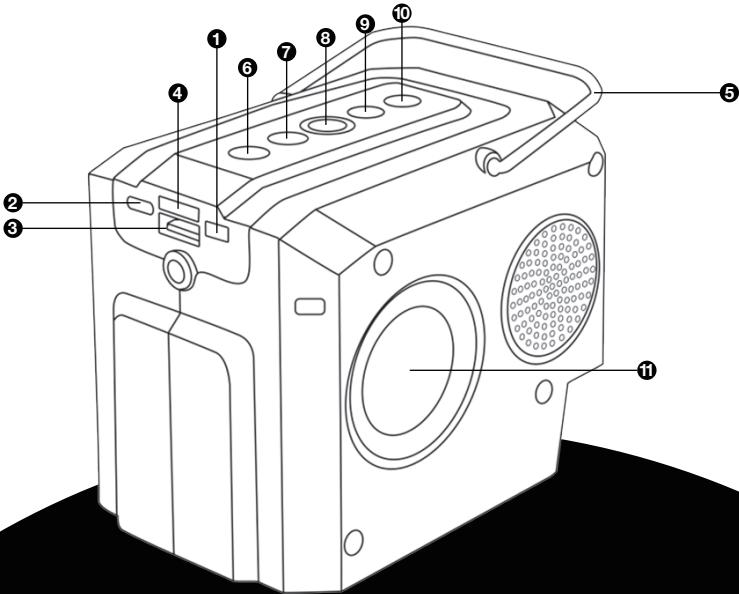

COMPONENTS

- ① Power switch (USB-A/USB-C Output)
- ② USB-C Fast Charging Port
- ③ USB-A Charging Port
- ④ TF Card
- ⑤ Handle
- ⑥ Bluetooth Paring Button (OR Switching playback devices)
- ⑦ (Play/Pause) /Pair two speaker
- ⑧ Power Button (Speaker)/Colorful light Button
- ⑨ Volume Button-/Last Song
- ⑩ Volume Button +/Next Song
- ⑪ LED Flash Light

Operation

Warning: Please turn off the speaker and remove the battery pack before making any adjustments.
 The speaker is compatible with Related 18V/20V MAX batteries.
 The package only contains the speaker, not include the battery.
 To power the speaker, plug in the battery.

Note: For the best performance, make sure the battery pack is fully charged before plugging in.

Installing and Removing the Battery Pack :

To install the battery pack calibrate the battery pack with the rails on the sides of the port and slide the battery the battery in until the battery pack is firmly seated.

To remove the battery pack from the speaker, press there lease button and firmly pull the battery pack out of the port.

Powering The Speaker ON and OFF Long press the power button(⑧) for more than two seconds will turn the speaker on or off.

The LED indicator around the power button indicate the status of the speaker.

Paring Speaker with BLUETOOTH DEVICE

- 1.Place the speaker and the Bluetooth device within 2meters for both devices
- 2.Turn on the speaker by pressing the power button
- 3.The speaker prompts "Power On, Bluetooth mode", and the LED indicator light flashing rapidly indicating that the speaker is in pairing mode and can be used by Bluetooth Device discovery, the speaker name is displayed as "BST01". Turn off the speaker by pressing the power button
- 4.The speaker prompts "Power Off"
- 5.Once successfully connected, The speaker prompts"connected" and the LED indicator around the power button is solid light Pairing Speakers with one Bluetooth Device For Dual Sound Track Stereo Effect
- 6.confirm and connect the speaker on your Bluetooth device

Speaker has not connected with Bluetooth device.

- 1.Turn on speaker by pressing the Power button (⑧).
- 2.Speakers are discovered by your Bluetooth device connect speakers named "BST01" to you Bluetooth device.After successful pairing, the LED indicators on the speakers is solid light, and respectively prompt "connected".
- 3.Getting Phone Calls While Connecting with the Speaker Once pick up the call, the music will automatically pause and switch the sound to your phone.

Functionality

Adjusting the Speaker Volume

The volume of the speaker can be adjusted (increased/decreased)by long pressing the volume button (⑨) or (⑩). When the maximum volume is reached the speaker will emit a tone.

Our speakers can switch music by short pressing the volume button (⑨) or (⑩).

Short press volume (⑨) to switch to the last song, short press volume (⑩) to Switch to the next song.

Play/Pause ⑦ Short press the button (⑦) to play/ pause switch.The indicator light (⑧) stays on during playback and stays on when paused.Switching playback devices (⑥),switching Bluetooth