


size: 95mm (W) x 135mm (H)

## myWaves Memory Headband

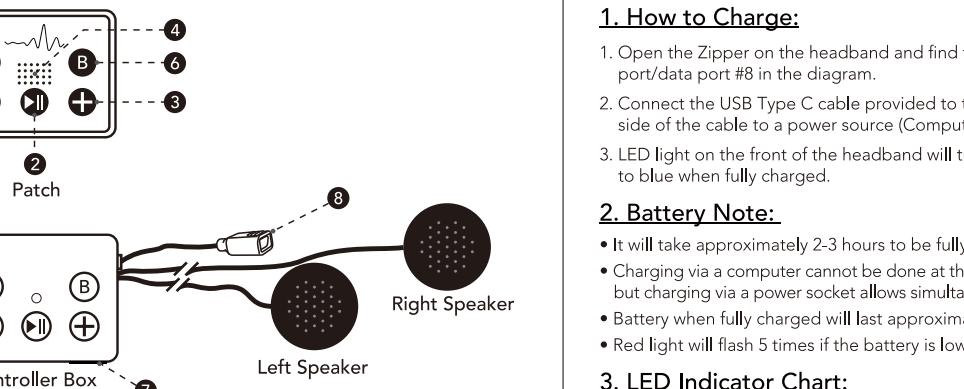

Speakers are found inside the headband and can be adjusted over your ears by moving the materials around the speaker.



STATUS	INDICATOR
Bluetooth Pairing Mode	Red and blue light flash alternately
Bluetooth Connected	Blue light flashes slowly
Memory Card Mode	Blue light flashes twice slowly
Charging	Solid red light
Charging Complete	Solid blue light

### Button Functions:

- **Power on:** Hold Down the **▷||** button for 3 Seconds
- **Power off:** Hold Down the **▷||** button for 3 Seconds
- **Increase Volume:** short press + Button
- **Decrease volume:** short press - Button
- **Previous Music:** Hold press the - Button
- **Next Music:** Hold press the + button
- **Play Music:** Short press **▷||** button
- **Pause Music:** Short press **▷||** button
- **Switch to Memory Card Mode:** Short press M button
- **Switch to Bluetooth Mode:** Short press B button
- When power on the headphone will be in Memory Card Mode by default.

### 1. How to Charge:

1. Open the Zipper on the headband and find the USB Type C charging port/data port #8 in the diagram.
2. Connect the USB Type C cable provided to the charging port and the other side of the cable to a power source (Computer or Power Socket).
3. LED light on the front of the headband will turn red while charging and change to blue when fully charged.

### 2. Battery Note:

- It will take approximately 2-3 hours to be fully charged.
- Charging via a computer cannot be done at the same time as listening to sounds, but charging via a power socket allows simultaneous listening and charging.
- Battery when fully charged will last approximately up to 9 hours.
- Red light will flash 5 times if the battery is low.

### 3. LED Indicator Chart:

STATUS	INDICATOR
Bluetooth Pairing Mode	Red and blue light flash alternately
Bluetooth Connected	Blue light flashes slowly
Memory Card Mode	Blue light flashes twice slowly
Charging	Solid red light
Charging Complete	Solid blue light

### 4. Upload MP3 Sound file into Memory Card:

This will allow you to play your sound on the headband without being connected to Bluetooth.

1. Make sure your MP3 file is saved on the computer so it can be copied or saved to the Headband Memory Folder.
2. Unzip the headband to find the USB Type C charging port/data port #8 in the diagram.

3. Connect the cable to the USB Type C charging port/data port #8 and the computer.
4. Go to File Folder inside the Computer and go to the bottom of the list to find a new drive named "myWaves". Ensure the headband is switched on.

5. Copy your MP3 or Drag the file to the "myWaves" folder in the new drive for the Headband that is showing in file folder.

### 5. To Play Sound in Memory without Bluetooth:

1. First upload the MP3 file to Memory using the steps outlined in "Upload MP3 Sound file into Memory Card".
2. If there are MP3 files on the memory card, press **>||** to play sound. If there is no music file in the memory card, the device will automatically switch to Bluetooth mode when powered on. Short press the B button to switch to Bluetooth mode if needed.
3. LED light on the front of the headband will turn red while charging and change to blue when fully charged.

### 6. Pair with Bluetooth Device:

1. Hold Down the play button for 3 Seconds until Status light #4 starts flashing red and blue.
2. Turn the Bluetooth function on the device to be paired.
3. Select, on a paired device, the device name "Musical Eye Mask" from the list of found devices.
4. The passcode is 0000 if asked.
5. Blue light will flash slowly if successfully paired with the headband.

### 7. Play Music with Bluetooth Pairing:

1. Hold down the **▷||** button quickly to start music or pause.
2. Adjust Volume by pressing + Up or - Down with a short press of a button.
3. Make sure your MP3 file is saved on the computer so it can be copied or saved to the Headband Memory Folder.
4. After pairing with a Bluetooth-enabled device, you may need to open the music player on your device to start playing music.

### 8. Stop Bluetooth and Use a Memory Card Sound:

1. Short press the M button to enter the memory card mode.
2. Hold Down **▷||** button to start Memory Card Music.
3. Adjust Volume by Pressing + Up or - Down with a short press of each button.

## Front\_English

## 128g copperplate paper

### 9. Troubleshooting:

1. Ensure the product is fully charged, switched on, paired, or connected to the memory card.
2. If there are MP3 files on the memory card, press **>||** to play sound. If there is no music file in the memory card, the device will automatically switch to Bluetooth mode when powered on. Short press the B button to switch to Bluetooth mode if needed.
3. The status light #4 will start flashing red and blue when in Bluetooth pairing mode.
4. Short press the + and - buttons to increase or decrease the volume.

### 10. Washing Guidelines:

Please unzip the headband and remove the electronic parts that are connected before hand washing the product.

	Wash with cold water		DO NOT dry clean
	Hand wash ONLY		DO NOT bleach
	DO NOT tumble dry		DO NOT iron

### 11. Specifications:

- Bluetooth Version: V5.2
- Frequency: 2.402 GHz - 2.480GHz
- Transmission Range: 20M/66FT
- Rated Power: RMS 10mW x 2
- Speaker Unit: 32Ω x 20mm
- Battery: 3.7V 300mAh Rechargeable Li-Polymer Battery
- Charge Time: 2-3 hours
- Battery Length: Approx 12 Hours

### Customer Support:

Please contact info@mywaves.tech if you have further questions.

### 1. Dangers of Injury:

- Keep the product and the package away from children and animals, as they can swallow small parts.
- Supervise children using the product. It is not a toy.
- Always maintain a gap of at least 10 cm between the headphones and a pacemaker or an implantable cardioverter defibrillator (ICD) as the product generates magnetic fields.

### 2. Danger of Fire:

**Caution!** Don't expose the headphones to any high temperatures over 70 degrees Celsius (Like hair dryers, heating, prolonged sunlight etc.). The battery inside the headphones may overheat.

	Wash with cold water		DO NOT dry clean
	Hand wash ONLY		DO NOT bleach
	DO NOT tumble dry		DO NOT iron

### 3. FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to the general RF exposure requirement. The device can be used in portable exposure condition without restriction.