



APPLICATION CC. AIR LIGHT

WWW.CARGOCONTAINER.CAMP



APPLICATION MANUAL AIR LIGHT

CARGO CONTAINER
AIR LIGHT
95-41 MM

ENGLISH

APP INSTALL


EN

APP Installation

PLEASE SCAN THE QR CODE BELOW OR SEARCH FOR 'CARGO CONTAINER' ON GOOGLE PLAY STORE OR APP STORE TO INSTALL THE APP.



SEARCH FOR
'CARGO CONTAINER'
IN THE SEARCH BAR.

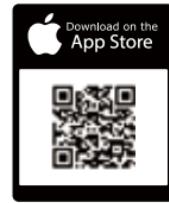

SEARCH FOR
'CARGO CONTAINER'
IN THE SEARCH BAR.




EN

Language Setting

a THIS IS THE HOME SCREEN OF THE APP.
TAP THE LIST BUTTON ON THE TOP RIGHT
CORNER TO ACCESS THE SETTINGS MENU.




b SELECT 'LANGUAGE'.

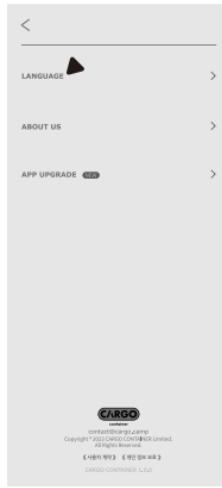

EN

c CHOOSE YOUR DESIRED LANGUAGE FROM THE
SUPPORTED LANGUAGES IN THE APP.

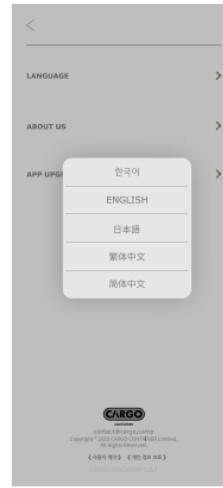


HOW TO USE

Cargo
cargo.com

EN

Bluetooth Pairing

a PRESS THE POWER BUTTON THREE TIMES IN A ROW. FIRST, PRESS THE POWER BUTTON TWICE, THEN PRESS THE THIRD BUTTON FOR 1.5 SECONDS.

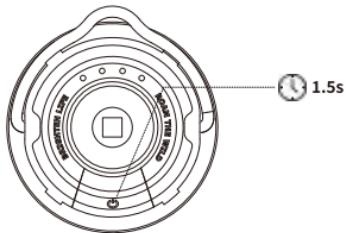

HOW TO USE

EN

Add New Product

a ON THE APP'S HOME SCREEN, TAP THE "ADD PRODUCT" BUTTON TO REGISTER A NEW PRODUCT.



b WHEN THE DEVICE SEARCH IS SUCCESSFUL, A LIST OF AVAILABLE PRODUCTS FOR REGISTRATION WILL BE DISPLAYED. SELECT THE PRODUCT YOU WANT TO CONNECT FROM THE LIST.



c ONCE THE DEVICE IS SUCCESSFULLY CONNECTED, YOU WILL BE TAKEN TO THE MAIN CONTROL SCREEN WHERE YOU CAN CONTROL THE DEVICE.



HOW TO USE

EN

Main Control Screen

a Power ON/OFF


TOUCH THE BUTTON TO TURN THE POWER ON/OFF.

a ● —
POWER ON/OFF

b ● —
REGISTERED
PRODUCT
DISPLAY

c ● —
BATTERY
INDICATOR

d ● —
ADJUST
BRIGHTNESS

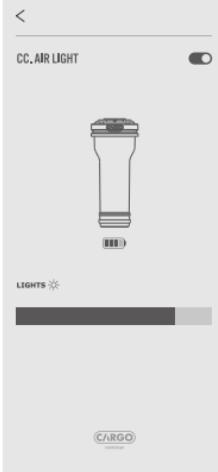

b Registered Product Display

SHOWS THE CURRENTLY PAIRED PRODUCT.

c Battery Level Display

SHOWS THE REMAINING BATTERY LEVEL.

d Adjust brightness

YOU CAN CONTROL THE BRIGHTNESS BY DRAGGING THE ADJUSTMENT BAR WITH YOUR HAND.


EN

Rename Product

a TO RENAME A PRODUCT IN THE REGISTERED PRODUCT LIST, LONG-PRESS THE PRODUCT YOU WANT TO RENAME.




b ON THE NEXT SCREEN, SELECT "RENAME" TO ACCESS THE RENAMING SCREEN.

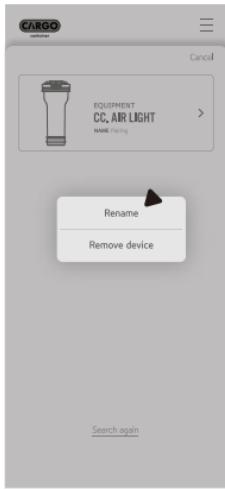

EN


c ON THE RENAMING SCREEN, ENTER THE DESIRED PRODUCT NAME AND PRESS "SAVE" TO CHANGE THE REGISTERED NAME.

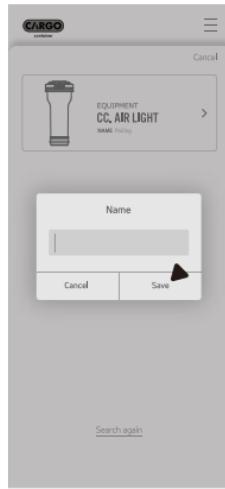

HOW TO USE

Delete Device

a TO DELETE A DEVICE FROM THE REGISTERED PRODUCT LIST, LONG-PRESS THE PRODUCT YOU WANT TO DELETE.

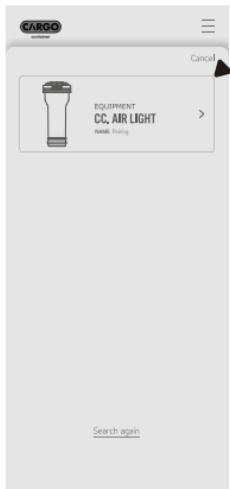

b IF YOU WANT TO RE-REGISTER THE PRODUCT, PRESS THE "ADD PRODUCT" BUTTON ON THE APP'S HOME SCREEN TO REGISTER IT AGAIN.



c IF YOU WANT TO RE-REGISTER THE PRODUCT, PRESS THE "ADD PRODUCT" BUTTON ON THE APP'S HOME SCREEN TO REGISTER IT AGAIN.



HOW TO USE