

尺寸:8\*8.5cm

印刷要求:双面印刷, 风琴折, 彩印

8cm

正面

8.5cm

Air Wallet Pro

User Manual

Works with

Apple Find My

INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE USE

Index

01 Getting Started

02 Add Your Air Wallet Pro

03 Locate Your Air Wallet Pro

04 Notifications

05 When Your Air Wallet Pro Is Lost

06 Resetting Air Wallet Pro

07 Extras

08 The Fine Print

⚠ WARNING

• **INGESTION HAZARD:** This product contains a button cell or coin battery. **DEATH** or serious injury can occur if ingested.

• A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.

• **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**

• **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

!

Getting Started

01

Function Button

01.1 Power On / Off:

• Hold your Air Wallet's Function Button to turn on, it should beep once indicating it is powered on.

• Power off: When the device is powered on, press and hold the button for at least 3 seconds, followed by a power off prompt sound.

01.2 Check For Updates:

• By using the Apple Find My app, you can find your **Air Wallet Pro** from your iPhone, iPad, iPod touch, or Mac

02

Add Your Item Locator

02.1 Start The App

• Open Find My app on your supported iPhone.

• Allow notifications from the app.

02.2 Connect Your Air Wallet Pro

• Power on your Air Wallet Pro.

• Once your Air Wallet Pro is located, tap "connect"

• Enter a name and choose an emoji for your Air Wallet Pro and tap "Continue".

• Find My will ask for confirmation to add your Air Wallet Pro to your Apple ID Tap "Agree"

• Tap "Finish" and your Air Wallet Pro will be set up and ready to be used

Locate Your Item

03

03.1 Find Air Wallet Pro When It's Nearby:

• Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.

• Tap on your Item from the list.

• Tap "Play Sound" to make your Item beep.

• Tap "Stop Sound" to stop the beeps once you find.

03.2 Find Air Wallet Pro's Location:

• Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.

• Tap on your Air Wallet Pro from the list.

• Your Air Wallet Pro's location will appear on the Map with a time stamp of when the item was located.

• To navigate to the Air Wallet Pro's location, tap "Directions" to open Apple Maps .

04

Notifications

04.1 Enabling "Notify When Left Behind":

• Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.

• Tap on your Air Wallet Pro from the list.

• Under "Notifications" enable the "Notify When Left Behind" toggle.

• You will receive a notification when you leave your Air wallet pro behind and it's no longer in range of your device.

04.2 Enabling "Notify When Found":

• Under "Notifications", enable the "Notify When Found" toggle.

• When your Air Wallet Pro is seen by another Find My network device, you will receive a notification of its location.

• Note : "Notify When Found" can only be activated when your Air Wallet Pro is out of range.

<div><div>When Your Air Wallet Pro Is Lost</div><div>05</div></div> <div><div>05.1 Enabling "Lost Mode":</div><div><div>• Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.</div><div>• Tap on your Air Wallet Pro from the list</div><div>• Under "Lost Mode" tap "Enable"</div><div>• A screen detailing Lost Mode will pop up, tap "Continue"</div><div>• Enter your phone number or email address and tap "Next".</div><div>• You may enter a message that will be shared with the person that finds your item.</div><div>• Tap "Activate" to enable "Lost Mode"</div><div>• Note: When "Lost Mode" is enabled, "Notify When Found" is automatically enabled.</div><div>• Note: When" Lost Mode" is enabled, your Air wallet prois locked and cannot be paired to a new device.</div></div></div>	<div><div>06</div><div>Resetting Air Wallet Pro</div></div> <div><div>06.1 Remove The Air Wallet Pro From Find My App:</div><div><div>• Open Find My app and select the "Items" tab.</div><div>• Tap on your Air Wallet Pro from the list.</div><div>• Please ensure "Lost Mode" is disabled.</div><div>• Scroll to the bottom of the screen and tap "Remove Item"</div><div>• A summary will open, tap "Remove" to confirm.</div></div><div><div>06.2 Factory Reset Your Air Wallet Pro:</div><div><div>• After successfully removing the AirWallet from Find My app, press the AirWallet's function button four times rapidly and then hold it a fifth time until you hear a ringing chime.</div><div>• The AirWallet is now reset and ready to be paired to a new device.</div></div></div></div>	<div><div>Extras</div><div>07</div></div> <div><div><div><div></div><div></div></div></div><div><div>07.1 Replace The Battery:</div><div><div>• Remove the screws on back of your Air Wallet with a screwdriver</div><div>• Replace the batteries with new CR2016 battery placing them negatively up (text facing down).</div><div>• Carefully close the Air Wallet Pro by fastening the screws on both sides.</div></div><div><div>07.2 Unwanted tracking:</div><div><div>If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways:</div><div><div>• 1. If you have an iPhone, iPad, or iPod touch, Find My will send anotification to your Apple device. This feature is available on iO or iPadOS 14.5 or later.</div><div>• 2. If you don't have an iS device or a smartphone, a Find My network accessory that isn't with its owner for a period of time will emit a sound when it's moved.</div></div><div><div>These features were created specifically to discourage people fromt lying to track you without your knowledge.</div></div></div></div></div></div>	<div><div>08</div><div>The Fine Print</div></div> <div><div>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes not expressly approved by the party responsible for compliance could void the user's authority to operate this device. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure conditions without restriction. Federal Communication Commission (FCC) Radiation Exposure Statement Power is so low that no RF exposure calculation is needed.</div><div><div>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy andit not installed and used in accordance with the instructions, may cause harmful interference to radio communications.However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from thatto which the receiveris connected .</div><div><div>Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards. Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are trademarks of Apple Inc., registered in the U.S. and other countries. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.</div></div></div></div>	<div><div>Statements</div><div>09</div></div> <div><div><div><b>a )</b> Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.</div><div><b>b )</b> Used batteries may also cause severe injury or death.</div><div><b>c )</b> Call a local poison control center for treatment information.</div><div><b>d )</b> Battery Type: CR2016</div><div><b>e )</b> Nominal Battery Voltage: 3. 0V</div><div><b>f )</b> The batteries include are non-rechargeable batteries and they are not to be recharged.</div><div><b>g )</b> Do not force discharge, recharge, disassemble, heat above 60°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.</div><div><b>h )</b> While replace the batteries, make sure their negative ( - ) side up.</div><div><b>i )</b> Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.</div><div><b>j )</b> Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.</div><div><b>k )</b> Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.</div></div><div><div>Warning: This product contains a button cell or coin battery.</div></div></div>	<div><div>10</div><div>FCC Instructions</div></div> <div><div><b>Caution:</b> Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.</div><div><div><b>NOTE:</b> This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</div><div><div>-Reorient or relocate the receiving antenna.</div><div>-Increase the separation between the product and receiver.</div><div>-Connect the product into an outlet on a circuit different from that to which the receiver is connected.</div><div>-Consult the dealer or an experienced radio/TV technician for help.</div></div><div><div>This device complies with part 15 of the FCC Rules. Operation is subject to thefollowing two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</div></div><div><div>Any changes or modifications not expressly approved by the party responsiblefor compliance could void the user's authority to operate the equipment.</div></div><div><div>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</div></div><div><div>FCC ID: 2BKXH-WALLET-TAN</div></div></div></div>
---	--	--	--	--	--