


尺寸: 840X160MM, 单页120X160MM, 七折页

折页首页

折页尾页

Olfjork
Smart Pet Feeder
 VideoType
 Instruction Manual
 Model: PF002V

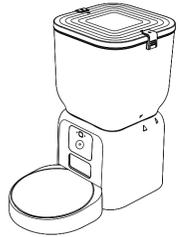

Please Read the Manual Carefully Before Using the Product


Safety Instructions

⚠ Please read the instruction manual carefully before using the product and keep it in a safe place.


- When using this product with children, please use it with a parent.
- Do not use the feeder on pets that cannot reach the food dish or have physical disabilities.
- Do not store the feeder outdoors or on wet floors.
- Do not immerse the feeder in water to avoid component damage.
- Do not place canned or wet food in the feeder.
- Do not disassemble or modify the equipment by yourself.
- If the unit is malfunctioning or has damaged parts, do not attempt to repair the pet feeder by yourself, contact your dealer immediately and resolve the problem.
- Be sure to unplug the product when not in use or before cleaning the product.
- If the power plug of the device is damp, turn off the power at the outlet and do not try to unplug it.
- Do not allow your pet to chew or swallow any of the accessories.
- Do not use damaged power cords or plugs.
- Do not install or store the pet feeder in an exposed area. The ambient temperature for storage should be within the range of -10°C-40°C.
- Use alkaline 1 size batteries for power supply. Do not use rechargeable batteries.
- Check the battery regularly. Be sure to replace the battery with a new one if you are traveling for a long time or on business.
- Do not lift the feeder directly by the lid, food bucket or food tray. Use both hands to lift and carry by dragging the base while keeping the unit in an upright position.
- Only suitable for dry food with size 3-13mm in diameter. Larger foods may jam or block the food opening.
- Ensure that the pet food is fresh; it is recommended that user replace the desiccant every 30 days.
- Please read and follow all important instructions listed on the pet feeder and packaging.

Packing List

After opening the product package, please make sure the pet feeder is intact, please check the list to make sure the accessories are complete.

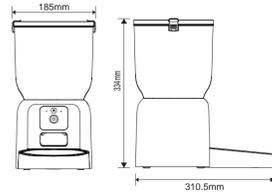


Accessories

 


Product Image

Front view

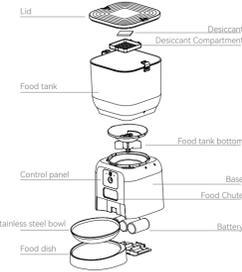

Bottom view

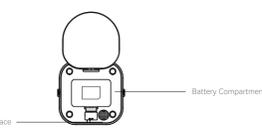

Button Description




Ⓢ **Feed:** double-click and short-press the feed button 2 times to dispense 1 serving of food.

Reset: long press for 7 seconds (reset) to emit " reset successfully" three sounds, red/blue indicator light is always on for 6 seconds to switch to slow flash (AP hotspot add mode), long press again for 7 seconds, the blue indicator light defaults to fast flash bluetooth searching fast network allocation. (Repeat long-press operation to switch between the two modes)

Indicator light color	Indicator light signal	equipment status
Blue	Flashing	To be set network
	Stay on	Network connected
Yellow	Stay on	Network connecting failure
Red	Flashing	Food get stuck
Green	Flashing	Feeding

Cleaning Instructions

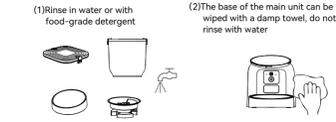

Specification

 
Food tank capacity: 4L
 Power supply: DC 5V/1A power adapter; 3pcs alkaline batteries
 Power adapter: AC110-240V input, DC5V output
 Size: 31.05*18.5*33.4CM

Cleaning and Maintenance


- For your pet's health, regular cleaning of the unit is recommended.
- When it starts to get dirty and there is a lot of loose food in the food chute, you can remove the food cover to clean it.
- Use a soft damp cloth to clean the base of the appliance which contains the control panel.
- Do not wet the appliance and do not use running water for cleaning.
- Do not put the product in the dishwasher as it will be permanently damaged!

Installation Guide

① **Install the top cover**
 Pick up the food tank lid with both hands, align it downward at the food tank buckle and fasten the buckles on both sides to finish.



② **Installing the bucket**
 Put the bucket into the corresponding Δ buckle track according to the illustration, align with the mark, and rotate clockwise from ③ to ④ until you hear a click. Tighten it, and make sure it is tightened again after the operation is completed.

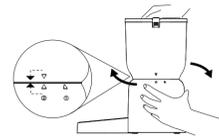

Instructions

01 | Installation

① Complete assembly according to the steps.



02 | Connect the power supply

- Plug the 5V/1A power adapter into the wall socket and connect the device.
- After plugging in, the bottom of the equipment is a rocker switch, which needs to turn on and the LED light will light up, indicating that the feeder is powered on.
- Open the battery compartment at the bottom of the feeder and install 3 pcs Size D Battery (not necessary) to prevent power failure.



Note:
 1) Does not including battery.
 2) Before turning on the power, make sure that all parts are clean and completely dry.

03 | Pour the pet food

- Open the lid by holding the buckles on both sides to open it outward.
- Add dry pet food.
- Close the lid and press the buckle on both sides to secure it.



Notes:
 1) Do not place canned, wet or damp pet food.
 2) Recommended pet food size range is 3-13 mm.

04 | Feed

① Manual feeding: double-click and short-press the feed button 2 times to dispense 1 portion of food.




05 | Reset


- Press and hold for 7 seconds to make a " reset successfully" sound, the device restores the factory settings, network information, feeding schedule, feeding records, etc.
- After reset, you can re-distribute the network.



Smart Life APP Specific Operations

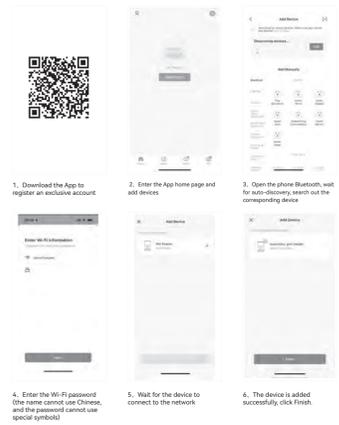

Smart Pet Feeder App Sharing

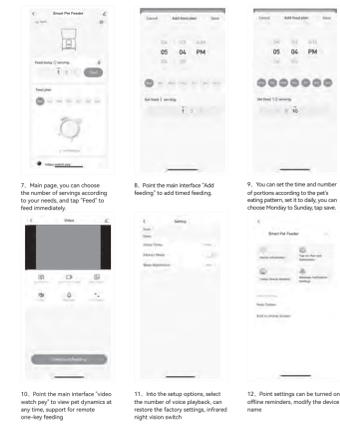

Smart Pet Feeder App Sharing



Simple Troubleshooting

Programs for problem solving

Q: The App can't connect to the feeder
 A: 1) Please check if the Wi-Fi name and password are in Chinese or longer than 12 digits, and make sure the Wi-Fi type is 2.4G.
 2) Please restart your phone, close the non-system software that starts automatically on boot, turn on the Bluetooth and positioning of your phone, and try to reconnect again.

Q: The feeder does not dispense food properly or does not dispense food at all
 A: Please check if there is too much grain in the food bowl or if it causes blockage of the grain passage, if so, please clean the grain passage and the grain outlet in time; when using battery power, please check if the battery is dead and if the battery is leaking.

Q: Feeder display offline
 A: Please check whether the distance of the feeder from your home router is more than 10 meters (effective distance of 10 meters), try not to separate walls in the middle, according to the characteristics of Wi-Fi, the Wi-Fi signal across the wall will drop sharply, and the connection appears to be unstable, which will lead to the device offline.

Q: No response to power on
 A: Please make sure the power is plugged in. If the check is correct and the device still does not power on normally, please contact your dealer or customer service in time.



Ningbo Thriving Intelligent Technology Co., LTD

Add: 45-1# Bei Yi Huan Road, Zhang qj Town, Cixi City, Ningbo, Zhejiang Province, China
 Tel: +86 574 63679665 Fax: +86 574 63677885
 E-mail: Service-EU@olfjork.com Service-US@olfjork.com
 Date of issue: 2024/09/06
 Version: V1.0

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.