

Tagigo User Manual

Introduction

Tagigo is a universal item finder which is compatible with both Google's Find My Device network and the Apple Find My network. Users can choose their preferred network during the initial pairing process. Once paired with an Android device, the finder operates as a Google's Find My Device locator tag until it is reset to factory settings. Similarly, when paired with an iOS device, it functions as an Apple Find My locator tag until a factory reset is performed.

Before you start

- Before you begin, ensure Bluetooth is enabled on your Android or iOS device, and that the device has internet access via Wi-Fi or cellular service.
- Locate the button on the finder, as shown in the picture below.



Get started with an Android device

- Place your finder near your Android device (Make sure your Android device is awake and unlocked) and press the button once to activate it. If activation is successful, you will hear a beep.
- Wait for a half-screen notification to appear, then follow the on-screen instructions on your Android device to add the Finder to Google's Find My Device network.

Get started with an iOS device

- Place your finder next to your iOS device and press the button once to activate it. If activation is successful, you will hear a beep.
- Open the Find My app on your iOS device, tap the **Items** tab, then tap “Add Item” or “+”, and select “**Add Other Item**” or “**Other Supported Item**”.
- Once the Find My app detects your finder, follow the on-screen instructions to add it to the Apple Find My network.

Locate your finder

- After adding your finder to Google's Find My Device network, you can use Google's Find My Device app on your Android device to locate it.
- After adding your finder to the Apple Find My network, you can use the Find My app on your iOS device to locate it.

Factory reset

1. Locate the button on the finder.
2. Double press the button. You will hear a beep.
3. Press and hold the button. After 5 seconds, the finder will start beeping once every second.
4. Continue to hold the button and release as soon as you hear a double beep.
5. If successful, the Finder will beep four times.

After resetting, you can link the finder to a different Google or Apple account. However, if you want to link it to a new Apple account, you must also remove it from its previous Apple account on your iOS device.

Disable the finder

1. Locate the button on the finder.
2. Double press the button. You will hear a confirmation beep.
3. Press and hold the button for 5 seconds. Release once you hear the Finder beep again.
4. If successful, the finder will beep twice.

Re-enable the finder

1. Locate the button on the finder.
2. Press the button once. You will hear the finder beep if successful.

Remove and re-pair the finder

Users can remove the finder from Google's Find My Device app on the Android device or the Find My app on the iOS devices. If the finder is within Bluetooth range of the Android/iOS device, it will automatically perform a factory reset upon receiving the command from the device. If the finder is out of Bluetooth range, the user should perform a factory reset on the finder either before or after removing it from the app (see the instructions for the factory reset). Regardless of whether the finder is within or out of Bluetooth range of your Android/iOS device, a factory reset is always recommended

To re-pair with an Android or iOS device, follow the instructions in "Get started with an Android device" or "Get Started with an iOS Device".

FCC Warning Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- **Reorient or relocate the receiving antenna.**
- **Increase the separation between the equipment and receiver.**
- **Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- **Consult the dealer or an experienced radio/TV technician for help.**

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.