 


ONEYA BABY

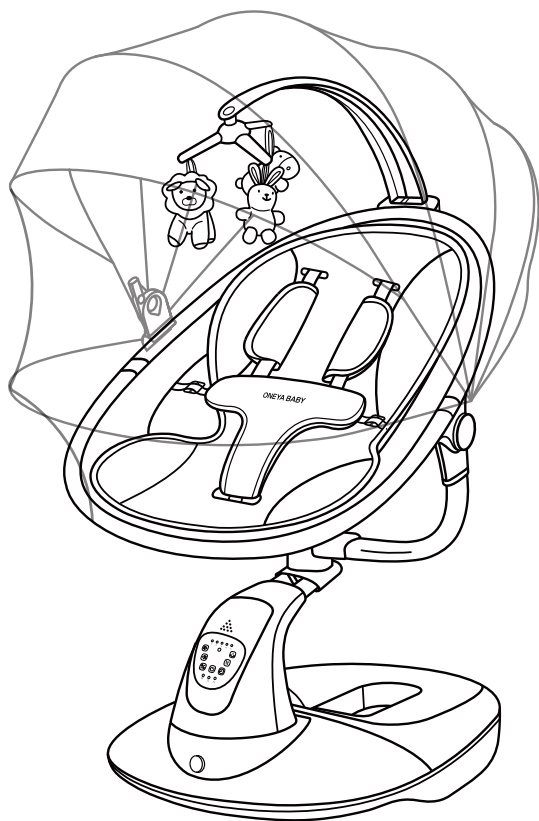

Baby Swing

User Manual

Model No.:8002

WARNING

**IMPORTANT! READ CAREFULLY AND
KEEP FOR FUTURE REFERENCE**

WARNING

FALL and STRANGULATION HAZARDS: Infants have suffered head injuries falling from swings and have strangled in straps.

- **ALWAYS** use the restraint system. Adjust to fit snugly.
- **STOP** using product when infant attempts to climb out (approximately 9 months).
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.
- **ALWAYS** place swing on floor. Never use on any elevated surface.
- **SUFFOCATION HAZARD:** Young infants have limited head and neck control. If the seat is too upright, infant's head can drop forward and compress the airway.
- **ALWAYS** keep swing seat fully reclined until infant is at least 4 months old AND can hold up head without help.
- This product can only be assemble and cleaned by adults.
- Dangers can be caused by using this product in any place higher than the ground, such as countertops, tables, stairs and other places higher up from the ground.
- The product shall not be used as a substitute for a crib or bed. If the child needs sleep, a suitable crib or bed should be used.
- Regularly check the rope socket, accessories and other parts of the adapter. If any damage is found, please stop using immediately.
- **Do not** use accessories or replacement parts not approved by the manufacturer.
- **Do not** use the toy bar to lift this product.
- Keep away from fire!

WARNING

- The electrical source terminals shall not be short-circuited.
- It is prohibited to use adapters which are not provided by this product to supply power.
- When using adapters, keep them away from children.
- Regularly check the rope socket, accessories and other parts of the adapter. If any damage is found, please stop using immediately.

WARNING

FALL HAZARD: Children have suffered head injuries falling from rockers.

- **ALWAYS** use restraints. Adjust to fit snugly.
- **NEVER** lift or carry baby in rocker.
[Rockers with a handle(s) intended for use to lift and carry a child are exempt from including this warning statement.]
- **STOP** using rocker when baby has reached 20 lb.
- The upright position is only for children who have developed enough upper body control to sit up without tipping forward.
- **ALWAYS** place rocker on floor. Never use on any elevated surface.
- **SUFFOCATION HAZARD:** Babies have suffocated when seats tipped over on soft surfaces.
- **NEVER** use on a bed, sofa, cushion, or other soft surface.
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.

WARNING

This product contains a button or coin cell battery.

A swallowed button or coin cell battery can cause internal chemical burns in as little as two hours and lead to death.

- Dispose of used batteries immediately.
- Keep new and used batteries away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

CAUTION

To prevent battery leaks, which can burn skin and eyes:

- Remove batteries when storing product for a long time.
- Dispose of used batteries immediately.
- Always replace the entire set of batteries at one time.
- Never mix old and new batteries, or batteries of different brands or types.

Product Tracking Label

Product Name: Baby swing

Model No.:8002

Standard: ASTM F2167-22 & ASTM F3084-23 &

ASTMF2088-22& 16CFR1223/F963-17CA.Prop 65lead/FCC
0-9 months(maximum loading weight is 20LB)

Made In China

Foshan Dapeng Zhanchi Trading Co., Ltd

Add: Room 868, Building 2, Guangfo E-commerce Mall, No. 18 Nansi
Road, Guicheng Street, Nanhai District, Foshan City

Manufacturer: Bebe Kingdom Plastic Products Co., Ltd

Add: Unit 2, No. 41, Yonghua Road, Xinsheng Village,
Xiaolan Town, Zhongshan City, Guangdong Province, China

US Importer: Oneyababy Global US.INC

Add: 3154 Glendale Blvd Suite 1035 Los Angeles CA 90039

Tel: +86 18123514060

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

 
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.


Parts

Please check the product list before use. If any missing, please contact us by Amazon seller service or after-sales email.


Take out all the parts from the package carton.

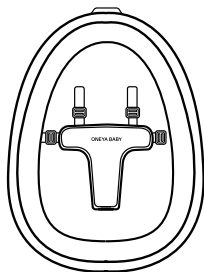


Seat Swing

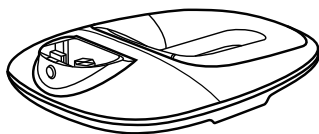 


Base Fittings

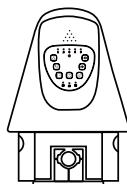 


Host

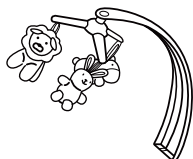 


Toy Bar

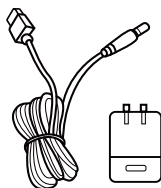 


Power Cord

 

Remote Control

 


Seat Support Frame

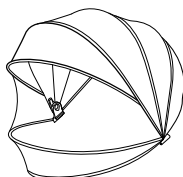 


Canopy

 1


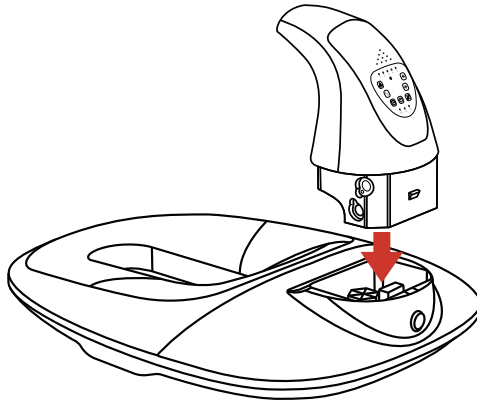


Host Installation: Align the host with the base and insert it downwards. The host will be in place only when you hear a "click" (Fig. 1).

 2

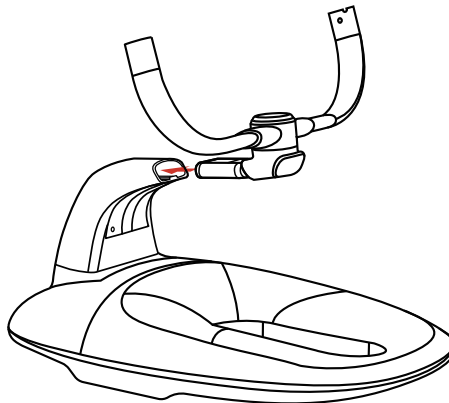


  Seat Support Frame Installation: Align and insert the support frame with the back of the host. It is in place when you hear a "click" (Fig. 2).

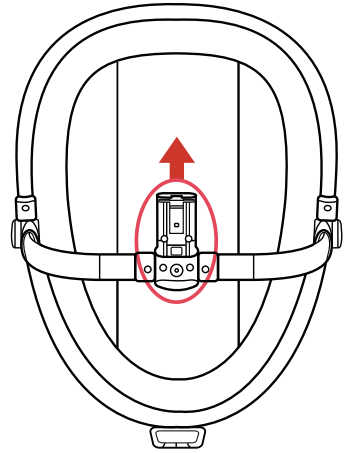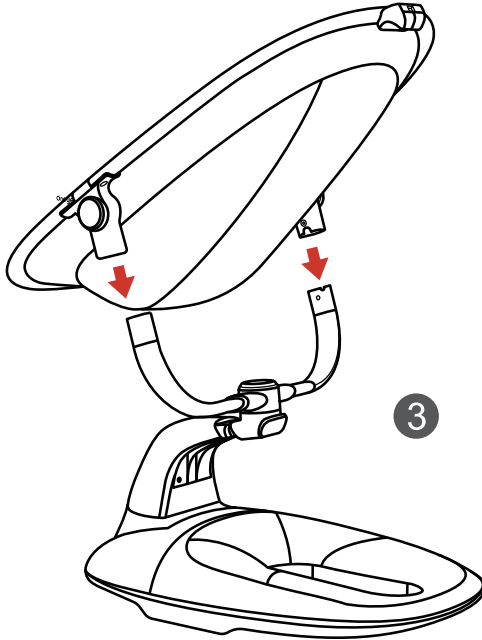


Attention: It is necessary to follow the direction indicated by the arrow

 Swing Seat Installation: Align and insert both sides of the swing seat with the seat support frame. The swing seat is installed in place when you hear a "click" and the tabs pop out (Fig. 3).

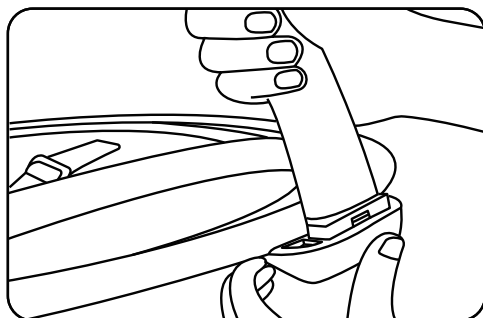


4

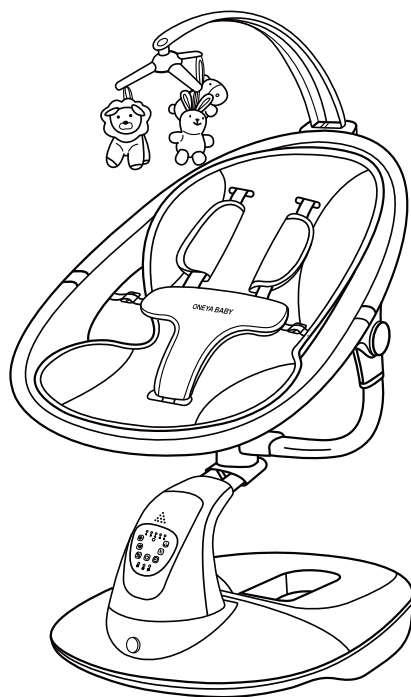 


5

Toy Bar Installation: Insert the toy bar into the swing seat support frame (fig. 4, 5).

 Canopy installation

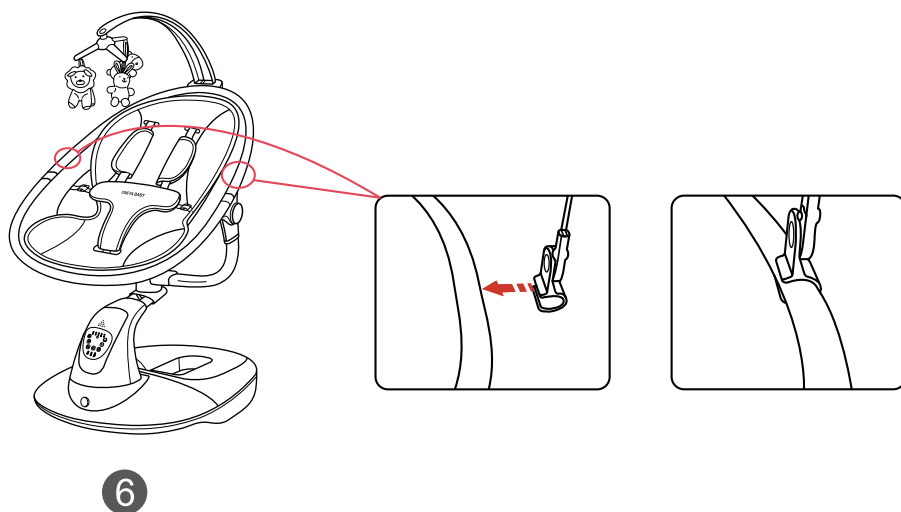


 First of all, align the plastic buttons on both sides of the canopy with the seat tube, and buckle them inward to hear a “click” sound indicating that the installation is in place (Figure 6).

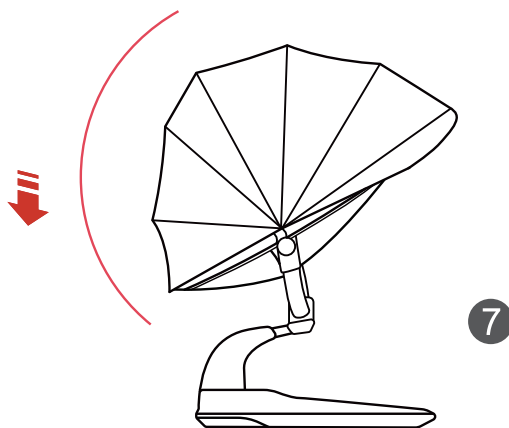


Canopy can be unfolded.(Figure 7).

 
How To Use Safety Belt

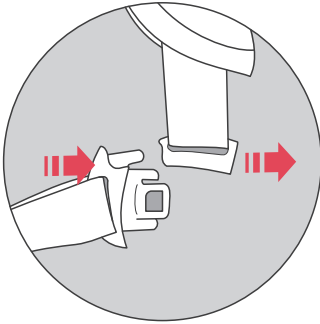


Assembly

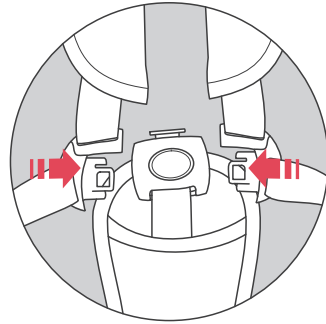 

Locking

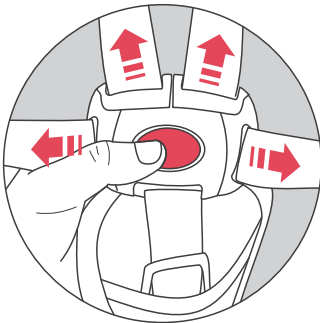 

Release

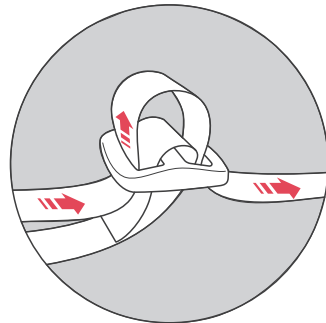 

Stretch/Shorten

 
 
Assembly: Insert the belt plug into the shoulder strap plug.

Locking: Insert the assembled plugs on the left and right sides into the buckle and lock it when you hear a "click".

Release: Press the button in the middle of the buckle to release the seat belt.


Stretch: Stretch the shoulder belt in the direction of the arrow and lock it.

Shorten: Stretch the shoulder belt in the opposite direction of the arrow and lock.

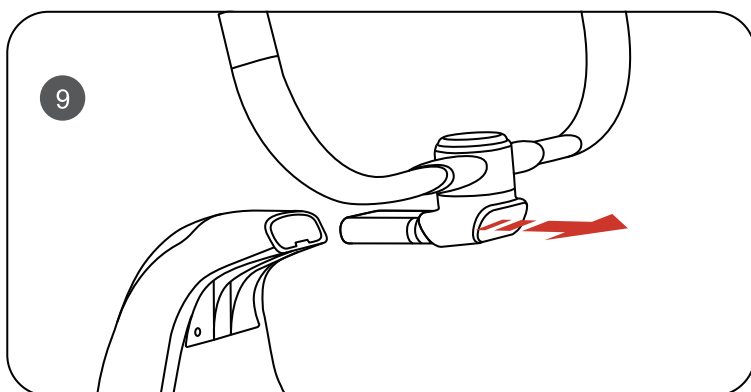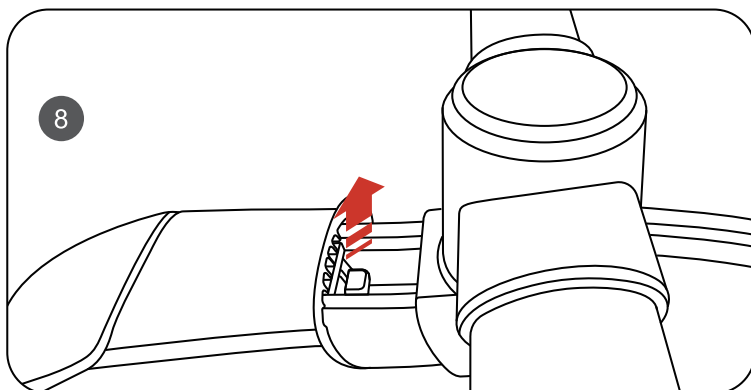


Seat Support Frame Disassembly: Press upward on the removal button in fig. 8 and pull it out (fig. 9).

 Seat Angle Adjustment

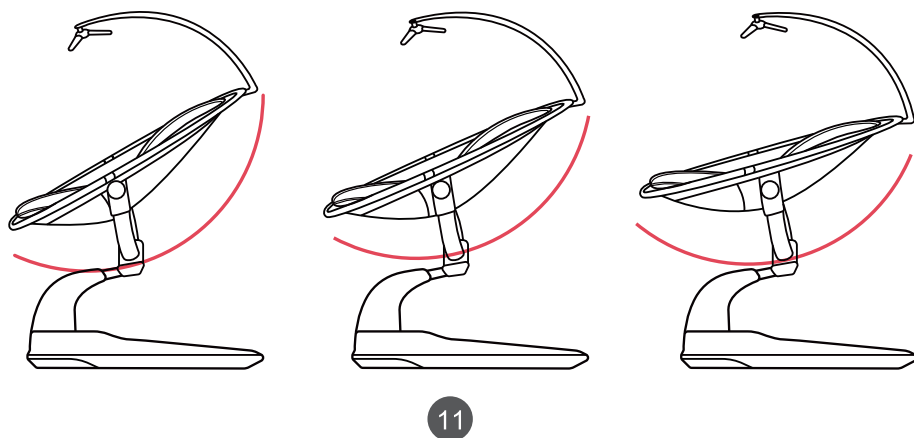


Seat Adjustment: Press and hold the buttons on both sides of the seat frame (fig. 10) at the same time to adjust three gears (fig. 11).

 Seat Rotation Adjustment

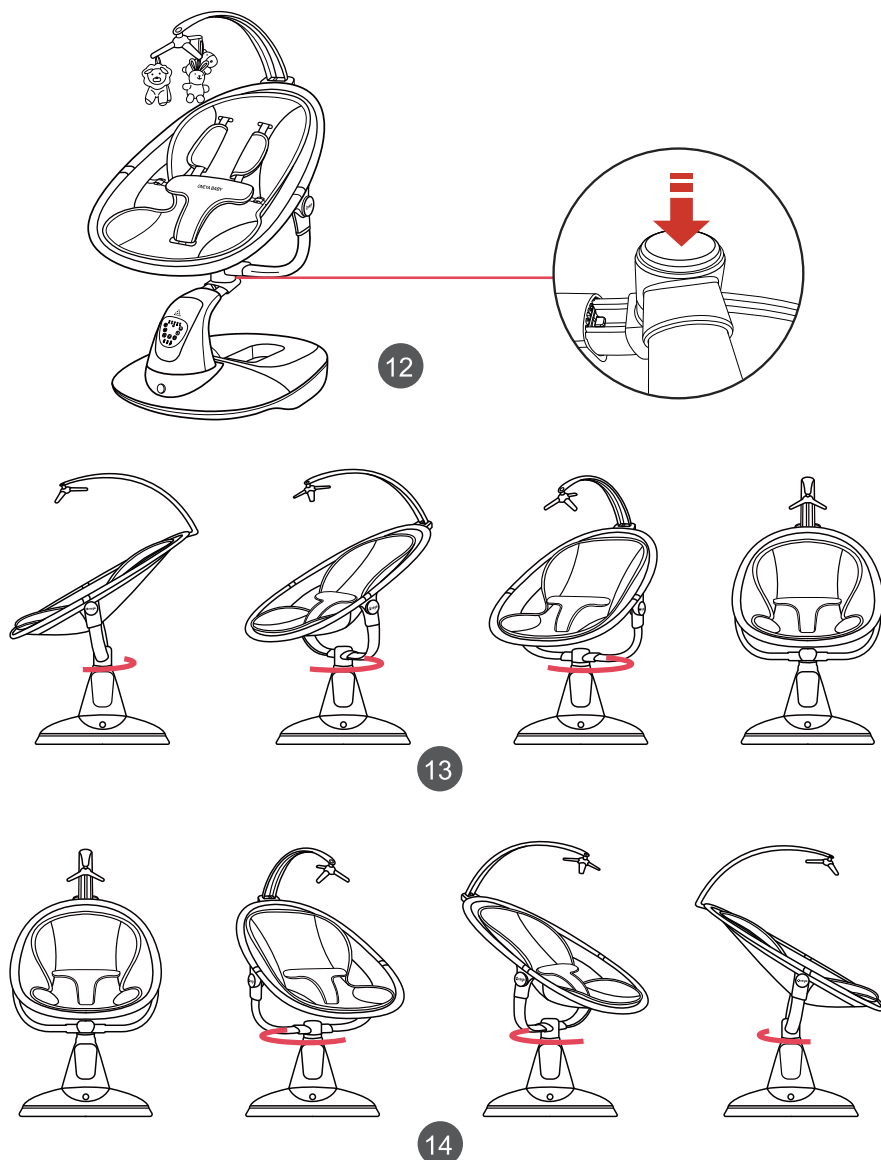


Seat Rotation Adjustment: Press and hold the button in the middle of the seat support frame in Fig. 12 to adjust three levels to the left or right (Fig. 13, 14).

 Power Cord

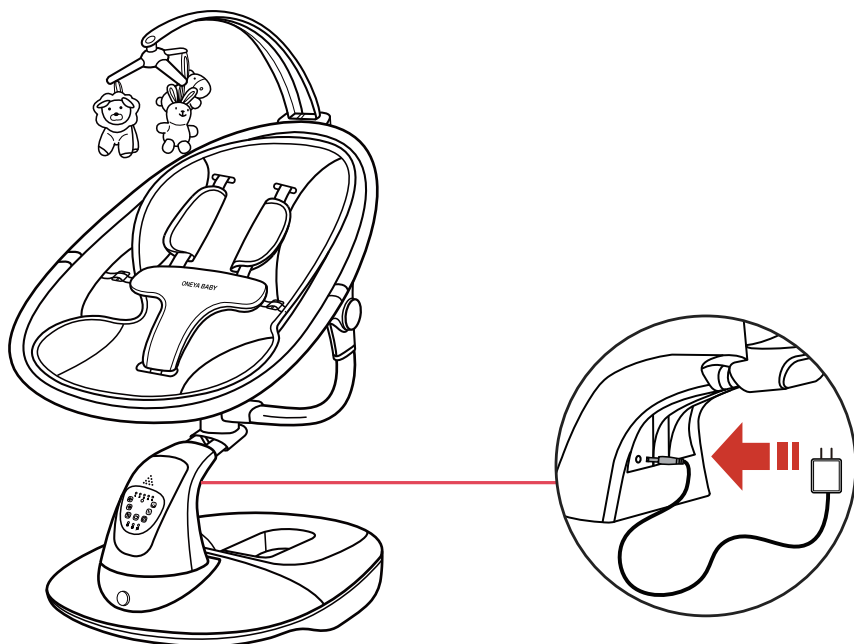


Insert the power cord into the power hole on the host and connect it to a household 110V power supply to work normally.

 
Power cord and Battery (Power supply mode 1)

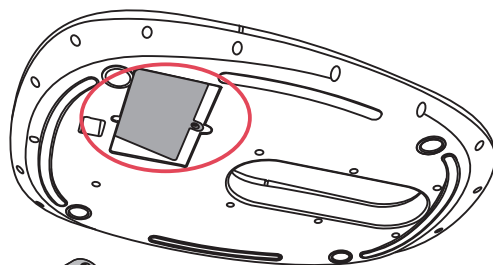

Battery Installation:

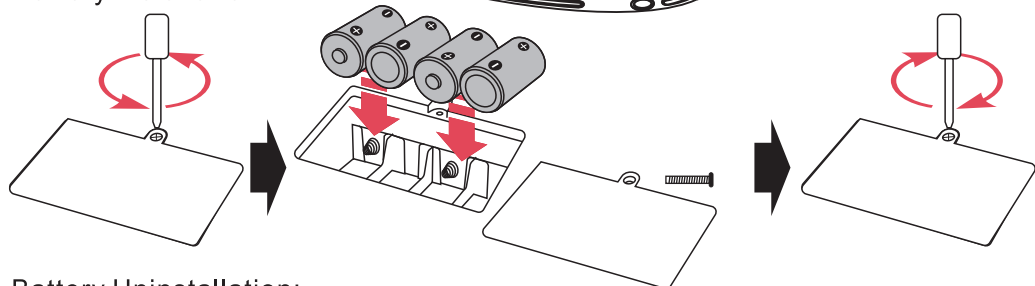 

Battery Uninstallation:

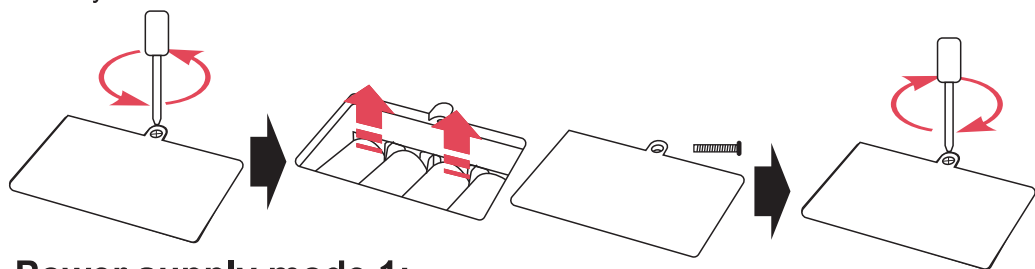 

Power supply mode 1:

Battery Installation:

Unscrew the battery cover at the bottom of the Swing Base with a cross screwdriver and remove it. Install 4PCS NO. D batteries in turn according to the positive and negative polarity indicated in the battery compartment, then put back the cover and tighten it with screwdriver again.

Battery Uninstallation:

 
Unscrew the battery cover at the bottom of the Swing Base with a cross screwdriver and remove it. Remove the 4PCS NO. D batteries one by one, then put back the cover and tighten it with screwdriver again.

⚠ CAUTION

To prevent battery leaks, which can burn skin and eyes:

- Always replace the entire set of batteries at one time.
- Never mix old and new batteries, or batteries of different brands or types.
- Remove batteries when storing product for a long time.
- Dispose of used batteries immediately.

Operating Baby Swing

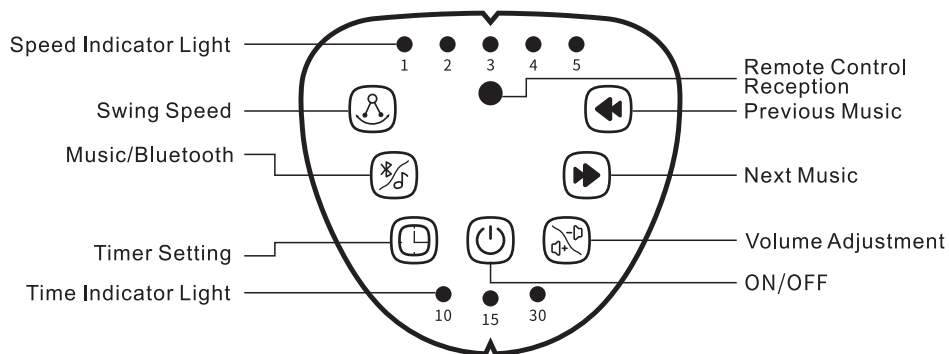

1. Power on the DC power source and insert the plug into the base and the "2" indicator light will shine and then go out, and the product will enter the standby mode.
 2. Press the "switch" button, the "2 gear indicator" is on, and then press the "off" (gear). If the boot is uncertain, the system will turn off after 90 minutes by default.
- Swing speed button, 5 speeds are adjustable, and the ongoing speed can be known through the indicator light.
 - Music/Bluetooth button, tap to play or pause, long press to turn Bluetooth ON or OFF.
 - Timer setting button, 3 timing modes: 10/15/30 minutes.
 - Volume adjustment button, press and hold to adjust the sound volume infinitely.
 - Previous music button, press once to switch to the previous music.
 - Next music button, press once to switch to the next music.

Care and Maintenance

Check your product regularly for loose screws, worn parts, torn materials or stitching. Replace or repair parts as needed.

- Keep this product in a cool dry place. If this product accidentally gets wet, wipe it with a dry cloth and allow it to air dry completely.
- Excessive exposure to direct sunlight or high temperatures may cause fabrics to fade or components to deform.
- To clean this product, wipe clean with a damp cloth and use soap and cold water only. Do not bleach. Do not immerse toys in water.
- The seat cover can be removed from the seat frame and hand washed in cold water or machine washable on a gentle cycle.

Warranty

We have purposely designed our high-quality product so that they can grow with both your child and your family. Because we stand by our product, our gear is covered by a custom warranty per product, starting from the day it was purchased. Please have the proof of purchase or order number, when you contact us.

Contact

oneyababy_shouhou@outlook.com
(or contact us by Amazon seller service)

IMPORTANT !
KEEP THESE
INSTRUCTIONS FOR
FUTURE REFERENCE!
READ CAREFULLY