 


## 受控文件

- 工艺要求:  
1. 材质: 双铜 (环保)  
2. 厚度: 157g  
3. 彩色印刷  
4. 骑马钉

封4

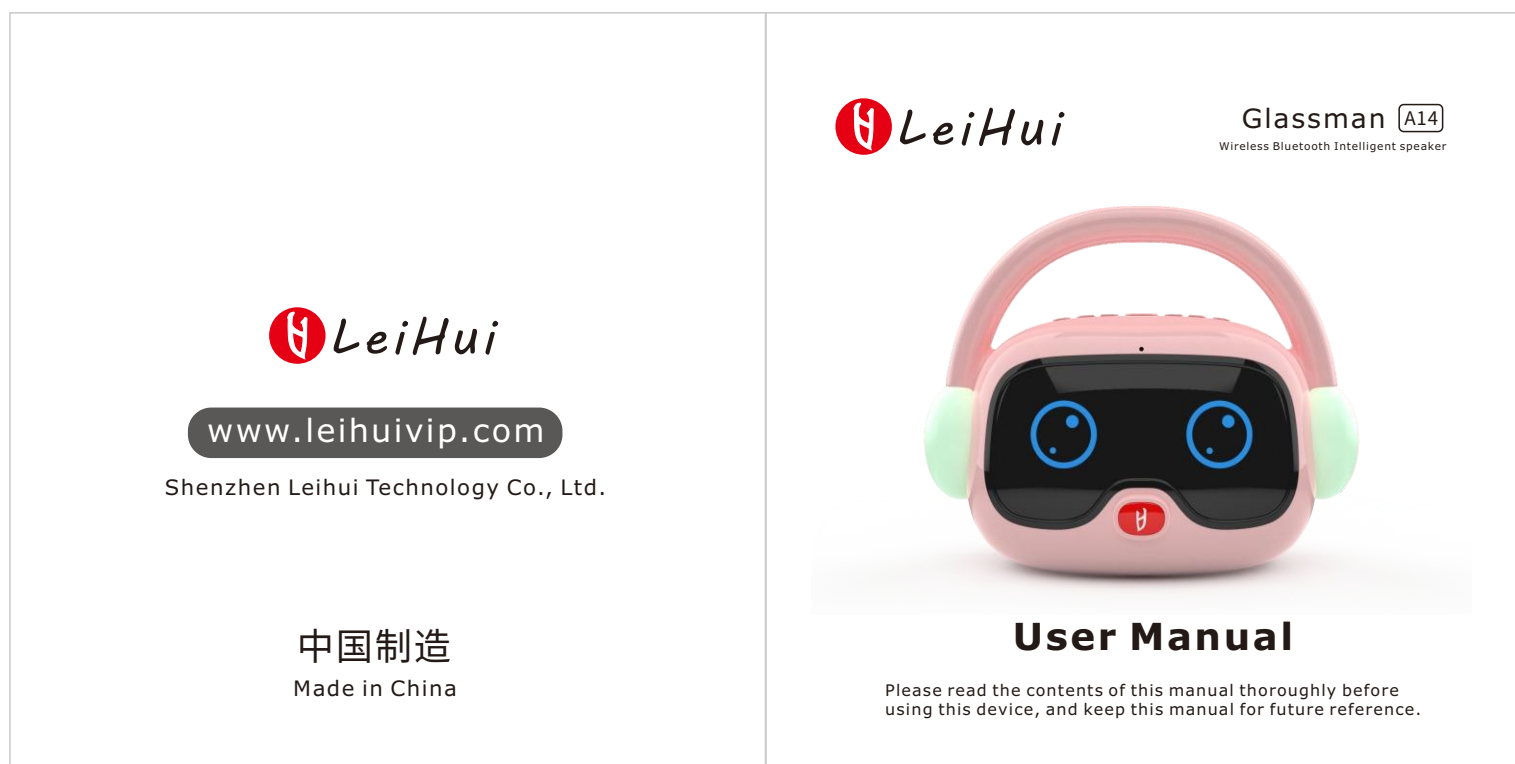

封1

**LeiHui** Glassman **A14**  
Wireless Bluetooth Intelligent speaker



## User Manual

Please read the contents of this manual thoroughly before using this device, and keep this manual for future reference.

封2

**All rights reserved. Copyright © Shenzhen Leihui Technology Co., Ltd. 2013-2023.**

No part or all of this manual may be reproduced or copied without prior written consent from our company. It is strictly prohibited to distribute it in any form without permission.

### Trademark Statement

The English text "LeiHui" along with the LH graphic "Ⓛ" are registered trademarks of our company in China. Other trademarks, product names, service names, and company names mentioned in this manual and the products described in this manual are the property of their respective owners. If there is any infringement, please contact us for correction. Please email the details to: [info@leihuivip.com](mailto:info@leihuivip.com).

### Disclaimer

The content in this manual is provided "as is." Unless otherwise required by applicable law, our company does not provide any express or implied warranties for the content in this manual, including, but not limited to, warranties of merchantability or fitness for a particular purpose.

 
### Export and Import Regulations

If you intend to export, re-export, or import the products described in this product manual, you are responsible for complying with applicable export and import control laws and regulations.

### Disclaimer

Certain features and functions of the products and their accessories described in this manual are provided for reference purposes only.

## Packing List

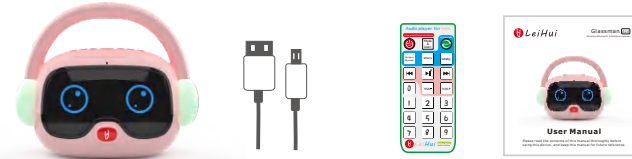

1. A14 machine x 1
2. USB-C charging cable x 1
3. IR remote control x 1
4. User manual x 1


Quality certificate is printed on the outer packaging box

## Functional Features

 1. Low power consumption Bluetooth V5.3 version.
2. Supports MP3 format only.
3. Supports reading content from categorized folders on TF cards (maximum support up to 32GB).
4. Four shortcut keys for quick access to four categories of folders (Nursery Rhymes, Story, Lullaby, User Music).
5. Use the numeric keys on the device to directly play specific tracks, allowing quick access even with a large number of contents.
6. Voice prompt operation for convenient use by the elderly and children.
7. High-fidelity full-range speaker with clear treble and rounded midrange.
8. Built-in large capacity lithium battery, rechargeable.

Page No. 01

## IR Function

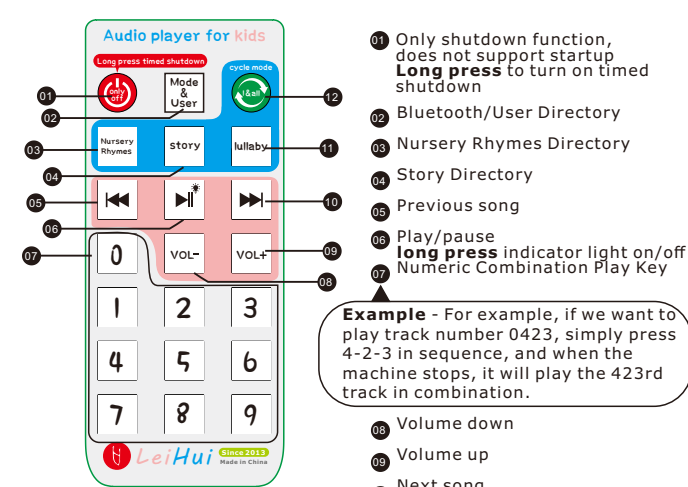

**Example** - For example, if we want to play track number 0423, simply press 4-2-3 in sequence, and when the machine stops, it will play the 423rd track in combination.


1. Only shutdown function, does not support startup
2. Bluetooth/User Directory
3. Nursery Rhymes Directory
4. Story Directory
5. Previous song
6. Play/pause
7. Long press indicator light on/off
8. Numeric Combination Play Key
9. Volume down
10. Volume up
11. Next song
12. Lullaby Directory
13. Single loop/Full loop

**Attention:**  
The transparent barrier of the battery needs to be removed before use.  
Page No. 02

## Specifications

 - Output Power: RMS 3.0W (THD+N=10%, f0=1KHZ)
- Signal-to-Noise Ratio: ≥70dB
- Total Harmonic Distortion (%): ≤1%
- Frequency Response: 100Hz-18KHz
- Audio Input Mode: Wireless Bluetooth, TF Card (default 8GB)
- Speaker: φ32mm 4Ω/2W+Bass compensation diaphragm
- Power Supply: Rechargeable Lithium Battery 1200mAh 3.7V
- Operating Temperature: 0°C to +50°C
- Product Dimensions: 185mm/230mm/140mm
- Net Weight: 0.59kg

## Product front and back schematic diagram

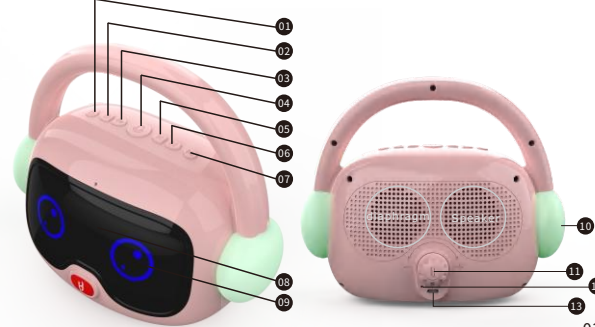

Page No. 03

## 01 Child Lock Switch Key

Short press - Enable child lock (all buttons are locked except the power button)

Long press - Disable child lock (all buttons regain their functionality)

## 02 Cycle Mode Button

Short press during loop mode - Single track loop mode/All sequential loop mode.

## 03 Timer Shutdown Button

Shutdown timer is on, shut down after 30 minutes/cancel

## 04 Directory switch Button/Bluetooth Mode Key

Short press - Cycle switch Directory (Nursery Rhymes/Story/Lullaby/User Music).

Long press - Enter Bluetooth pairing mode.

Notes: After switching to Bluetooth mode, the pairing name is "LeiHui-A14" and it is discoverable.

Long press - Play the last played MP3 file in the TF card's last played folder.

## 05 Previous Track Key

## 06 Next Track Key

## 07 Play/Pause/Indicator light KEY

During Bluetooth/TF card music playback: Short press - Play/Pause.

Long press - Turn on/off the indicator light.

## 08 IR Receiving Hole

Effective distance 10 meters

Page No. 04

## 09 Indicator Lights (eye)

When the machine is turned on and playing normally, the eye lights stay on for a long time

When entering Bluetooth pairing status, the eye light flashes; After successful pairing, the eye lights remain on for a long time

## 10 Indicator Lights (ear)

When the phone is turned on and playing normally, the ear color flashes and can also be turned off

## 11 Volume Up/Down/Power ON/OFF

The knob can be rotated 360 degrees and pressed

Long press 3seconds - Turn off/turn on Machine

Clockwise: volume up

Counterclockwise: volume down

## 12 Indicator Light Hole

Red Light - Charging in progress.

Green Light - Battery is fully charged.

## 13 Type-C Charging Port/Content Download

**Note:** The charger supports a maximum charging voltage and current of **DC5V 2A**. Exceeding this limit may damage the machine.

Steps for downloading content: First, power on the machine, then connect it to a PC. Once you hear the prompt sound, you can directly copy/delete files.

## Safety Warning

**Please use a charger produced by a legitimate manufacturer to charge this device. It is strictly prohibited to use high-power 9V/1.2V fast chargers for charging. Charging the device, especially while it is powered on, with an insufficiently rated charger can potentially pose serious safety hazards.**

封3

## Download instructions

Insert TF card, priority is given to playing MP3 music from the TF storage card.

The TF card must have the following 4 folder names:

**Children, Story, lullaby, User.**

Special note:  
1. Number key playback rule: Press the number keys in the order of MP3 file copying. It is not based on the ascending or descending order of the file names. Please use our provided TF card or consult for guidance. e-mail: [info@leihuivip.com](mailto:info@leihuivip.com)

2. Power off/disconnection will remember and save the last played track position, and resume playback from that track on the next power on.

3. The program is set to pause playback or automatically power off after 5 minutes of inactivity or no action, and a prompt will be given.

## Instructions for Use:

1. Long press the power button for 3 seconds to turn on the device. It will emit a startup sound to indicate successful power-on.

2. The maximum volume for music playback is level 30, and the default volume upon powering on is level 27.

3. By default, the device will play the last remembered track from the previous shutdown/power loss.

## Child Lock Function:

1. Short press the "Child Lock button" to hear the "Child lock activated" prompt. This indicates that only the child lock button is functional, and all other buttons are disabled except for the power on/off button. This prevents children from accidentally pressing other buttons.

2. Long press the "Child Lock button" to hear the "Child lock deactivated" prompt. This indicates that the child lock function is turned off, and all buttons are functional again.

Page No. 06

## Playing Categorized Content from TF Storage:

1. Insert a TF card containing MP3 format music into the corresponding port. The device will automatically start playing after reading the total number of tracks. (Note: The device supports TF cards with a maximum capacity of 32GB and a maximum bitrate of 320kpbs.)

2. During playback, short press the "Play/Pause button" to pause the music.

3. Short press the "Previous track button" to play the previous track, and short press the "Next track button" to play the next track.

4. To correspond to the buttons on the device and the function keys on the remote control, the TF card needs to have four folders in order to play content properly. The folder names are: "Nursery Rhymes", "story", "lullaby", and "User music".

## Bluetooth Function:

1. Long press the "Directory switch/Bluetooth Key" to hear the "Bluetooth mode" prompt, indicating that the Bluetooth is enabled and in pairing mode.

2. On your Bluetooth device, such as a mobile phone, enable the Bluetooth function and search for the device named "LeiHui-A14" (the pairing name of the device). Select and connect to "LeiHui-A14". After approximately 20 seconds, you will hear the "Pairing successful" prompt, indicating a successful connection. If the phone has previously connected to the device, it may automatically reconnect.

3. Open the music player on your mobile phone to play music through the device's speakers.

4. During playback, short press the "Play/Pause button" to pause the music.

5. Short press the "Previous track button" to play the previous track, and short press the "Next track button" to play the next track.

Page No. 07

## Charging Management:

1. When the device is powered on and the battery level is low, there will be an audible prompt to charge the device promptly. (If not charged in time, the device will enter sleep mode. It will power on again after a while and prompt for charging.)

2. Insert the DC 5V 1A power adapter into the "Type-C USB" port for charging. During charging, the red light on the back of the device will illuminate. After approximately 2-4 hours, the red light will turn off, green light will be on, indicating that the charging is complete.

## Important Notes:

1. Your device may generate slight heat during charging and use, which is considered normal. When cleaning your device, please ensure to turn off the power switch and disconnect all external connections.

2. Take good care of your device and accessories, and try to use them in a clean environment. Do not let them come into contact with flames or lit cigarettes.

3. Keep your device and accessories as dry as possible and avoid exposure to water and moisture.

4. Avoid dropping, throwing, or stepping on your device.

5. Use an anti-static cloth to clean your device. Do not use chemicals (such as alcohol, benzene, etc.), chemical detergents, or abrasive cleaning agents.

6. Do not place your device and accessories in excessively cold or hot areas.

7. Please use accessories approved by our company.

8. Do not disassemble your device without authorization, as it may void the free warranty service provided by our company.

**Note: Contains small parts that may pose a choking hazard. Not suitable for children under three years of age to use independently. Adult supervision is recommended when opening the packaging.**

Page No. 08

## FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Page No. 09