YM-300

Bluetooth Speaker

Product Manual

You can connect two YM-300 and virtually forge them into one speaker for a greater impact.

135mm

For TWS connection:

- Turn on both the speakers
 Press and hold on the "one of the two speakers for about 2 seconds until you

 Turn on both the speakers
 Press and hold on the speakers."
- After releasing"b", it may take a few more seconds for the speakers to connect

 Activate the phone's Bluetooth function and search for "YM-300"to establish pairing

Charging:

TWS:

- "YM-300" beeps once every 5 minutes when the battery is low. After three such
- indications, the spesker automatically turns off

 Use the provided charging cable to chargr the speaker
- When the speaker is charging, the LED indicator turns steadily red. When the speaker is fully charged, the indicator light is green

YM-300

Thank you for purchasing the YM-300. Please read this user manual carefully for any questions and difficulties. Please note that the play time depends on the selected volume level. The speaker supports Bluetooth wireless technology, TF card, USB2.0 and AUX audio cable function.

Frequency: 20Hz-20kHz

Play Time: 3-10 hours

Charging Time: 2-4.5 hours

Input Voltage: 5V/2.5A(MAX20W)

Output Power: 40W

Please avoid using the speaker while it is in charge as it may decrease the

Note:

Specifications:

Bluetooth Version: V5.3

Working Range: 10m

Water Resistance: IPX4

Power ON/OFF

Audio input:

Battery:

Sneaker Size: 25" x2 +3"

Speaker Type: Portable Wireless Speaker

4400mAh

BT/ TF/ AUX/ USB2.0

You may long press the power button to switch the speaker ON/OFF.

Package Contents

- Bluetooth Speaker x1
 TYPE-C Charging cable x1
- Standard audio cable x1 Product manual x1





Functions:

- Answer Incoming Calls: Short press the "▷" Button
- End Calls: Short press the "▷" Button
- Reject Incoming Calls: Long press the "D" Button
- Redial: Quickly press"▷"twice to call back the last call
- Switch Modes: Short press the M button to select modes(Bluetooth/AUX/ TF Card/USB2.0)
- . Volume Increase: Short press the" + "button in steps for increasing the volume
- Volume Decrease: Short press the" "button in steps for decreasing the volume
- · Play/Pause: Short press the">"to play or pause the tracks
- Previous Track: Long press the " "button for returning to the previous track • Next Track: Long press the" + "button for skipping to the next track
- RGB Function: Long Press M button for switch on and off RGB light, Double click
- on M button to switch between RGB light modes

- These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular
- Invokery, there is no goalantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following

- measures:

 --Reorient or relocate the receiving antenna.

 --Increase the separation between the device and receiver.

 --Connect the device into an outlet on a circuit different from that to which the
- --Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Bluetooth Connectivity:

 Turn the speaker on. Its LED indicator blinks white until the pairing is done Activate the phone's Bluetooth function and search for "YM-300". As soon as
the speaker gets selected and paired by you, the connection gets indicated

Note:

• If you are having connection troubles,then remove YM-300 from the list of paired devices on your phone, keep the phone closer to the speaker and try pairing again

AUX Mode:

- You can switch to AUX mode by using the AUX cable to connect the phone and the speaker, and then short pressing the M button
 • In AUX mode, you can control audio playback media through the device
- (cannot answer calls, and the speaker cannot control mobile phones)



Warning:

- Please charge the speaker according to the charging norms mentioned on packaging to protect the battery

- packaging to protect the battery to both or to disassemble the product
 Do not submerge the product find water
 Please keep this product safe from coming in contact with any liquid
 Dorft useystore this product in extreme temperatures
- · Please keep the product away from anything that generates heat, such as radiators, stoves, etc.
- In order to have hearing protection and an extended speaker life, avoid listening to songs on maximum volume
- . Don't try to dismantle/repair the product on your own.
- This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.