**M40****Instruction manual**

**One: Safety Instructions**

**Warning:** 1. Keep this product out of reach of children; it is not to be used as a toy. 2. Individuals with physical disabilities, mental impairments, or lacking relevant experience and knowledge should use this product under supervision and guidance of a guardian. 3. Do not disassemble the body to replace the battery; do not modify or repair this product without authorization. 4. Before charging, ensure that the voltage marked on the product matches the voltage of the charging source. 5. Do not charge the product unattended, and do not exceed a charging duration of 24 hours. 6. When not in operation, this product can be washed under a tap; ensure it is dry after cleaning. 7. Charge, store, and use the product within a temperature range of 5 to 35 degrees Celsius. 8. This product contains a built-in rechargeable battery; do not throw it into fire or charge, use, or store it at high temperatures.

**Two: Product Introduction**

Caution:  
1. This product is suitable for cleaning head and facial hair; do not press too hard while using.  
2. If the charging cable of this product is damaged or the device is not functioning properly, stop using it and replace the charging cable.  
3. Please use a charger that is purchased through official channels and certified by 3C, with a specification of 5V 1A/2A.  
4. Mild skin irritation may occur during shaving. It is recommended to use the shaver regularly.

**Three: Product Configuration**

1. Shaver head  
2. Shaver main body  
3. Charging cable  
4. Storage pouch  
5. Cleaning brush  
6. Instruction manual

**Four: How to Use**

1. Button function description: A short press turns the device on at speed level one, another short press switches to speed level two, a further short press turns the device off. 2. Camera function description: A short press to turn on the device will automatically activate WIFI and the camera light; When short press to the off state, the camera and WIFI will be turned off. 3. Charging function description: When the battery level is below 20%, a battery indicator light will appear to remind you to charge; a further short press turns the device off. 4. Cleaning function reminder display: After the device is used for 20 minutes, start to the off state, the camera and WIFI will be turned off.

**Five: Connecting to Product WiFi**

1. Scan the QR code or search for "hndvisual" in the app store, download the APP, and install the software  
2. Once installed, the following icon will appear: HND  
3. Long press the power button on the main unit for 3 seconds to turn it on  
4. Tap on the icon to search for WiFi  
5. Tap on the Wireless Local Area Network settings  
6. Connect to WiFi "KSA-XXX"

**Six: APP Interface**

1. Interface guide  
2. Battery level  
3. WiFi status and battery  
4. Cleaning reminder

**Seven: LED Display**

1. Motor speed  
2. Battery level  
3. WiFi status and battery  
4. Cleaning reminder

**Eight: Charging**

1. Before the first use, please charge the battery to 100%. 2. When the power is less than 20%, the battery percentage will be displayed. 3. When charging, connect the data cable to the shaver, and connect the other end to the power adapter. At this time, the battery percentage is blinking, indicating charging; When fully charged, the screen displays 100%. 4. Please do not put the product in the box when charging.

**Cleaning the Shaver**

1. Turn off the shaver before cleaning.  
2. To maintain optimal performance, regularly clean the shaver.  
3. For cleaning, detach the shaver head (illustration provided) and use a brush or soft cloth.  
4. Within 12 months of the day after you receive the product, if the product exhibits performance failure, it is recommended to contact the manufacturer for repair.  
5. If the problem cannot be resolved by following the above steps, please contact customer service. We will provide you with further solutions.


## Instructions for Multi-functional Shaver

**M40 Series**


A. Brush Cleaning: Use a brush to separately clean the stubble on the blade assembly and the rotating axis of the shaver body.

B. Rinse with Clean Water: Place the blade assembly and the rotating axis of the shaver body under a faucet separately and rinse them. After cleaning the stubble, make sure to remove any remaining water to keep the shaver dry. To maintain good shaving performance, it is recommended to replace the blade assembly every six months.

### Cleaning Method as shown in the following Images:

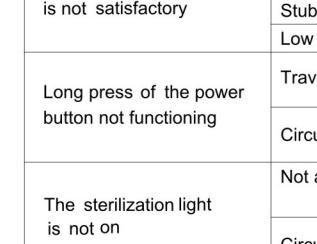

Brush Cleaning

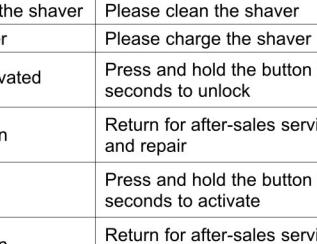

Rinsing with Clean Water

Note: Splash-proof, water-resistant, and dust-proof functions are not permanently effective. Protective performance may decrease due to daily wear and tear, and damage caused by immersion in liquids is not covered under the warranty.

## Nine: Troubleshooting One

| Symptoms                                       | Causes                   | Solutions   |
|--|--------------------------|---|
| Shaving performance is not satisfactory        | Blade wear or damage     | Please replace with a dedicated shaving head        |
| Stubble clogging the shaver                    | Please clean the shaver  |   |
| Low battery power                              | Please charge the shaver |   |
| Long press of the power button not functioning | Travel lock is activated | Press and hold the button for 5-7 seconds to unlock |
|  | Circuit malfunction      | Return for after-sales service and repair           |
| The sterilization light is not on              | Not activate             | Press and hold the button for 3 seconds to activate |
|  | Circuit malfunction      | Return for after-sales service and repair           |

## Nine: Troubleshooting Two

| Symptoms                        | Causes   | Solutions   |
|---------------------------------|--|---|
| Charging indicator light not on | No power supply connected                      | Connect the power cord for charging                 |
|                                 | Indicator light damaged                        | Return for after-sales service and repair           |
| Excessive charging time         | Long press of the power button not functioning | Press and hold the button for 5-7 seconds to unlock |
|                                 | Circuit malfunction                            | Return for after-sales service and repair           |
| Skin irritation after shaving   | The sterilization light is not on              | Press and hold the button for 3 seconds to activate |
|                                 | Circuit malfunction                            | Return for after-sales service and repair           |

## Ten: Environmental Protection

When the shaver reaches the end of its life, according to the laws and regulations of the country or region, it may be necessary to remove the internal battery for proper recycling. If you are unable to remove the battery, please take the product to a government-designated recycling center.

## Eleven: After-Sales Service and Support

 
1. Within 7 days from the day after you receive the product, if the product exhibits performance failure listed in this manual and confirmed by our company's after-sales service center, you can enjoy free return or exchange services.

2. Within one year from the day after you receive the product, if the product exhibits performance failure listed in this manual and confirmed by our company's after-sales service center, you can enjoy repair services.

## Twelve: Parameters

Product name: Multi-functional shaver  
Product model: M40  
Power: 2.5W  
Operating voltage: 3.7V  
Charging voltage: 5V  
Working current: 1A  
Implementation standard: GB4706.1-2006 GB7009-2008  
What's in the Box:  
Shaver x 1, User Manual x 1, Charging Cable x 1, Cleaning Brush x 1, Storage Pouch x 1

Note: This product can only be flushed with water, not salt water, such as the quality caused by soaking water does not belong to the scope of after-sales.



## FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help important announcement

### RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.